

 Wireless Charging User manual DERAX CARD 38.181.90 	SPECIFICATIONS • Battery: Rechargeable 100mAh Li-ion • Working Voltage: 5V • Wireless Input: 2W Charging Find card To recharge the Find card, place the card with the wireless charging symbol on a wireless charger. The card will recharge within 30 minutes. After charging, remove the card. Important: DO NOT LEAVE THE CARD ON THE CHARGER LONGER THAN NECESSARY. Use only certified wireless chargers to recharge it. 1. Product Overview 	2. Power On/Off 2.1 Power On: If the device is in shutdown hibernation mode, hold down the key for 5 seconds. The device will sound a tone, and the indicator will blink 3 times. After powering on, the device will enter pairing mode, which will time out after 10 minutes. 2.2 Device Status Confirmation: Double-click the device button twice. If the device is not paired with the search app, it will sound a prompt tone. When paired and connected, the device beeps once, and the LED blinks 3 times. If paired but not (maximum) current draw. If there is no sound, the device is in sleep mode. Press the button for 5 seconds to turn it on. 2.3 Re-entering Pairing Mode: After the pairing mode times out, the device will emit a prompt tone and blink the indicator 6 times. If it is not re-paired within 10 minutes, it will exit pairing mode. To re-pair, click the device button once; it will sound a prompt tone, and the indicator will blink once, entering pairing mode. 2.4 Querying the Serial Number: Press the key six times within two seconds. The device emits a prompt tone and the LED blinks six times, entering the serial number reading state.	2.5 Restoring Factory Settings: After powering on, doubleclick the device key. The device will emit a prompt tone and blink the indicator three times. After hearing the tone, press and hold the key for about 8 seconds until it sounds again and the indicator flashes 3 times, then release the button. The factory settings will be restored. 2.6 Entering Shutdown Sleep Mode: When the device is on, press the key five times within two seconds. The device will play a prompt tone and the LED will blink three times, entering sleep mode. 2.7 Power off: Quickly double-click the device button – you will hear a confirmation sound. Then quickly press it three times, and on the third press, hold it until you hear two beeps, indicating that the device is powered off. 3. Check for Updates To use the Apple Find My app to locate the item locator, the latest version of iOS, iPadOS, or macOS is recommended. The Find My app on Apple Watch requires the latest version of watchOS. 4. Add Your Locator 4.1 Start the App: Open the Find My app on your supported iPhone or iPad.
--	--	--	---

4.2 Allow Notifications: Enable notifications from the app. 4.3 Connect Your Locator: Power on your Locator, select the "Items" tab, then tap the "Add Item" tab, and tap "Other Supported Items." 4.4 Pairing: Ensure your Item Locator is close to your phone. Wait until you see the pop-up "DERAX CARD" then tap "Connect." 4.5 Naming Your Locator: Choose a recognizable name and emoji for your Item Locator and tap "Continue." 4.6 Confirm Addition: Find My will ask for confirmation to add your Locator to your Apple ID-tap "Continue." 4.7 Complete Setup: Tap "Finish" and your Locator will be set up and ready to be connected to the item you wish to locate, e.g., your keys. 4.8 Unwanted Tracking Detection: If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1) If you have a iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.	2) If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound. 5. Locate Your Item When your item is nearby, tap "Play Sound" to make your Locator beep, helping you find it. If it is out of range, you can find the Locator's Last Known Location. 6. Notifications You will receive a notification when you leave your Locator behind and it's no longer in range of your device. Note: "Notify When Found" can only be activated when your Locator is out of range. 7. Share Items People you've shared with will be able to locate it, and they won't receive unidentified tracking notifications. To use Share Items, ensure you and your friends have installed the iOS 17, iPadOS 17, or macOS 14 Sonoma public betas or newer. 8. Lost Mode When your item is lost, enable Lost Mode. You will receive a notification when the location becomes available.	You can leave a phone number or email address for the finder to contact you. Note: When "Lost Mode" is enabled, your Locator is locked, and no one else can pair with it. DO NOT REMOVE THE ITEM in the app; otherwise, your Item Locator will be locked and cannot be used by anyone else. 9. Remove Item Ensure your item is nearby to remove it in the app. It should make a ring-chime indicating it was successfully removed, allowing the item to be used by others. Note: When "Lost Mode" is enabled, DO NOT REMOVE THE ITEM in the app; otherwise, your Item Locator will be locked and cannot be paired with anyone else. 10. Factory Reset When your item is out of range of your phone and your Locator is removed from the Find My app, the device cannot be used by others. You need to reset your Locator for it to be usable again. To restore factory settings: Press the function button twice to hear one beep, then press the function button four times rapidly and hold it a fifth time until you hear a ring-chime. The device is now reset and can be paired to a new Apple ID account as a new device.	The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®. To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. ⚠ WARNING • INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause internal chemical burns as little as 2 hours  
--	--	--	--

 Wireless Charging Uputstvo DERAX CARD 38.181.90 	SPECIFIKACIJE • Baterija: Punjiva Li-ion baterija, 100 mAh • Radni napon: 5V • Bežični ulaz: 2W Punjenje Find kartice Da biste napunili Find karticu, postavite je sa simbolom za bežično punjenje okrenutim ka bežičnom punjaču. Kartica će se napuniti za oko 30 minuta. Nakon punjenja, uklonite karticu sa punjača. Važno: NE OSTAVLJAJTE KARTICU NA PUNJAČU DUŽE NEGO ŠTO JE POTREBNO. Koristite isključivo sertifikovane bežične punjače za punjenje. 1. Product Overview 	2. Uključivanje/Isključivanje uređaja 2.1 Uključivanje uređaja: Ako je uređaj u stanju hibernacije (isključen), držite taster pritisnut 5 sekundi. Uređaj će emitovati zvučni signal, a indikator će treptati 3 puta. Nakon uključivanja, uređaj automatski ulazi u režim uparivanja, koji traje 10 minuta pre isteka. 2.2 Provera statusa uređaja: Dvostruko brzo pritisnite taster na uređaju. Ako uređaj nije uparen sa aplikacijom za pronalaženje, oglasit će se zvučni signal. Kada je uparen i povezan, uređaj će zazvučati jednom, a LED lampica trepnuće 3 puta. Ako je uređaj uparen, ali nije povezan, i nema zvuka, verovatno je u režimu spavanja. Držite taster pritisnut 5 sekundi da biste ga uključili. 2.3 Ponovni ulazak u režim uparivanja: Kada istekne režim uparivanja, uređaj će emitovati zvučni signal i indikator će treptati 6 puta. Ako u narednih 10 minuta ne dode do ponovnog uparivanja, uređaj će izaći iz režima uparivanja. Za ponovno uparivanje, pritisnite taster jednom – uređaj će emitovati zvučni signal, a indikator će trepnuti jednom, i time ući u režim uparivanja. 2.4 Očitavanje serijskog broja: Pritisnite taster šest puta u roku od dve sekunde. Uređaj će emitovati zvučni signal, a LED indikator će treptati 6 puta, ulazeći u režim očitavanja serijskog broja.	2.5 Vraćanje na fabrička podešavanja: Nakon uključivanja uređaja, dvaput brzo pritisnite taster. Uređaj će emitovati zvučni signal i indikator će trepnuti 3 puta. Nakon što čujete ton, držite taster pritisnut oko 8 sekundi, dok se ponovo ne ogłosi ton i indikator ponovo trepne 3 puta, zatim otpustite taster. Uređaj će biti vraćen na fabrička podešavanja. 2.6 Ulazak u režim spavanja (isključeno stanje): Dok je uređaj uključen, pritisnite taster 5 puta u roku od 2 sekunde. Uređaj će emitovati zvučni signal, a LED lampica trepnuće 3 puta, čime se uređaj prebacuje u režim spavanja. 2.7 Isključivanje uređaja: Brzo dvaput dvokliknite dugme na uređaju – čućete potvrđujući zvuk. Zatim ga brzo pritisnite tri puta, i prilikom trećeg pritiska ga zadržite dok ne čujete dva "bipa", što označava da je uređaj isključen. 3. Provera ažuriranja Za korišćenje Apple Find My aplikacije za pronalaženje lokatora, preporučuje se najnovija verzija iOS-a, iPadOS-a ili macOS-a. Za korišćenje aplikacije Find My na Apple Watch-u potrebna je najnovija verzija watchOS-a. 4. Dodavanje vašeg lokatora 4.1 Pokretanje aplikacije: Otvorite aplikaciju Find My na svom podržanom iPhone-u ili iPad-u.
---	---	--	--

4.2 Dozvola za obaveštenja: Omogućite primanje obaveštenja iz aplikacije. 4.3 Povezivanje vašeg lokatora: Uključite lokator, otvorite karticu „Items“ (Stavke), zatim dodirnite „Add Item“ (Dodaj stavku), pa „Other Supported Items“ (Ostali podržani uređaji). 4.4 Uparivanje: Uverite se da je vaš lokator blizu telefona. Sačekajte da se pojavi iskačuci prozor „DERAX CARD“, zatim dodirnite „Connect“ (Poveži). 4.5 Dodeljivanje imena lokatoru: Izaberite prepoznatljivo ime i emoji za svoj lokator, pa dodirnite „Continue“ (Nastavi). 4.6 Potvrda dodavanja: Aplikacija Find My će tražiti potvrdu za dodavanje lokatora na vaš Apple ID – dodirnite „Continue“ (Nastavi). 4.7 Završi podešavanje: Dodirnite „Finish“ (Završi) i vaš lokator će biti spreman da se poveže sa predmetom koji želite da pratite (npr. ključevi). 4.8 Detekcija neželjenog praćenja: Ako bilo koji uređaj iz Find My mreže koji je odvojen od svog vlasnika bude primećen da se kreće s vama tokom vremena, bićete obavešteni na jedan od dva načina: Ako koristite iPhone ili iPad, aplikacija Find My će vam poslati notifikaciju (funkcija dostupna na iOS/iPadOS 14.5 ili novijem). Ako nemate iOS uređaj, uređaj će emitovati zvučni signal ako se kreće bez vlasnika duže vreme.	2) Ako nemate iOS uređaj ili pametni telefon, Find My datak koji se ne nalazi uz svog vlasnika duže vreme emitovaće zvučni signal kada se pomeri. 5. Pronađite svoj predmet Kada je vaš predmet u blizini, dodirnite „Play Sound“ (Pusti zvuk) kako bi lokator zazvonio i pomogao vam da ga pronađete. Ako je van dometa, možete videti njegovu poslednju poznatu lokaciju. 6. Obaveštenja Dobijate obaveštenje kada ostavite svoj lokator i on više nije u dometu vašeg uređaja. Napomena: Opcija „Notify When Found“ (Obavesti kada se pronađe) može se aktivirati samo kada je lokator van dometa. 7. Deljenje uređaja Osobe sa kojima ste podelili lokator moći će da ga lociraju i neće dobiti obaveštenja o neidentifikovanom praćenju. Da biste koristili funkciju Share Items (Deli stavke), uverite se da vi i vaši prijatelji imate instaliran iOS 17, iPadOS 17 ili macOS 14 Sonoma ili noviju verziju. 8. Režim izgubljenog uređaja Kada izgubite predmet, aktivirajte Lost Mode (Izgubljeni režim). Dobićete obaveštenje čim lokacija postane dostupna.	Možete ostaviti broj telefona ili email adresu kako bi vas pronašla osoba koja nađe predmet. Napomena: Kada je uključen "Režim izgubljenog" (Lost Mode), vaš Locator je zaključan i niko drugi ne može da ga poveže. NEMOJTE UKLANJATI PREDMET u aplikaciji, u suprotnom, vaš Locator će biti zaključan i neće ga moći koristiti niko drugi. 9. Uklanjanje predmeta Proverite da je predmet blizu da biste ga uklonili u aplikaciji. Trebalo bi da se ogłosi zvučni signal koji pokazuje da je uspešno uklonjen, što omogućava da predmet koristite drugi. Napomena: Kada je uključen "Režim izgubljenog", NEMOJTE UKLANJATI PREDMET u aplikaciji; u suprotnom, vaš Locator će biti zaključan i neće moći da se poveže ni sa kim drugim. 10. Vraćanje na fabrička podešavanja Kada je predmet izvan dometa vašeg telefona i vaš Locator je uklonjen iz aplikacije Find My, uređaj ne može koristiti niko drugi. Potrebno je da resetujete Locator da bi ponovo mogao da se koristi. Za vraćanje na fabrička podešavanja: Pritisnite funkcijski taster dva puta da biste čuli jedan zvučni signal, zatim pritisnite funkcijski taster četiri puta brzo, i držite ga peti put dok ne čujete zvučni signal. Uređaj je sada resetovan i može se povezati sa novim Apple ID nalogom kao novi uređaj.	Apple® Find My® mreža pruža jednostavan i bezbedan način da pronađete kompatibilne lične predmete pomoću aplikacije Find My na vašem iPhone®-u, iPad®-u, Mac®-u ili pomoću aplikacije Find Items na Apple Watch®-u. Za korišćenje aplikacije Apple Find My radi pronalaženja ovog predmeta preporučuje se najnovija verzija iOS, iPadOS ili macOS operativnog sistema. Aplikacija Find Items na Apple Watch-u zahteva najnoviju verziju watchOS-a. Oznaka „Works with Apple“ znači da je proizvod posebno dizajniran da radi sa tehnologijom naznačenom u oznaci i da je proizvođač potvrdio da proizvod ispunjava tehničke specifikacije i zahteve Apple Find My mreže. Apple nije odgovoran za rad ovog uređaja, njegovu upotrebu niti usklađenost sa bezbednosnim i regulatornim standardima. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS i watchOS su zaštićeni znaci kompanije Apple Inc. iOS je žig ili registrovani žig kompanije Cisco u SAD i drugim zemljama, i koristi se pod licencom. ⚠ UPOZORENJE • OPASNOST OD GUTANJA: Ovaj proizvod sadrži dugmaste ili novčičaste baterije. • SMRT ili ozbiljne povrede mogu nastati ako se proguta. • Progutana dugmasta ili novčičasta baterija može izazvati unutrašnje hemijske opekotine već za 2 sata.  
--	--	--	---