 


USER MANUAL
EDISON 10PD 35W 38.216.10

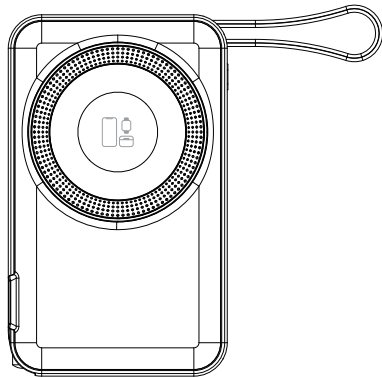 


It is recommended to read this user manual carefully and keep it for future reference.

Product introduction

Congratulations on your 35W Universal Charger. Please read this manual carefully before use to ensure proper operation and safety.

PRODUCT OVERVIEW:

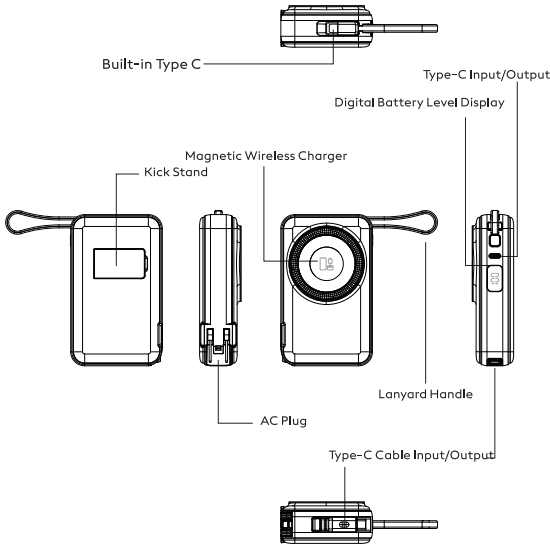

Product parameters:

Material: ABS+PC fireproof	Retractable Type-C Cable input: DC 5V~12V 18W Max
Capacity: 10000mAh (3.85V, 38.5Wh)	Retractable Type-C Cable output: DC 5V~15V 35W Max
AC Input: 100~240V~50/60Hz, 0.3A Max	Built-in Type-C Cable output: DC 5V~2A 10W Max
Type-C Input: DC 5V~12V 18W Max	Wireless Output: 5W/7.5W/10W/15W Max
Type-C output: DC 5V~15V 35W Max	iWatch and Earbuds Wireless Output: 2.5W Max
Adapter Mode Output: 10W Max	Size: 116.8 x 71 x 32mm
Total Sharing Output: 15W Max	

Product includes:

35W Universal Charger x1
User Manual x1

Optional accessories:
AU Adapter plug x1
EU Adapter plug x1
UK Adapter plug x1

User guide:



Charging & recharging:

Charging your device:

Before first use, please fully charge the power bank. Then, select one of the following charging methods and connect your device:

1. Retractable Type-C Cable
2. Built-in Type-C Cable
3. Type-C Port
4. Wireless Charger (Supports iWatch & TWS Earbuds charging)

Special Note:

Depress power button for 3-5s to enter low-current mode for charging low-power devices (e.g., iWatch, Earbuds).

Note: If no device is detected after activation, the mode will auto-turn off after 2 hours. Re-enter by long-pressing the button for low-power charging.

Charging the power bank:

You can charge the power bank using the built-in AC plug or an optional charging cable (not included).

1. Using the Built-in Plug
Pull out the built-in AC plug from the power bank. If needed, attach one of the included regional adapter plugs (UK, EU, AU).
Ensure you hear a “click” to confirm the adapter is securely attached. Then, plug it into a wall socket.

2. Using a Charging Cable

Connect one end of a charging cable to the USB-A or Type-C port of a power adapter. Plug the other end into the Type-C input port of the power bank.

3. Using the Built-in Type-C Cable
Pull out the retractable cable and connect it to the Type-C port of a power adapter. Charging will begin automatically.

 
Checking the battery level:

1. Check Battery Status:
Quickly press the power button. The current battery percentage will appear on the digital display.
2. Turning Off the Display:
Double-click the power button, or wait for about 30 seconds of inactivity. The display and power will automatically turn off.

Warning:

- This power bank is not a toy. Keep it out of reach of children.
- Do not expose the power bank to direct sunlight or extreme heat for extended periods.
- Do not submerge the power bank in water or allow it to get wet.
- Keep away from fire and other high-temperature sources.
- Avoid contact with harsh chemicals or corrosive substances.
- Do not use the power bank if it is damaged or has been modified.
- Do not insert foreign objects into any openings or ports.
- Do not disassemble, repair, or open the power bank under any circumstances.

KORISNIČKO UPUTSTVO
EDISON 10PD 35W 38.216.10

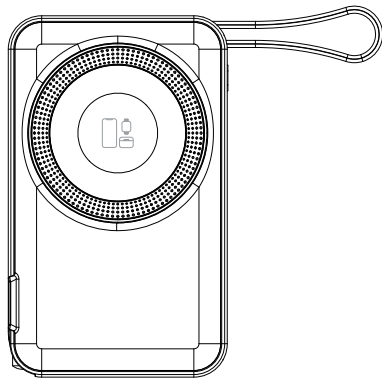


Preporučuje se da pažljivo pročitate
ovo uputstvo i sačuvate ga za buduću upotrebu.

Uvod

Čestitamo na kupovini vašeg 35W univerzalnog punjača. Molimo Vas da pažljivo pročitate ovo uputstvo pre upotrebe kako biste obezbedili pravilno korišćenje i bezbednost.

 PRODUCT OVERVIEW:

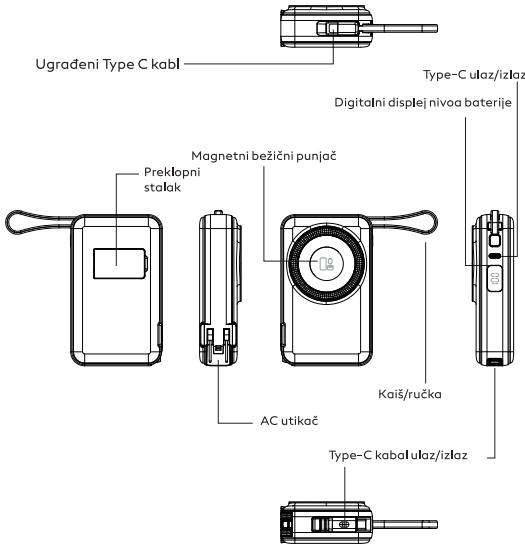

Parametri proizvoda

Materijal: ABS+PC, vatrootporno	Ulaz kabla naizvlačenje (Type-C): DC 5V-12V 18W Maks.
Kapacitet: 10000 mAh (3,85V, 38,5 Wh)	Izlaz kabla naizvlačenje (Type-C): DC 5V-15V 35W Maks.
AC ulaz: 100-240V~50/60Hz, 0.3A Maks.	Izlaz ugrađenog Type-C kabla: DC 5V-2A 10W Maks.
Type-C ulaz: DC 5V-12V 18W Maks.	Bežični izlaz: 5W/7.5W/10W/15W Maks.
Type-C izlaz: DC 5V-15V 35W Maks.	Bežični izlaz za iWatch i slušalice: 2.5W Maks.
Adapter režim rada: 10W Maks.	Dimenzije: 116.8 x 71 x 32mm
Ukupna izlazna snaga: 15W Maks.	

Sadržaj pakovanja:

35W univerzalni punjač x1
Korisničko uputstvo x 1

Opcionalni pribor:
AU Adapter utikač x1
EU Adapter utikač x1
UK Adapter utikač x1

User guide:



Zidni punjač



Punjač za
iWatch



Punjač za
slušalice



Preklopni
stalak



Eksterna
baterija



Punjač za
telefon

Punjenje i dopunjavanje:

Punjenje Vašeg uređaja:

Pre prve upotrebe, potpuno napunite power bank. Zatim izaberite jedan od sledećih načina punjenja ipovežite uređaj:

1. Uvlačivi Type-C kabal
2. Integrisani Type-C kabal
3. Type-C Port
4. Bežični punjač (podržava punjenje iWatch uređaja i slušalice)

Posebna napomena:

Pritisnite taster za uključivanje 3-5 sekundi da biste ušli u režim slabog punjenja (za uređaje male potrošnje, npr iWatch, slušalice). Ako se nijedan uređaj ne detektuje nakon aktivacije, režim će se automatski isključiti nakon 2 sata. Ponovo aktivirajte režim dugim pritiskom na dugme.

Punjenje power bank-a:

Power bank možete puniti pomoću ugrađenog AC utikača ili opcionog kabla za punjenje (ne isporučuje se uz uređaj).

1. Korišćenje ugrađenog AC kabla
Izvučite ugrađeni AC utikač iz power bank-a. Ako je potrebno, pričvrstite jedan od priloženih regionalnih adaptera (UK, EU, AU). Uverite se da ste čuli „klik“ kako biste potvrdili da je adapter sigurno pričvršćen. Zatim ga priključite u zidnu utičnicu.

2. Korišćenje kabla za punjenje

Povežite jedan kraj kabla za punjenje na USB-A ili Type-C port adaptera za napajanje. Drugi kraj priključite na Type-C ulazni port power bank-a.

3. Korišćenje ugrađenog Type-C kabla
Izvučite uvlačivi kabl i povežite ga sa Type-C portom adaptera za napajanje. Punjenje će automatski početi.

Provera nivoa baterije:

1. Provera statusa baterije:
Kratko pritisnite dugme za uključivanje. Trenutni procenat baterije će se prikazati na digitalnom displeju.
2. Isključivanje displeja:
Dvaput kliknite taster za uključivanje ili sačekajte oko 30 sekundi neaktivnosti- displej i napajanje će se automatski isključiti.

Upozorenje:

- Ovaj power bank nije igračka. Držite ga van domašaja dece.
- Ne izlažite power bank direktnoj sunčevoj svetlosti ili ekstremnoj toploti duži vremenski period.
- Ne potapajte powerbank u vodu i ne dozvolite da se pokvasi.
- Držite dalje od vatre i izvora visoke temperature.
- Izbegavajte kontakt sa jakim hemikalijama ili korozivnim supstancama.
- Ne koristite powerbank ako je oštećen ili modifikovan.
- Ne ubacujte strane predmete u otvore ili portove.
- Ne rastavljajte, ne popravljajte i ne otvarajte power bank ni pod kakvim okolnostima.