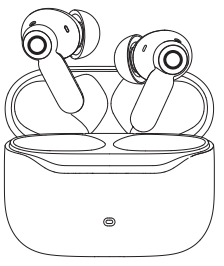
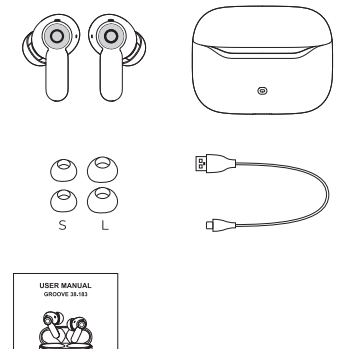
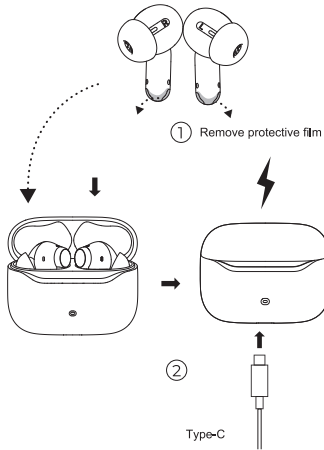
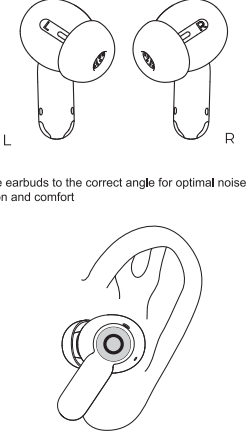
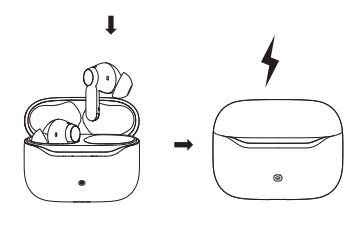
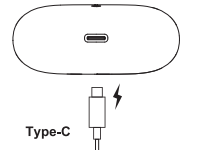
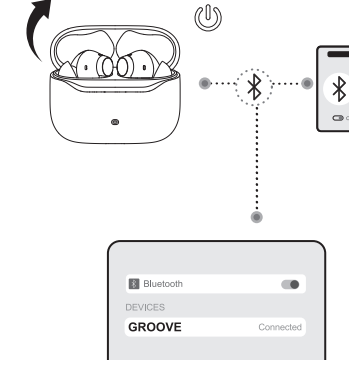
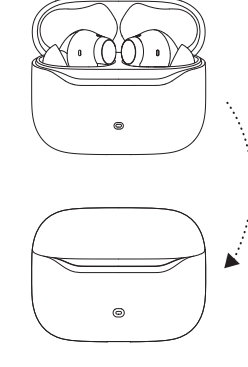
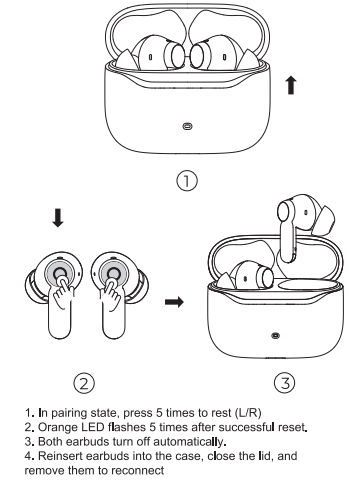

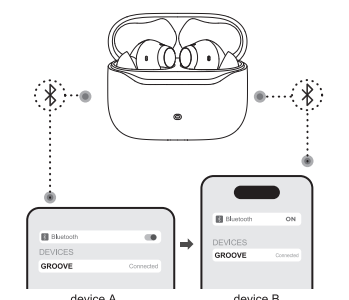
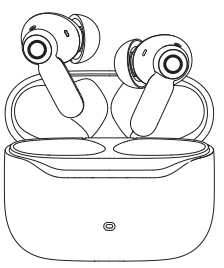
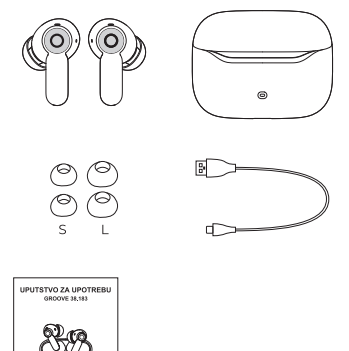
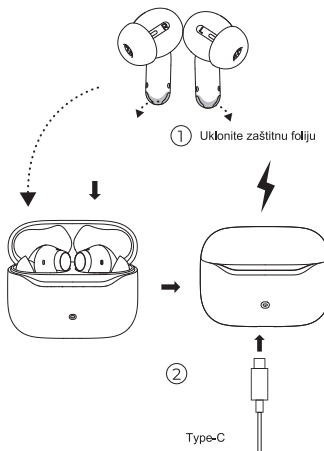
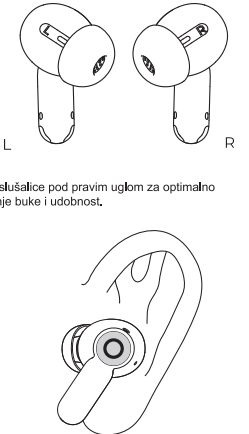
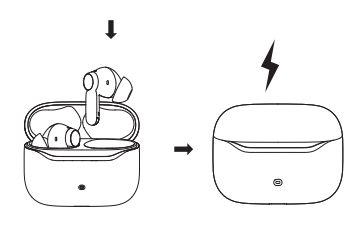
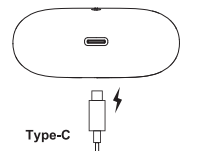
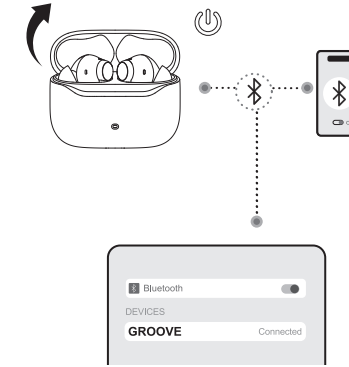
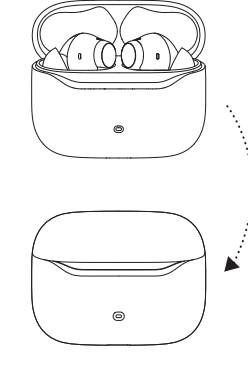
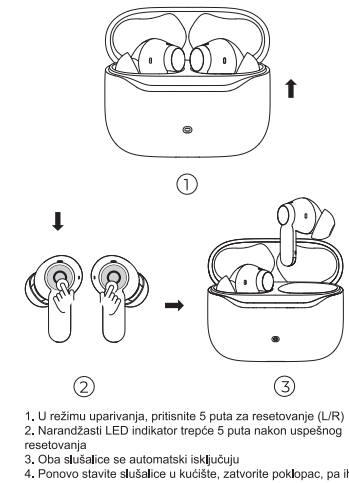

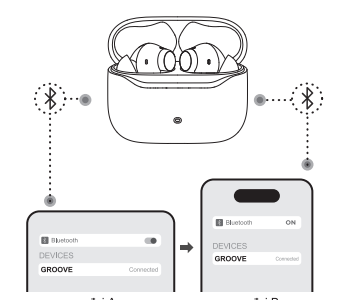


ENG

|   |  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
|---|--|---|--|--|---|--|--|-----------------|-----------------|---------------------------------|------------------------------|-------------------------------|------------------------------|-------------------------------|----------------------|-------------------|---|---|---|
| <p><b>USER MANUAL</b><br/><b>GROOVE 38.183</b></p>  <p><b>WIRELESS STEREO EARBUDS</b></p>  | <p><b>Package content</b></p>  <p>1</p> | <p><b>First time use</b></p>  <p>2</p> | <p><b>Wearing</b></p>  <p>3</p> | <p><b>Charging</b></p> <p><b>EARBUDS CHARGING</b></p>  <p><b>CASE CHARGING</b></p>  <p>4</p> | <p><b>Power on &amp; Connect</b></p>  <p>5</p> | <p><b>Power off</b></p>  <p>6</p> | <p><b>Reset</b></p>  <p>7</p> |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| <p><b>Touch control</b></p>  <table border="1"><tr><td>Play/Pause</td><td>Tap twice (L/R)</td></tr><tr><td>Previous song</td><td>Tap 3 times (L)</td></tr><tr><td>Next song</td><td>Tap 3 times (R)</td></tr><tr><td>Answer/End a call</td><td>Tap twice (L/R)</td></tr><tr><td>Reject the call</td><td>Touch &amp; hold for 1 second (L/R)</td></tr><tr><td>Switch Game mode/ Music mode</td><td>Touch &amp; hold for 2 second (R)</td></tr><tr><td>ANC ON/Ambient sound/ANC OFF</td><td>Touch &amp; hold for 2 second (L)</td></tr><tr><td>Spatial Audio On/Off</td><td>Tap 4 times (L/R)</td></tr></table> <p><small>*Spatial Audio mode is not available in mono mode.<br/>*Adaptive ANC takes effect only at the moment the feature is enabled.<br/>*Adaptive ANC must be enabled through the app</small></p> | Play/Pause   | Tap twice (L/R)   | Previous song  | Tap 3 times (L)  | Next song   | Tap 3 times (R)  | Answer/End a call  | Tap twice (L/R) | Reject the call | Touch & hold for 1 second (L/R) | Switch Game mode/ Music mode | Touch & hold for 2 second (R) | ANC ON/Ambient sound/ANC OFF | Touch & hold for 2 second (L) | Spatial Audio On/Off | Tap 4 times (L/R) | <p><b>Multi-point connection</b></p>  <p>1. Connect earbuds to device A then turn off its Bluetooth and the earbuds will auto turn connectable.<br/>2. On device B, search GROOVE and tap to connect.<br/>3. Once again turn on Bluetooth on device A and connect it to the earbuds.</p> | <p><b>Safety tips</b></p> <ol style="list-style-type: none"><li>1. Don't expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside.</li><li>2. Don't disassemble your earbuds. There are no user serviceable parts inside.</li><li>3. Don't drop the earbuds and keep them away from sharp objects such as keys in your pockets.</li><li>4. Clean earbuds tips, metal contact surface of earbuds and case with alcohol swab regularly to ensure there is no dust accumulation and keep good quality sound experience.</li><li>5. Charge your earbuds below 5V/1A charger.</li><li>6. Don't expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.</li><li>7. Listen to the music at high volume is harmful to your ears.</li><li>8. Don't throw the earbuds in a fire to dispose it otherwise inside battery may explode.</li></ol> | <p><b>Batteries:</b></p> <p>A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like:</p> <ol style="list-style-type: none"><li>1) Replacement of a battery with an incorrect type that can defeat a safeguard.</li><li>2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.</li><li>3) Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.</li><li>4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.</li></ol> |
| Play/Pause  | Tap twice (L/R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Previous song   | Tap 3 times (L)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Next song   | Tap 3 times (R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Answer/End a call   | Tap twice (L/R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Reject the call   | Touch & hold for 1 second (L/R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Switch Game mode/ Music mode  | Touch & hold for 2 second (R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| ANC ON/Ambient sound/ANC OFF  | Touch & hold for 2 second (L)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |
| Spatial Audio On/Off  | Tap 4 times (L/R)  |   |  |  |   |  |  |                 |                 |                                 |                              |                               |                              |                               |                      |                   |   |   |   |

SRB

|  |  |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
|--|--|--|--|---|---|--|--|------------------------|--------------|------------------------------|-------------------------------|-------------------------------|---|------------------------------|-------------------------------------|----------------------|---|--|--|
| <p><b>UPUTSTVO ZA UPOTREBU</b><br/><b>GROOVE 38.183</b></p>  <p><b>BEŽIČNE STEREO SLUŠALICE</b></p>   | <p><b>Sadržaj pakovanja</b></p>  <p>1</p> | <p><b>Prva upotreba</b></p>  <p>2</p> | <p><b>Nošenje</b></p>  <p>3</p> | <p><b>Punjenje</b></p> <p><b>PUNJENJE SLUŠALICA</b></p>  <p><b>PUNJENJE KUČIŠTA</b></p>  <p>4</p> | <p><b>Uključivanje i povezivanje</b></p>  <p>5</p> | <p><b>Isključivanje</b></p>  <p>6</p> | <p><b>Resetovanje</b></p>  <p>7</p> |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| <p><b>Kontrola dodirrom</b></p>  <table border="1"><tr><td>Reprodukcija/Pauza</td><td>Dvaput dodirni (L/R)</td></tr><tr><td>Prethodna pesma</td><td>Dodirni tri puta (L)</td></tr><tr><td>Sljedeća pesma</td><td>Dodirni tri puta (R)</td></tr><tr><td>Odgovori / Završetak poziva</td><td>Dodirni dva puta (L/R)</td></tr><tr><td>Ostbij poziv</td><td>Dodirni i drži 2 sekunde (R)</td></tr><tr><td>Prebacni režim: Igra / Muzika</td><td>Touch &amp; hold for 2 second (R)</td></tr><tr><td>ANC UKLJUČEN / Ambientalni zvuk / ANC ISKLJUČEN</td><td>Dodirni i drži 2 sekunde (L)</td></tr><tr><td>Prostorni zvuk UKLJUČEN / Isključen</td><td>Dodirni 4 puta (L/R)</td></tr></table> <p><small>*Prostorni zvuk nije dostupan u mono režimu.<br/>*Adaptivni ANC (aktivno poništavanje buke) počinje da radi samo u trenutku kada se uključ.<br/>*Adaptivni ANC mora biti omogućen putem aplikacije.</small></p> | Reprodukcija/Pauza   | Dvaput dodirni (L/R)   | Prethodna pesma  | Dodirni tri puta (L)  | Sljedeća pesma  | Dodirni tri puta (R)   | Odgovori / Završetak poziva  | Dodirni dva puta (L/R) | Ostbij poziv | Dodirni i drži 2 sekunde (R) | Prebacni režim: Igra / Muzika | Touch & hold for 2 second (R) | ANC UKLJUČEN / Ambientalni zvuk / ANC ISKLJUČEN | Dodirni i drži 2 sekunde (L) | Prostorni zvuk UKLJUČEN / Isključen | Dodirni 4 puta (L/R) | <p><b>Višestruka veza</b></p>  <p>1. Povežite slušalice sa uređajem A, zatim isključite Bluetooth na uređaju A, slušalice će automatski postati dostupne za povezivanje.<br/>2. Na uređaju B potražite „GROOVE“ i dodirnite za povezivanje.<br/>3. Ponovo uključite Bluetooth na uređaju A i povežite ga sa slušalicama.</p> | <p><b>Saveti za bezbednost</b></p> <ol style="list-style-type: none"><li>1. Ne izlažite slušalice toplotnim, vatri ili visokoj vlažnosti jer sadrže elektroniku i bateriju.</li><li>2. Nemojte rastavljati slušalice — unutra nema delova koje korisnik može sam popravljati.</li><li>3. Ne ispuškajte slušalice i držite ih podalje od ostih predmeta poput ključeva u džepu.</li><li>4. Redovno čistite vrhove slušalica, metalne kontakte slušalica i kućišta alkoholnom krpom kako biste sprečili nakupljanje prašine i održali dobar kvalitet zvuka.</li><li>5. Punite slušalice punjačem sa naponom ispod 5V/1A.</li><li>6. Ne izlažite slušalice ekstremno visokim ili niskim temperaturama jer to može oštetiti bateriju i deformirati plastične delove.</li><li>7. Slušanje muzike na visokom nivou jačine zvuka može šteti vašem sluhu.</li><li>8. Ne bacajte slušalice u vodu jer može doći do eksplozije baterije.</li></ol> | <p><b>Baterije:</b></p> <p>Upozorenje: Baterije (baterijski paket ili ugrađene baterije) ne smeju biti izložene prekomernoj toploti, kao što su direktna sunčeva svetlost, vatra ili jaka svetlost.</p> <ol style="list-style-type: none"><li>1. Zamenite baterije nespravnog tipa može poništiti zaštitne mehanizme.</li><li>2. Odbacivanje baterije u vodu ili vrenu pećnicu, kao i mehaničko gređenje ili sečenje baterije može izazvati eksploziju.</li><li>3. Ostavljanje baterije u okruženju sa visokim temperaturama može dovesti do eksplozije ili čurenja zapaljive tečnosti ili gasa.</li><li>4. Izlaganje baterije veoma niskom pritisku vazduha može izazvati eksploziju ili čurenje zapaljive tečnosti ili gasa.</li></ol> |
| Reprodukcija/Pauza   | Dvaput dodirni (L/R)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Prethodna pesma  | Dodirni tri puta (L)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Sljedeća pesma   | Dodirni tri puta (R)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Odgovori / Završetak poziva  | Dodirni dva puta (L/R)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Ostbij poziv   | Dodirni i drži 2 sekunde (R)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Prebacni režim: Igra / Muzika  | Touch & hold for 2 second (R)  |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| ANC UKLJUČEN / Ambientalni zvuk / ANC ISKLJUČEN  | Dodirni i drži 2 sekunde (L)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |
| Prostorni zvuk UKLJUČEN / Isključen  | Dodirni 4 puta (L/R)   |  |  |   |   |  |  |                        |              |                              |                               |                               |   |                              |                                     |                      |   |  |  |