

ENG

USER MANUAL  KEY FINDER 38.138	Getting Started01		Add Your Locator02		Locate Your Item03		Find Item When Out of Range04		When Your Item is Lost05		
	1.Power On/Off - Press your Locator’s function button once to turn on - it should beep once indicating it is powered on. - To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Locator is powered off. 2.Check For Updates - To use the Apple® Find My® app to locate item Locator, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find My app on Apple Watch requires the latest version of watchOS®. Function Button 		1.Start the App - Open Find My app on your supported iPhone® or iPad® - Allow notifications from the app 2.Connect your Locator - Power on your Locator - Tap “+” then “Add Other Item” - Once your Locator is located, tap “Connect” - Choose a recognizable name and emoji for your item Locator and tap “Continue” - Find My will ask for confirmation to add your Locator for your Apple ID - tap “Continue” - Tap “Finish” and your Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your keys.		1.Find Locator when it is Nearby - Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch - Tap on your Locator from the list - Tap “Play Sound” to make your Locator beep - Tap “Stop Sound” to stop the beeps once you find your item 2.Find Locator’s Last Known Location - Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch - Tap on your Locator from the list - Our Locator’s last known location will appear on the map - To navigate to that last known location, tap “Directions” to open the Maps app.		1.Enabling “Notify When Left Behind” - Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch. - Tap on your Locator from the list. - Under “Notifications”, enable the “Notify When Left Behind” toggle - You will receive a notification when you leave your Locator behind and it’s no longer in range of your device. 2.Enabling “Notify When Found” - Under “Notifications”, enable the “Notify When Found” toggle - When your Locator is seen by another Find My enabled device, you will receive a notification of its updated location - Note: “Notify When Found” can only be activated when your Locator is out of range.		1.Enable lost Mode - Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch. - Tap on your Locator from the list. - Under “Lost Mode”, tab “Enable” - A screen detailing Lost Mode will pop up, tap “Continue” - Enter your phone number or email address and tap “Next” - You may enter a message that will be shared with the person that finds your item - Tap “Activate” to enable “Lost Mode” - Note: When “Lost Mode” is enabled, “Nofity When Found” is automatically enabled - Note: When “Lost Mode” is enabled, your Locator is locked and cannot be paired to a new device		
Resetting Your Locator06		But Wait... There’s More07		WARNING08		WARNING09		FCC Statement10		FCC Statement11	
1.Remove the Locator from Find My app - Open Find My app and select the “Item” tab - Tap on your Locator from the list - Please ensure “Lost Mode” is disabled - Scroll to the bottom of the screen and tap “Remove Item” - A summary will open, tap “Remove” to confirm 2.Factory Reset Your Locator - After successfully removing the Locator from Find My app, press the Locator’s function button four times rapidly, you will hear a beep each time you press it and the hold it a fifth time until you hear a ringing chime - The Locator is now reset and ready to be paired to a new device		1.Replace the Battery: - Insert the opening tool at the bottom of the case, then rotate 90degrees to open the case. - Replace the battery with a new CR2032 battery placing it positive side up (text facing up) - Carefully align the top hole on both sides to close 2.Unwanted Tracking Detection - If any Find My network accessory separated from its owner is seen moving with you over time, you’ll be notified in one of two ways: (1) If you have a iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. (2) If you don’t have an iOS device or smartphone,a Find My network accessory that isn’t with its owner for a period of time will emit a sound when it’s moved. These features were created specifically to discourage people from trying to track you without your knowledge.		1. Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. 2.Even used batteries may cause severe injury or death. 3.Call a local poison control center for treatment information. 4. Non-rechargeable batteries are not to be recharged. 5. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns. 6.The compatible battery type is CR2032. 7.The nominal battery voltage: DC 3V 8. Ensure the batteries are installed correctly according to polarity(+ and -). 9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. 10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. 11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.		 WARNING:This product contains a button cell or coin battery.  WARNING • INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause in as Internal Chemical Burns 2 hours   WARNING • KEEP new and used batteries OUT OF REACH OF CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed of inserted inside any part of the body.		Battery type: CR2032. Battery voltage: 3V. Keep in original package until ready to use; Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash. This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ~Reorient or relocate the receiving antenna. ~Increase the separation between the equipment and receiver. ~Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ~Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:		(1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.  WARNING KEEP OUT OF REACH OF CHILDREN Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.      10005 24	

SRB

KORISNIČKO UPUTSTVO  KEY FINDER 38.138		Početak 01		Dodajte svoj Locator 02		Locirajte svoj predmet 03		Pronađite predmet kada je van dometa 04		Kada je vaš predmet izgubljen 05	
		1.Uključivanje/Isključivanje • Pritisnite funkcionišući taster na svom Locatoru jednom da biste ga uključili – trebalo bi da se čuje jedan zvučni signal koji označava da je uređaj uključen. • Da biste ga isključili, držite isti taster najmanje 3 sekunde. Čućete dva zvučna signala, što znači da je vaš Locator isključen. 2.Proverite ažuriranja • Da biste koristili Apple® Find My® aplikaciju za lociranje vašeg Locator-a, preporučuje se najnovija verzija iOS®, iPadOS® ili macOS® operativnog sistema. Find My aplikacija na Apple Watch-u zahteva najnoviju verziju watchOS®. Function Button 		1.Pokrenite aplikaciju • Otvorite Find My aplikaciju na svom iPhone® ili iPad® uređaju. • Dozvolite obaveštenja od aplikacije. 2.Povežite svoj Locator • Uključite svoj Locator • Tapnite na „+“, pa zatim na „Add Other Item“ (Dodaj drugi predmet). • Kada vaš Locator bude pronađen, tapnite na „Connect“ (Poveži). • Izaberite prepoznatljivo ime i emoji za vaš Locator i tapnite na „Continue“ (Nastavi). • Find My će zatražiti potvrdu da dodate svoj Locator za vaš Apple ID – tapnite na „Continue“ (Nastavi).“ • Tapnite na „Finish“ (Završi) i vaš Locator će biti podešen i spreman za povezivanje sa predmetom koji želite da locirate, npr. vašim ključevima.		1.Pronađite Locator kada je u blizini • Otvorite Find My aplikaciju i izaberite tab „Items“ (Predmeti) ili otvorite Find Items aplikaciju na svom Apple Watch-u. • Tapnite na svoj Locator sa liste • Tapnite na „Play Sound“ (Pusti zvuk) da biste čuli zvučni signal Locator-a • Tapnite na „Stop Sound“ (Zaustavi zvuk) kada pronađete svoj predmet 2.Pronađite poslednju poznatu lokaciju Locator-a • Otvorite Find My aplikaciju i izaberite tab „Items“ (Predmeti) ili otvorite Find Items aplikaciju na svom Apple Watch-u • Tapnite na svoj Locator sa liste • Poslednja poznata lokacija vašeg Locator-a biće prikazana na mapi • Da biste se uputili ka toj poslednjoj poznatoj lokaciji, tapnite na „Directions“ (Uputstva) da otvorite Maps aplikaciju.		1.Omogućavanje opcije „Notify When Left Behind“ • Otvorite Find My aplikaciju i izaberite tab „Items“ (Predmeti) ili otvorite Find Items aplikaciju na svom Apple Watch-u. • Tapnite na svoj Locator sa liste. • Pod „Notifications“ (Obaveštenja), omogućite prekidač „Notify When Left Behind“ (Obavesti kada ostavite iza sebe). • Bićete obavešteni kada zaboravite svoj Locator i kada izađe iz dometa vašeg uređaja. 2.Omogućavanje opcije „Notify When Found“ • Pod „Notifications“ (Obaveštenja), omogućite „Notify When Found“ • Kada vaš Locator bude detektovan od strane drugog uređaja sa omogućenim Find My, bićete obavešteni o njegovoj ažuriranoj lokaciji. • Napomena: „Notify When Found“ može biti aktivirano samo kada je vaš Locator van dometa.		1.Omogućite Lost Mode (Režim izgubljenog predmeta) • Otvorite Find My aplikaciju i izaberite tab „Items“ (Predmeti) ili otvorite Find Items aplikaciju na svom Apple Watch-u. • Tapnite na svoj Locator sa liste. • Pod „Lost Mode“, tapnite na „Enable“ (Omogući). • Na ekranu će se pojaviti detalji o Lost Mode-u, tapnite na „Continue“. • Unesite svoj broj telefona ili email adresu i tapnite na „Next“ (Dalje). • Možete uneti poruku koja će biti podeljena sa osobom koja pronađe vaš predmet. • Tapnite na „Activate“ (Aktiviraj) da omogućite „Lost Mode“. • Napomena: Kada je „Lost Mode“ omogućen, opcija „Notify When Found“ (Obavesti kada bude pronađen) se automatski aktivira. • Napomena: Kada je „Lost Mode“ omogućen, vaš Locator je zaključan i ne može se povezati sa novim uređajem.	
Resetovanje vašeg Locator-a 06		Ali čekajte... Ima još! 07		UPOZORENJE 08		UPOZORENJE 09		FCC Izjava 10		FCC Izjava 11	
1.Uklonite Locator iz Find My aplikacije • Otvorite Find My aplikaciju i izaberite tab „Items“ (Predmeti). • Tapnite na svoj Locator sa liste. • Proverite da li je „Lost Mode“ (Režim izgubljenog predmeta) isključen. • Pomerite se ka dnu ekrana i tapnite na „Remove Item“ (Ukloni predmet) • Pojaviće se sažetak, tapnite na „Remove“ (Ukloni) da biste potvrdili. 2.Vraćanje na fabrička podešavanja (Factory Reset) vašeg Locator-a • Nakon što uspešno uklonite Locator iz Find My aplikacije, pritisnite funkcionišući taster na Locator-u četiri puta brzo. Čućete zvučni signal svaki put kada pritisnete taster. Zatim, držite taster peti put dok ne čujete zvono. • Vaš Locator je sada resetovan i spreman da se poveže sa novim uređajem.		1.Zamenite bateriju: • Umetnite alat za otvaranje na dnu kućišta, zatim okrenite za 90 stepeni da biste otvorili kućište. • Zamenite bateriju novom CR2032 baterijom, pazeći da pozitivna strana (tekst) bude okrenuta prema gore. • Pažljivo poravnajte gornji otvor sa obe strane kako biste zatvorili kućište. 2.Detekcija neželjenog praćenja • Ako neki Find My mrežni uređaj, koji je odvojen od svog vlasnika, bude primećen kako se kreće sa vama tokom vremena, bićete obavešteni na jedan od dva načina: (1) Ako imate iPhone, iPad ili iPod touch, Find My će poslati obaveštenje na vaš Apple uređaj. Ova funkcija je dostupna na iOS ili iPadOS 14.5 ili novijim verzijama.(2) Ako nemate iOS uređaj ili pametan telefon, Find My mrežni uređaj koji nije sa svojim vlasnikom tokom određenog vremenskog perioda, emitovaće zvuk kada se pomeri. Ove funkcije su kreirane da obeshabre ljude koji pokušavaju da vas prate bez vašeg znanja.		1. Uklonite i odmah reciklirajte ili odložite korišćene baterije prema lokalnim propisima i držite ih van doseg a dece. Nemojte odlagati baterije u kućni otpad ili ih spaljivati. 2. Korišćene baterije mogu izazvati teške povrede ili smrt. 3. Pozovite lokalni centar za kontrolu otrova za informacije o lečenju. 4. Ne-punjenje baterije nije dozvoljeno. 5. Nemojte forsirati pražnjenje, punjenje, rastavljanje, zagrevanje iznad 50°C/122°F ili spaljivanje. Takve radnje mogu izazvati povrede zbog ventilacije, curenja ili eksplozije, što može dovesti do hemijskih opekotina. 6. Kompatibilni tip baterije je CR2032. 7. Nominalni napon baterije: DC 3V 8. Osigurajte da su baterije pravilno postavljene prema polaritetu (+ i -). 9. Nemojte mešati stare i nove baterije, različite brendove ili tipove baterija, kao što su alkaline, karbon-cink ili punjive baterije. 10. Uklonite i odmah reciklirajte ili odložite baterije iz opreme koja se ne koristi duži vremenski period, prema lokalnim propisima. 11. Uvek potpuno zatvorite prostor za bateriju. Ako se prostor za bateriju ne zatvori sigurno, prestanite da koristite proizvod, uklonite baterije i držite ih van doseg a dece.		 UPOZORENJE: Ovaj proizvod sadrži dugmasti ili novčani akumulator (bateriju).  UPOZORENJE • OPASNOST OD GUTANJA: Ovaj proizvod sadrži dugmasti ili novčani akumulator (bateriju). • SMRT ili ozbiljne povrede mogu nastati ako se proguta. • Gutanje dugmaste ili novčane baterije može izazvati unutrašnje hemijske opekotine u roku od 2 sata   UPOZORENJE • Držite nove i korišćene baterije VAN DOSEGA DECE. • Odmah potražite medicinsku pomoć ako se sumnja da je baterija progutana ili umetnuta u bilo koji deo tela.		Tip baterije: CR2032. Napon baterije: 3V. Čuvajte u originalnom pakovanju dok ne budete spremni da koristite. Odmah odložite korišćene baterije i držite ih van doseg a dece. Nemojte odlagati baterije u kućni otpad. Ova oprema je testirana i ustanovljeno je da je u skladu sa ograničenjima za Class B digitalni uređaj, u skladu sa delom 15 FCC pravila. Ova ograničenja su dizajnirana da pruže razonodnu zaštitu od štetnih smetnji u stambenim instalacijama. Ova oprema generiše, koristi i može zračiti radio-frekventnu energiju i, ako nije instalirana i korišćena u skladu sa uputstvima, može izazvati štetne smetnje u radio komunikaciji. Međutim, ne postoji garancija da smetnje neće nastati u određenoj instalaciji. Ako ova oprema izazove štetne smetnje u prijemnu radija ili televizije, što se može utvrditi isključivanjem i uključivanjem opreme, korisniku se savetuje da pokuša da ispravi smetnje jednom ili više sledećih mera: ~ Promenite orijentaciju ili pomerite prijemnu antenu. ~ Povećajte razdaljinu između opreme i prijemnika. ~ Povežite opremu na utičnicu na različitom strujnom krugu od onog na kojem je prijemnik povezan. ~ Obratite se prodavcu ili iskusnom tehničaru za radio/TV uređaje za pomoć. Ovaj uređaj je u skladu sa delom 15 FCC pravila. Rad uređaja podložan je sledećim uslovima:		(1)Ovaj uređaj ne sme izazvati štetne smetnje, i (2) Ovaj uređaj mora prihvatiti bilo kakve smetnje koje se prime, uključujući smetnje koje mogu uzrokovati neželjeni rad uređaja. Bilo kakve promene ili modifikacije koje nisu izričito odobrene od strane odgovorne strane za usklađenost mogu poništiti korisnikovu dozvolu za upotrebu opreme. Ova oprema je u skladu sa FCC ograničenjima izlaganja zračenju postavljenim za nekontrolisanu sredinu. Uređaj je ocenjen da ispunjava opšte zahteve za izlaganje RF (radio-frekventnoj) energiji. Uređaj se može koristiti u uslovima prenosivog izlaganja bez ograničenja.  WARNING KEEP OUT OF REACH OF CHILDREN Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.      10005 24	