

LORD

Item code: 20.121
Refillable lighter



Warning:

- Keep the lighter out of the reach of children.
- Lighter contains inflammable gas under pressure. Ignite the lighter away from face and clothing.
- When refilling, keep the lighter away from open flame or fire.
- Keep the lighter away from temperatures above 50°C and avoid prolonged exposure to sunlight.
- Never puncture or put in fire. Be sure flame is extinguished completely after use.

THIS LIGHTER CAN BE DANGEROUS IN CHILDREN'S HANDS.

How to refill your lighter:

1. Always refuel in well ventilated area.
2. Make sure the lighter isn't hot. Don't refill your lighter immediately after you've used it.

3. Dust and dirt can impair the lighter.

4. The filling valve is found on the bottom of the lighter. Hold the gas bottle with the nozzle downwards. Place the nozzle on the filling valve and press 2 or 3 times. After filling wait 15 sec. to let abundant gas evaporate. **Do not keep it for more than 30 seconds.**

Refill fuel:

Butane gas. Remove the refill bottle, and adjust the flame height as desired.

Flame height regulation:

Keep the lighter away from your face, turn the flame adjuster to the (+) direction for higher flame, or to direction (-) for lower flame.

Ignition slider
button



Gas filling and
flame height
adjuster

LORD

Šifra artikla: 20.121
Punjivi upaljač



Upozorenje:

- Držite upaljač van domašaja dece.
- Upaljač sadrži zapaljivi gas pod pritiskom.
- Udaljite upaljač od lica i odeće.
- Prilikom punjenja, ne izlažite upaljač otvorenom plamenu.
- Držite upaljač dalje od temperatura preko 50°C i izbegavajte duže izlaganje upaljača sunčevoj svetlosti.
- Upaljač se ne sme bušiti ili bacati u vatru. Budite sigurni da je plamen ugašen u potpunosti nakon upotrebe.

OVAJ UPALJAČ MOŽE BITI OPASAN U RUKAMA DECE.

Da biste napunili upaljač:

1. Uvek sipajte gorivo u dobro provetrenom prostoru.
2. Vodite računa da upaljač ne bude vruć. Nemojte dopunjavati upaljač odmah nakon korišćenja.

3. Prašina i prljavština mogu oštetiti funkcionisanje upaljača.

4. Ventil za punjenje nalazi se na dnu upaljača. Okrenite upaljač na dole. Držite bocu za punjenje gasom sa uspravljenom mlaznicom nadole. Postavite mlaznicu na ventil za punjenje i pritisnite 2 ili 3 puta. Nakon punjenja pričekajte 15 sekundi i pustite da proloveni plin ispari. **Ne držite upaljeno duže od 30 sekundi.**

Gas za dopunu:

Butan gas. Uklonite bocu za punjenje, podesite visinu plamena po želji.

Regulisanje visine plamena:

Držite upaljač dalje od lica, okrenite regulator plamena u smeru (+) za veći plamen ili u smeru (-) za manji plamen.

Slajder za
paljenje



Ventil za punjenje
i podesavanje
visine plamena