


USER MANUAL MEZZO 38.119.10



It is recommended to read this user manual carefully and keep it for future reference

Product Overview:

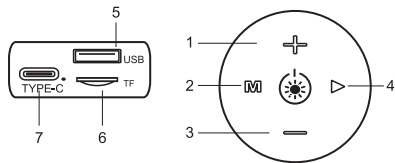

Specifications:

Bluetooth Version: 5.4
Charging voltage: 5V ===
Lithium battery: 800mAh 3.7V
Working Time: 2-3h
Operating distance: up to 10 meters
Frequency: 20Hz-20KHz
Impedance: 4ohms
Power output: 5W
SNR: 80dB

Operation:

Long press the "⊕" button to power on the speaker. From the Bluetooth menu of your device, search for new devices and select "Mezzo" to pair.

Once they are paired successfully, you will hear a notification sound and the blue indicator light will remain on.

Function:

- 1.Short press "⊕": Lighting control
- 2.Short press "⊖": volume down
- 3.Long press "⊖": previous song
- 4.Short press "⊕": volume up
- 5.Long press "⊕": next song
- 6.Short press "⊖": mode conversion
- 7.Short press "▶": STOP/PLAY
- 8.Charging: Type-C
- 9.Slot: TF card & USB

Long press the "⊕" button to power off the speaker.

Charging:

Use the cable provided for charging. Connect the USB cable to computer/AC adapter. Connection the Type C end of this cable into the USB C port of your device.

During charging, the red indicator light will stay on. When the speaker is fully charged the indicator light will turn off.

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	1. Check whether the speaker is still in the process of search or switch it off and on again, 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection, 3. Turn off other Bluetooth devices.
The sound is low or distorted.	4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.




This symbol both in the product and its user manual indicates that at the end of device electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

UPUTSTVO ZA UPOTREBU MEZZO 38.119.10



Preporučuje se pažljivo čitanje ovog uputstva za upotrebu i čuvanje za buduće potrebe.

Pregled proizvoda:

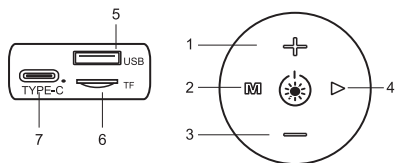

Specifikacije:

Bluetooth Verzija: 5.4
Napon punjenja: 5V ===
Litijumska baterija: 800mAh 3.7V
Period upotrebe: 2-3h
Radna udaljenost: do 10 m
Frekvencija: 20Hz-20KHz
Impedansa: 4ohms
Izlazna snaga: 5W
SNR: 80dB

Operacije:

Dugo pritisnete dugme "⊕" da biste uključili zvučnik. U Bluetooth meniju Vašeg uređaja potražite nove uređaje i izaberite "Mezzo" za uparivanje.

Kada su uspešno upareni, čujete zvuk obaveštenja i plava indikatorska lampica će ostati upaljena.

Funkcije:

- 1.Kratko pritisnite "⊕": Kontrola osvetljenja
- 2.Kratko pritisnite "⊖": Smanjivanje jačine zvuka
- 3.Dugo pritisnete "⊖": Prethodna pesma
- 4.Kratko pritisnete "⊕": Pojačavanje jačine zvuka
- 5.Dugo pritisnete "⊕": Sledeća pesma
- 6.Kratko pritisnete "⊖": Promena režima
- 7.Kratko pritisnete "▶": STOP/PLAY
- 8.Charging: Type-C
- 9.Slot: TF kartica i USB

Dugo pritisnete dugme "⊕" za gašenje zvučnika.

Punjenje:

Koristite kabl namenjen za punjenje uređaja. Povežite USB kabl sa kompjuterom/AC adapterom. Ubacite Type-C deo kabla u USB C slot Vašeg uređaja za punjenje.

Tokom punjenja, crvena indikatorska lampica će biti upaljena. Kada je zvučnik potpuno napunjen, indikatorska lampica će se isključiti.

Otklanjanje problema:

Problem	Rešenje
Nije moguće uparivanje sa drugim uređajima.	1. Proverite da li je zvučnik i dalje u procesu traženja uređaja, ugasisite ga i upalite ponovo, 2. Postoji previše Bluetooth uređaja u neposrednoj blizini, što otežava povezivanje, 3. Isključite ostale Bluetooth uređaje.
Zvuk je utišan ili nekvallitetan.	4. Proverite jačinu zvuka na Bluetooth uređaju i podesite ga na odgovarajuću jačinu. 5. Dopunite bateriju zvučnika.
Muzika se povremeno zaustavlja.	6. Proverite da li je efektivni opseg prenosa zvučnika prekoracen ili postoji prepreka između zvučnika i drugih Bluetooth uređaja.

Upozorenja:

1. Ne izlažite ovaj proizvod kiši ili drugim vlažnim vremenskim uslovima.
2. Zaštite uređaj od pada, jer to može ozbiljno oštetiti proizvod.
3. Nemojte demontirati ili popravljati ovaj uređaj samostalno, kontaktirajte specijalizovano lice.
4. Kako biste izbegli sve rizike, nemojte neprilagodeno odlagati ovaj proizvod u otpad, jer poseduje ugrađenu litijum-jonsku bateriju.
5. Čistite zvučnik svom krpom.
6. Ne stavljajte proizvod preblizu izvoru toplote i ne izlažite ga direktno suncu.
7. Ne stavljajte komponente od metala u uređaj, jer postoji rizik izazivanja kratkog spoja u uređaju.
8. Čuvajte zvučnik van domašaja dece.



Ovaj simbol na proizvodu i njegovom uputstvu za upotrebu označava da bi isti na kraju radnog veka uređaja trebalo reciklirati odvojeno od kućnog otpada. Postoje adekvatna sredstva za odlaganje ovog materijala za pravilno recikliranje. Za više informacija kontaktirajte lokalne nadležne.