 



# USER MANUAL

## MISTIK 10PD 38.220.10

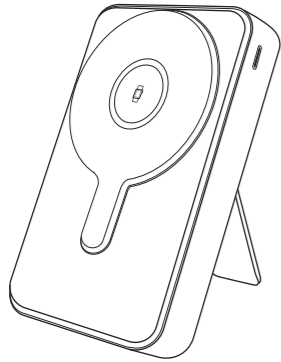

It is recommended to read this user manual carefully and keep it for future reference.
 
### PRODUCT OVERVIEW

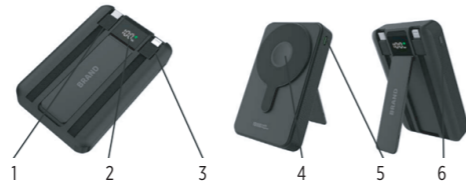

1. Built-in Type-C input/output cable
2. Display screen
3. Built-in lightning output cable
4. Wireless charging area
5. Type-C input/output port
6. Power button

### PRODUCT SPECIFICATION

Battery Capacity: 3.85V/10000mAh/38.5Wh(5000mAh\*2)  
 Type-C port/Built-in Type-C cable Input: 5V-3A, 9V-2A  
 Type-C port/Built-in Type-C cable Output: 5V-3A, 9V-2.22A, 12V-1.67A, 10V-2.25A  
 Built-in Lightning(7PIN) cable Output: 5V-2.4A  
 Total Output: 5V-3A (Max)  
 Wireless Output for phone: 5W, 7.5W, 10W, 15W(Max)  
 Wireless Output for TWS earbuds: 3W(Max)  
 Wireless Output for iWatch: 2.5W(Max)  
 Materials: Recycled PC/ABS/TPE/PET/Tin  
 Dimensions: 109\*69\*21.5 mm  
 Product Weight: About 200g

Magnetic force ≥ 8N  
 Charging Time: 3h-3.5h

### CHARGING AND DISCHARGING

When charging for the power bank, the wireless charging function can simultaneously charge for the phone, TWS earbuds or iWatch.

### PROTECTIVE CIRCUIT

Short circuit protection  
 Battery overcharge/over discharge protection  
 Output over current protection  
 Battery temperature abnormal NTC protection  
 Foreign Object Detection (FOD) Protection in Wireless charging

Temperature Range:  
 Using temperature range: 0~40°C  
 Storage: -20~25°C (12 months)  
 -20~45°C (3 months)

### USAGE GUIDELINE

#### POWER BUTTON

 
Click the power button to turn on the output and display the remaining power indicator, and double click to turn off the output and the indicator.

#### CHARGING YOUR POWER BANK

Connect Type-C end of your own cable to the Type-C interface and other end to wall charger to charge it. Or connect the Type-C end of the built-in cable to wall charger to charge it, the figure will flash on display screen. It's fully charged once showing 100%.

#### CHARGING YOUR DEVICE

1. Plug the end of the built-in Type-C/Lightning cable into your device to charge it.
2. Connect the Type-C end of your own cable to the Type-C interface of the power bank, and other end to your device to charge it.
3. Snap the mobile phone/TWS earbuds/Watch with wireless charging function on the wireless charging surface. The power bank will automatically recognize and activate wireless charging. The display screen keeps on like below.

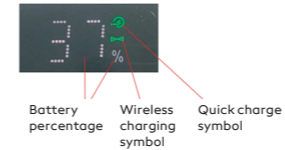


### WARNING

- Please do not strike the product with any blunt or sharp objects. Avoid throwing or dropping it to prevent damage.
- When the power is depleted, charge the product promptly. Avoid storing the power bank for long periods without charging it to maintain optimal battery health.
- Always use intact, undamaged charging cables and connectors. Damaged cables or connectors may cause electrical shorts or malfunctions.
- Keep the power bank dry at all times. Do not immerse in water or expose to moisture, as it may damage the internal electronics.
- The power bank contains lithium batteries and other electronic components. Keep it out of reach of children to avoid accidental misuse or ingestion of small parts.
- Please stop using the product if any abnormalities occur, such as an abnormal smell, overheating, discoloration, or shape change.
- Do not dispose of the power bank in regular trash. Follow local regulations for the safe disposal of lithium-ion batteries and electronic waste.
- Please do not disassemble or refit the product as it may cause damage or fire hazards.
- Always use the recommended Type-C cables for charging and ensure that cables are not damaged. Using damaged cables could lead to malfunction or hazards.
- Do not expose the power bank to extreme temperatures (below -10°C or above 45°C) as this can damage the battery and reduce performance.
- Keep the power bank and its components out of reach of children, as small parts may pose a choking hazard.


## UPUTSTVO
 
### MISTIK 10PD 38.220.10

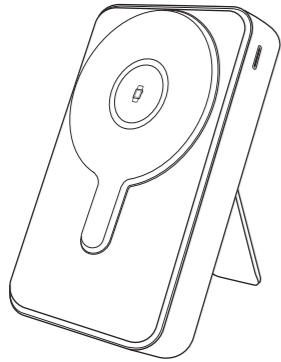

Preporučuje se da pažljivo pročitate ovaj korisnički priručnik i sačuvate ga za buduću upotrebu.

#### DIJAGRAM PROIZVODA

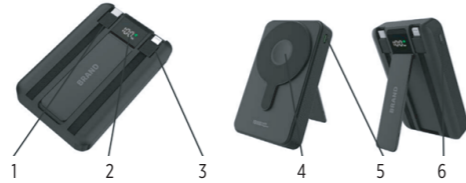 

1. Integrirani Type-C ulazno/izlazni kabl
2. Ekran
3. Integrirani Lightning izlazni kabl
4. Površina za bežično punjenje
5. Type-C ulazno/izlazni port
6. Dugme za uključivanje

#### PARAMETRI PROIZVODA

Kapacitet baterije: 3.85V/10000mAh/38.5Wh(5000mAh\*2)  
 Type-C port/ugrađeni Type-C kabl ulaz: 5V-3A, 9V-2A  
 Type-C port/ugrađeni Type-C kabl izlaz: 5V-3A, 9V-2.22A, 12V-1.67A, 10V-2.25A  
 Integrirani Lightning(7PIN) kabl izlaz: 5V-2.4A  
 Ukupan izlaz: 5V-3A (Max)  
 Bežični izlaz za telefon: 5W, 7.5W, 10W, 15W(Max)  
 Bežični izlaz za TWS slušalice: 3W(Max)  
 Bežični izlaz za iWatch: 2.5W(Max)  
 Materijali: Recycled PC/ABS/TPE/PET/Tin  
 Dimenzije: 109\*69\*21.5 mm  
 Težina proizvoda: Oko 200g

Magnetna sila: ≥8N  
 Vreme punjenja: 3h-3.5h

#### PUNJENJE

Tokom punjenja power bank-a, funkcija bežičnog punjenja može istovremeno puniti telefon, TWS slušalice ili iWatch.

#### ZAŠTITNI SKLOP

Zaštita od kratkog spoja  
 Zaštita baterije od prekomernog punjenja / prekomernog pražnjenja  
 Zaštita izlaza od prekomernog strujnog opterećenja  
 Zaštita baterije od abnormalne temperature (NTC zaštita)  
 Zaštita od stranih objekata (FOD) pri bežičnom punjenju

Raspon temperatura:  
 Radna temperatura: 0~40°C  
 Temperatura skladištenja: -20~25°C (12 meseci)  
 -20~45°C (3 meseca)

#### PREGLED PROIZVODA

##### DUGME ZA UKLJUČIVANJE

 
Jednim pritiskom na dugme za uključivanje aktivira se izlaz i prikazuje indikator preostalog nivoa baterije, a dvostrukim pritiskom isključuju se izlaz i indikator.

##### PUNJENJE POWER BANK-A

Povežite Type-C kraj sopstvenog kabla sa Type-C priključkom, a drugi kraj sa zidnim punjačem kako biste ga napunili, ili povežite Type-C kraj ugrađenog kabla sa zidnim punjačem – broj na ekranu će treperiti. Power bank je potpuno napunjen kada se na ekranu prikaže 100%.

##### PUNJENJE VAŠEG UREĐAJ

1. Priključite kraj ugrađenog Type-C/Lightning kabla u vaš uređaj kako biste ga punili.
2. Povežite Type-C kraj sopstvenog kabla sa Type-C priključkom power bank-a, a drugi kraj sa vašim uređajem radi punjenja.
3. Postavite mobilni telefon / TWS slušalice / sat sa funkcijom bežičnog punjenja na površinu za bežično punjenje. Power bank će automatski prepoznati uređaj i aktivirati bežično punjenje. Ekran će ostati uključen kao što je prikazano ispod.

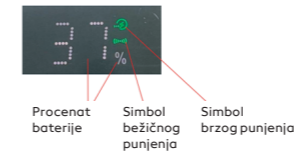

Procenat baterije      Simbol bežičnog punjenja      Simbol brzog punjenja

#### UPOZORENJE

- Molimo vas da ne udarate proizvod tupim ili oštrim predmetima. Izbegavajte bacanje ili ispuštanje kako biste sprečili oštećenja.
- Kada se baterija isprazni, blagovremeno napunite proizvod. Izbegavajte dugotrajno skladištenje power bank-a bez punjenja kako biste očuvali optimalno stanje baterije.
- Uvek koristite ispravne, neoštećene kablove i konektore za punjenje. Oštećeni kablovi ili konektori mogu izazvati kratki spoj ili kvar.
- Držite power bank uvek suvim. Ne potapajte ga u vodu niti izlažite vlazi, jer to može oštetiti unutrašnju elektroniku.
- Power bank sadrži litijumske baterije i druge elektronske komponente. Držite ga van domašaja dece kako biste izbegli slučajnu zloupotrebu ili gutanje sitnih delova.
- Prestanite sa korišćenjem proizvoda ukoliko primetite bilo kakve nepravilnosti, kao što su neobičan miris, pregrevanje, promena boje ili oblika.
- Ne odlazite power bank u običan kućni otpad. Pridržavajte se lokalnih propisa za bezbedno odlaganje litijum-jonskih baterija i elektronskog otpada.
- Nemojte rastavljati niti prepravljati proizvod, jer to može izazvati oštećenja ili opasnost od požara.
- Uvek koristite preporučene Type-C kablove za punjenje i proverite da nisu oštećeni. Korišćenje oštećenih kablova može dovesti do kvara ili opasnosti.
- Ne izlažite power bank ekstremnim temperaturama (ispod -10 °C ili iznad 45 °C), jer to može oštetiti bateriju i smanjiti performanse
- Držite power bank i njegove komponente van domašaja dece, jer sitni delovi mogu predstavljati opasnost od gušenja.