

## USER MANUAL MITTO 38.091.70

It is recommended to read this user manual carefully and keep it for future reference

### Product Overview:



### Specifications:

Charging voltage: 9V  $\equiv$  2A  
Wireless charging: 5-9V  $\equiv$  1-1.67A, 5-15W  
Working distance: up to 6mm  
Suitable for all mobile devices with Qi technology  
Temperature range: 0-50°C 32-122°F  
Clock: (12/24h)

### Operation:

Connect the device to a suitable power supply with the supplied cable.

### Wireless charger operation:

Place your Qi compatible device on top of the wireless charger, make sure that it is face up and centered.

Note: To ensure that the charger works correctly, it is recommended to remove the protective case of your phone

### Clock operation:

Press the SET button to switch between DP1 and DP2 modes:

DP1 Mode: The screen will show time, date and temperature.  
DP2 Mode: The screen will show only time and temperature.

Long press the UP button to switch the temperature format between °C y °F.

**Hour format:** Hold down the SET button for 3 seconds, until the display shows 12H/24H. Press UP or DOWN to change it and SET to fix it. Press UP or DOWN to change the hour.

When you are using the 12 Hours format, a white dot will be displayed at the top left side of the screen when the time is after the midday.

Press SET button to show the date. Long press SET again to adjust the below details:

YEAR  
DATE

ALARMS A1, A2 Y A3. Press UP/DOWN buttons to enable the alarm (The display will show ON near to the alarm name when it is enabled). Long press SET to adjust the alarm. Press SET to change to the next alarm.

### To adjust the brightness:

Press DOWN button to adjust the brightness.

-BA: The brightness will adjust automatically depending on the time.

-B1-B4: Adjust the brightness from lower to higher.

-L5: The screen will turn off automatically. Press DOWN to turn on the screen.

### Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately.
5. Clean it with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. To avoid risk, do not place any metal objects between the charger and the mobile device during the charging process.
9. Do not use mobile devices with a metal case

## KORISNIČKO UPUTSTVO MITTO 38.091.70

Preporučuje se da pažljivo pročitate ovaj korisnički priručnik i sačuvate ga za buduću upotrebu.

### Pregled proizvoda:



### Specifikacije:

Napon punjenja: 9V  $\equiv$  2A  
Bežično punjenje: 5-9V  $\equiv$  1-1.67A, 5-15W  
Radna distanca: do 6mm  
Pogodno za sve mobilne uređaje sa Qi tehnologijom  
Raspon temperature: 0-50°C 32-122°F  
Sat: (12/24h)

### Operacija:

Povežite uređaj sa odgovarajućim napajanjem pomoću isporučenog kabla.

### Rad bežičnog punjača:

Postavite svoj Qi kompatibilni uređaj na bežični punjač, vodeći računa da bude okrenut na gore i centriran.

Napomena: Da bi punjač ispravno radio, preporučuje se da skinete zaštitnu masku sa telefona.

### Rad sata:

Pritisnite dugme SET da prebacite između DP1 i DP2 režima:

DP1 režim: Na ekranu će se prikazivati vreme, datum i temperatura.  
DP2 režim: Na ekranu će se prikazivati samo vreme i temperatura.

Držite pritisnuto dugme UP da prebacite format temperature između °C i °F.

**Format sata:** Držite pritisnuto dugme SET 3 sekunde dok ekran ne prikaže 12H/24H. Pritisnite UP ili DOWN da promenite format i SET da potvrdite. Pritisnite UP ili DOWN da promenite sate.

Kada koristite 12-časovni format, beli krug će se prikazivati u gornjem levom kutu ekrana kada je vreme nakon podneva.

Pritisnite dugme SET da prikazete datum. Držite pritisnuto dugme SET da biste podesili sledeće podatke:

GODINA  
DATUM

ALARMI A1, A2 i A3. Pritisnite dugmadi UP/DOWN da omogućite alarm (prikazaće se ON pored imena alarma kada je aktiviran). Držite pritisnuto dugme SET da biste podesili alarm. Pritisnite dugme SET da pređete na sledeći alarm.

### Podesite osvetljenje:

Pritisnite dugme DOWN da biste podesili osvetljenje.

-BA: Osvetljenje će se automatski prilagoditi u zavisnosti od vremena.

-B1-B4: Podesite osvetljenje od nižeg ka višem.

-L5: Ekran će se automatski ugasiiti. Pritisnite DOWN da biste uključili ekran.

### Upozorenja:

1. Nemojte izlagati ovaj proizvod kiši ili vlažnim uslovima.
2. Sprečite padanje proizvoda jer može izazvati ozbiljna oštećenja.
3. Nemojte rastavljati, popraviti ili modifikovati ovaj proizvod sami, kontaktirajte ovlašćenog stručnjaka.
4. Kako biste izbegli bilo kakav rizik, nemojte nepropisno odlagati ovaj proizvod.
5. Čistite ga suvom krpom.
6. Nemojte postavljati ovaj proizvod u blizini izvora toplote ili izlagati direktnoj sunčevoj svetlosti.
7. Nemojte metati metalne predmete u uređaj jer postoji rizik od kratkog spoja.
8. Da biste izbegli rizik, nemojte postavljati metalne predmete između punjača i mobilnog uređaja tokom punjenja.
9. Nemojte koristiti mobilne uređaje sa metalnim kućištem.