 
 
 


USER MANUAL MULTI KEY TAG   	Overview introduction The device integrates Google Find My Device Network and Apple Find My Network providing a secure and user-friendly solution for finding belongings. Collaborative positioning is carried out by leveraging a vast anonymous network composed of Android and Apple devices. It can easily locate keys, wallets, and more, with security as its top priority. Designed for user convenience, it helps you say goodbye to lost items and simplifies daily life. How To Pair (iOS device) Note: iOS or macOS with the latest version. iOS Pairing Name: Sling tag 1.1 Place the device next to your Apple device like iPhone. 1.2 Turn on Bluetooth on iPhone and connect to the Internet. 1.3 Press and hold the button for 2 seconds, and you will hear a beep indicating successful power-on. 1.4 Open the 'Find My' app. 1.5 In 'Find My' app, Tap '+', then 'Add Other Item'. 1.6 Once the device is located, tap 'connect'. 1.7 Enter a name and choose an emoji for the device. Tap 'Continue'. 1.8 Find My will ask for confirmation to add the device to your Apple ID. Tap 'Agree'. 1.9 Tap 'Finish' and the device will be set up and ready to be used.	How To Pair (Android device) Note: It requires an Android smartphone that supports Google Play Services and runs on Android 9.0 or later. Android Pairing Name: Smart Tag. 2.1 Search for "Find Hub" in the Google Play Store, download and install it. 2.2 Ensure that your phone has location services enabled, Bluetooth turned on, is connected to the internet, logged into a Google account, and has the "Find My Device" feature activated. 2.3 Open "Find Hub" app. 2.4 Press and hold the button for 2 seconds, and you will hear a beep indicating successful power-on. 2.5 Within a few seconds, a pop-up window with a name and image will automatically appear at the bottom of the phone screen. Tap "Connect". 2.6 When the "Use Responsibly" pops up on your phone, tap "Accept and Continue" – the device will emit a "beep-beep" melody. 2.7 Tap "Done" to complete the pairing successfully. Battery The device contains a coin shaped battery. During the product's lifespan, it may be necessary to replace the battery. By observing the correct negative and positive connections, only replace batteries of the same type (CR2032) and rating.	Battery replacement 3.1 Rotate counterclockwise to open the back cover. 3.2 Replace a new battery. 3.3 Turn clockwise to close the back cover. Additional Tips 4.1 To switch from working mode to disabled mode (Flight Mode), simply power off the device: press and hold the button for approximately 7 seconds, then release it once the device emits a beep pattern of "beep, beep-beep, beep-beep-beep". 4.2 To switch from disabled mode (Flight Mode) to working mode, please power on the device again: press and hold the button for approximately 2 seconds, then release it once the device emits a single "beep"; the device will enter pairing mode, and note that if no connection is established within 2 minutes, it will time out and require a restart. 4.3 Factory Reset: Press and hold the button – do not release it after hearing the continuous beep pattern of "beep, beep-beep, beep-beep-beep"; keep holding until a long beep is heard, then release. Note that a timeout will occur after 2 minutes. 4.4 To remove this device from your Apple device: Open the "Find My" app, select "Items", tap on the device, then scroll down and tap "Remove This Device". 4.5 To remove this device from your Android device: Open the "Find My Device" app, tap on the device you want to remove,	then tap the "Settings" button in the top-right corner. Tap "Remove from Find My Device" at the bottom of the interface, and then tap the "Remove" button. Once the device is removed successfully, it will emit a "beep-beep" prompt, and a "Device Removed" pop-up will appear on your phone. 4.6 If this device fails to connect to the App, follow the instructions in Section 4.3 to perform a factory reset, then restart the pairing process. Important matters The device contains delicate electronic parts, including a battery to avoid damage, loss of function, or potential harm, please refrain from dropping, hitting, puncturing, crushing, disassembling, exposing it to extreme heat or liquids, or placing it in areas with a high concentration of industrial chemicals.  WARNING: Do not swallow the battery; There is a chemical burn hazard. Choking Hazard Warning The device, its battery compartment door, the battery itself, and the case may pose a choking hazard or cause injury to small children. Please keep these items out of reach of young children.	The device, the battery hatch, the battery itself, and the enclosure may pose a choking hazard or cause injury to young children. Keep these out of the reach of small children. Medical Device Interference The device contains components and radios that emit electromagnetic fields, as well as magnets. These elements may potentially interfere with pacemakers, defibrillators, or other medical devices. To ensure safety, maintain a safe distance between your medical device and the device. We strongly advise consulting your physician and the manufacturer of your medical device for information that is specific to your situation. If you suspect that the device is interfering with your pacemaker defibrillator or any other medical device, discontinue its use immediately. Important Handling Guidelines Its normal for the device to show discoloration with regular use. To clean it, use a soft, dry, lint-free cloth. Avoid applying pressure with sharp objects on the rubber seal or the battery terminal contacts inside the device. Do not allow moisture to enter any openings or use aerosol sprays, solvents or abrasive materials to clean the device.	Legal notice Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
---	--	--	--	---	---	--

UPUTSTVO MULTI KEY TAG   	Uvodni pregled Ovaj uređaj integriše Google Find My Device mrežu i Apple Find My mrežu, pružajući bezbedno i jednostavno rešenje za pronalaženje ličnih stvari. Zajedničko pozicioniranje se vrši korišćenjem ogromne anonimne mreže koju čine Android i Apple uređaji. Može lako locirati ključeve, novčanike i još mnogo toga, uz bezbednost kao glavni prioritet. Dizajniran za udobnost korisnika, pomaže vam da se oprostite od izgubljenih stvari i pojednostavljuje svakodnevni život. Kako upariti uređaj (iOS uređaj) Napomena: Koristite iOS ili macOS sa najnovijom verzijom sistema. Naziv za iOS uparivanje: Sling tag Postavite uređaj pored vašeg Apple uređaja (npr. iPhone). Uključite Bluetooth na iPhone-u i povežite se na internet. Pritisnite i držite dugme 2 sekunde dok ne čujete zvučni signal (bip) koji označava da je uređaj uključen. Otvorite aplikaciju "Find My" U aplikaciji dodirnite znak '+', a zatim 'Add Other Item' (Dodaj drugu stavku). Kada uređaj bude lociran, dodirnite 'Connect' (Poveži). Unesite ime i izaberite emoji za uređaj. Dodirnite 'Continue' (Nastavi). Aplikacija će tražiti potvrdu za dodavanje uređaja na vaš Apple ID. Dodirnite 'Agree' (Slažem se). Dodirnite 'Finish' (Završi) i uređaj će biti podešen i spreman za upotrebu.	Kako upariti uređaj (Android uređaj) Napomena: Neophodan je Android pametni telefon koji podržava Google Play usluge i koristi Android 9.0 ili noviju verziju. Naziv za Android uparivanje: Smart Tag. 2.1 Potražite "Find Hub" u Google Play prodavnici, preuzmite je i instalirajte. 2.2 Proverite da li su na vašem telefonu omogućene usluge lokacije, uključen Bluetooth, da li je povezan na internet, prijavljen na Google nalog i da li je aktivirana funkcija "Find My Device". 2.3 Otvorite aplikaciju "Find Hub". 2.4 Pritisnite i držite dugme 2 sekunde; čućete zvučni signal (bip) koji označava da je uređaj uspešno uključen. 2.5 U roku od nekoliko sekundi, na dnu ekrana telefona automatski će se pojaviti iskačući prozor sa imenom i slikom. Dodirnite "Connect" (Poveži). 2.6 Kada se na telefonu pojavi poruka "Use Responsibly" (Koristite odgovorno), dodirnite "Accept and Continue" (Prihvati i nastavi) – uređaj će emitovati "bip-bip" melodiju. 2.7 Dodirnite "Done" (Gotovo) da biste uspešno završili uparivanje. Baterija Uređaj sadrži bateriju u obliku novčića. Tokom radnog veka proizvoda, možda će biti neophodno zameniti bateriju. Prateći ispravne negativne i pozitivne spojeve, menjajte baterije isključivo istim tipom (CR2032) i istom jačinom.	Zamena baterije 3.1 Okrenite zadnji poklopac suprotno od kazaljke na satu da biste ga otvorili. 3.2 Zamenite staru bateriju novom. 3.3 Okrenite zadnji poklopac u smeru kazaljke na satu da biste ga zatvorili. Dodatni saveti 4.1 Da biste prebacili sa radnog režima na onemogućeni režim (Režim letenja/Flight Mode), jednostavno isključite uređaj: pritisnite i držite dugme otprilike 7 sekundi, a zatim ga pustite kada uređaj emituje niz zvučnih signala u ritmu "bip, bip-bip, bip-bip-bip". 4.2 Da biste prebacili iz onemogućenog režima (Flight Mode) u radni režim, ponovo uključite uređaj: pritisnite i držite dugme otprilike 2 sekunde, a zatim ga pustite kada uređaj emituje jedan "bip"; uređaj će ući u režim uparivanja. Napomena: ako se veza ne uspostavi u roku od 2 minuta, vreme će isteći i biće potrebno ponovno pokretanje. 4.3 Fabričko resetovanje (Factory Reset): Pritisnite i držite dugme – nemojte ga puštati nakon što čujete kontinuirani niz zvukova "bip, bip-bip, bip-bip-bip"; nastavite da držite dok ne čujete dugačak zvučni signal, a zatim pustite. Imajte na umu da će nakon 2 minuta doći do isteka vremena.	4.4 Da biste uklonili ovaj uređaj sa vašeg Apple uređaja: Otvorite aplikaciju "Find My", izaberite "Items" (Stavke), dodirnite uređaj, a zatim skrolujte naniže i dodirnite "Remove This Device" (Ukloni ovaj uređaj). 4.5 Da biste uklonili ovaj uređaj sa vašeg Android uređaja: Otvorite aplikaciju "Find My Device", dodirnite uređaj koji želite da uklonite... ...zatim dodirnite dugme "Settings" (Podešavanja) u gornjem desnom uglu. Dodirnite "Remove from Find My Device" (Ukloni iz aplikacije Pronađi moj uređaj) na dnu interfejsa, a zatim dodirnite dugme "Remove" (Ukloni). Kada se uređaj uspešno ukloni, on će emitovati zvučni signal "bi-bi", a na vašem telefonu će se pojaviti iskačući prozor sa porukom "Device Removed" (Uređaj uklonjen). 4.6 Ako ovaj uređaj ne uspe da se poveže sa aplikacijom, pratite uputstva u odeljku 4.3 da biste izvršili fabričko resetovanje, a zatim ponovo pokrenite proces uparivanja. Važne napomene Uređaj sadrži osetljive elektronske delove, uključujući bateriju. Da biste izbegli oštećenja, gubitak funkcije ili potencijalnu štetu, uzdržite se od ispuštanja, udaranja, probijanja, gnječenja, rastavljanja, izlaganja ekstremnoj toploti ili tečnostima, ili postavljanja u područja sa visokom koncentracijom industrijskih hemikalija.	 UPOZORENJE: Nemojte gutati bateriju; Postoji opasnost od hemijskih opekotina. Upozorenje na opasnost od gušenja Uređaj, poklopac odeljka za bateriju, sama baterija i kućište mogu predstavljati opasnost od gušenja ili izazvati povrede kod male dece. Držite ove predmete van domašaja male dece. Bezbednosna uputstva Uređaj, poklopac baterije, sama baterija i kućište mogu predstavljati opasnost od gušenja ili izazvati povrede kod male dece. Držite ove delove van domašaja dece. Smetnje kod medicinskih uređaja Uređaj sadrži komponente i radio-predajnike koji emituju elektromagnetna polja, kao i magnete. Ovi elementi mogu potencijalno ometati rad pejsmejкера, defibrilatora ili drugih medicinskih uređaja. Kako biste osigurali bezbednost, održavajte bezbednu udaljenost između vašeg medicinskog uređaja i ovog uređaja. Strogo savetujemo da se konsultujete sa svojim lekarom i proizvođačem vašeg medicinskog uređaja za informacije specifične za vašu situaciju.	Ako posumnjate da uređaj ometa rad vašeg pejsmejкера, defibrilatora ili bilo kog drugog medicinskog uređaja, odmah prekinite sa njegovom upotrebom. Važne smernice za rukovanje Normalno je da uređaj promeni boju tokom redovne upotrebe. Za čišćenje koristite meku, suhu krpu koja ne ostavlja dlačice. Izbegavajte pritisicanje gumenog zaptivača ili kontakata baterije unutar uređaja oštrim predmetima. Ne dozvolite da vlaga prođe u otvore i ne koristite aerosolne sprejeve, rastvarače ili abrazivna sredstva za čišćenje uređaja. Pravno obaveštenje Upotreba oznake „Works with Apple“ znači da je proizvod dizajniran da radi specifično sa tehnologijom navedenom na oznaci i da je proizvođač proizvoda potvrdio da on ispunjava specifikacije i zahteve Apple Find My mreže. Apple nije odgovoran za rad ovog uređaja ili upotrebu ovog proizvoda, niti za njegovu usklađenost sa bezbednosnim i regulatornim standardima. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS i watchOS su žigovi kompanije Apple Inc. IOS je žig ili registrovani žig kompanije Cisco u SAD i drugim zemljama i koristi se pod licencom.
---	--	---	---	---	--	--