 


ENG

User manual

SAMBA 38.011

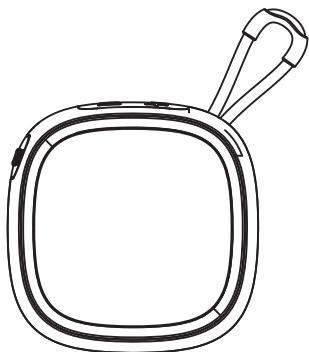

Product specifications:

 
- Pairing name: SAMBA
- BT: 5.3
- Working distance: 10M
- SNR: ≥ 85 db
- Battery: 3.7V 500mAh
- Normal volume playing time: 1H
- Speaker driver : $\varnothing$ 52 mm
- Power : 4 Ω /5W
- Frequency response: 120 Hz-18KHz
- Unit size: 90.3mm*90.3mm*53.5mm
- Unit weight: 218g
- Charging: 5V/500mA

Product feature:

1. International advanced wireless, chip and circuit design techniques support all wireless devices.
2. With Hi-Fi speaker, to make sure the clear and bright sound.
3. The wireless working distance is 10 meters, can connect all out wireless devices (cell phone/ Tablet PC/ TV) to play music.

4. Support Micro SD card and USB card, play MP3 format audio.
5. With FM function, can search radio station broadcast automatically.
6. Built-in Mic for handsfree call.
7. support TWS

Key and slot function:

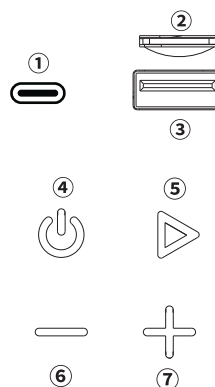


1. DC 5V slot: Use the standard TYPE-C USB charging cable for power charging.
2. TF slot: It can decode and play MP3/WAV format audio when put TF card into the slot.
3. USB slot: It can decode and play MP3/WAV format audio when put the USB card into the slot.
4. Power switch: long press for "on/off". when play music (USB card/ TF card/FM/ BT), press short to switch USB/TF/FM/ BT.
5. When play music(USB card/ TF card/BT), press short for "play/pause". under BT mode with mobile paired, when coming call, press short to answer a call, press again to hand up. (in FM mode, press short to search station automatically, press again to stop searching); Keep the TWS speaker under BT mode without pairing, press the "play/pause" key for 4 seconds either of the speaker until hear a hint and meantime the

- button light stop flashing, now is in TWS mode, then can pair the mobile.
6. When play music, Press short for last song, long press to turn down the volume.
 7. When play music, press short for next song, long press to turn up the volume.
- NOTE: In the FM mode, put in the charging cable to get better FM radio station.

SRB

Uputstvo za upotrebu

 SAMBA 38.011

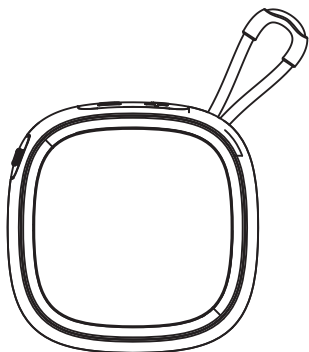

Specifikacije:

 
- Ime za uparivanje: SAMBA
- BT: 5.3
- Radna udaljenost: 10M
- SNR: ≥ 85 db
- Baterija : 3.7V 500mAh
- Vreme reprodukcije normalne jačine zvuka: 1H
- Drajver zvučnika: $\varnothing$ 52 mm
- Snaga: 4 Ω /5W
- Frekventni odziv: 120 Hz - 18 KHz
- Dimenzija: 90.3mm*90.3mm*53.5mm
- Težina: 218g
- Punjenje: 5V/500mA

Karakteristike proizvoda:

1. Napredni dizajn bežičnog čipa i kola, podržava sve bežične uređaje.
2. Sa Hi-Fi zvučnikom, za jasan i precizan zvuk.
3. Bežični domet je 10 metara, može se povezati na sve bežične uređaje koji reprodukuju muziku (mobilni telefon/ Tablet PC/TV).

4. Podržava Micro SD kartice i USB kartice, reprodukuje zvuk u MP3 formatu.
5. Sa FM funkcijom, možete pretraživati radio stanice automatski.
6. Ugrađeni mikrofoni za handsfree pozive.
7. Podržava TWS

Funkcije dugmića i portova:

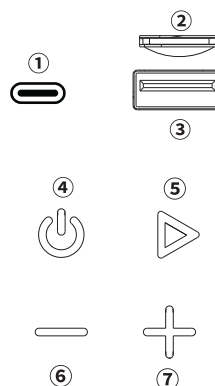

1. DC 5V ulaz: Koristite standardni TYPE-C USB kabal za punjenje uređaja.
2. TF slot: Može da dekodira i reprodukuje zvuk u MP3/WAV formatu kada stavite TF karticu u slot.
3. USB slot: Može da dekodira i reprodukuje zvuk u MP3/WAV formatu kada stavite USB karticu u slot.
4. Prekidač za napajanje: Dugo pritisnite da biste uključili/isključili uređaj. Kada puštate muziku (USB kartica/TF kartica/FM/BT), kratko pritisnite dugme kako biste prebacili izvor muzike USB/TF/FM/BT.
5. Kada puštate muziku (USB kartica / TF kartica/BT), pritisnite kratko za „play/pause“. Kada je uređaj u Bluetooth režimu i uparen sa mobilnim telefonom, prilikom dolaznog poziva, pritisnite kratko da se javite na poziv, pritisnite ponovo da prekinete (u FM režimu, kratko pritisnite za pretragu stanica automatski, pritisnite ponovo da zaustavite u pretragu).

- Da zadržite TWS zvučnik u BT režimu bez uparivanja, pritisnite taster „play/pause“ na 4 sekunde dok ne čujete zvučni signal. U međuvremenu svetlo na dugmetu će prestati da sija a uređaj će ući u TWS režim. Nakon toga ga uparite sa telefonom.
6. Tokom reprodukcije muzike, kratko pritisnite dugme za prethodnu pesmu, a dugo pritisnite za smanjivanje jačine zvuka.
 7. Tokom reprodukcije muzike, kratko pritisnite dugme za sledeću pesmu, a dugo pritisnite za pojačavanje jačine zvuka.

NAPOMENA: U FM režimu, priključite kabal za punjenje da biste dobili bolji signal Radio stanica.