

ENG

User manual

SONG 38.010



Please read the instructions carefully when using this product

Specifications:

Pairing name: SONG
Bluetooth Version: V5.3
Bluetooth Protocol: A2DP, AVRCP, IHeadset, Handsfree
Frequency Range: 2400.0-2483.5 MHz
Working Scope: 10 meters
Charging Time: about 2 hours

Features:

Status	Operation	LED light	Prompt voice reminding	Remarks
Turn on	Keep press homestay 2 Sec	Green light flash	Voice prompt	
Turn off	Keep press homestay 4 Sec	White light flash	Voice prompt	
TWS pairing	Earbuds white+green light flash alternately when pick up from charging case; then red+white+green alternately flash, the indicator light of the auxiliary earphone is off (Open mobile and search then click, will hear "connected" voice prompt)	Main earbud white+green alternately flash, the indicator light of the auxiliary earphone	Voice prompt	
TWS pairing			Voice prompt	
Call free ring	Short press homestay		Phone number reminding	
Answer call	Short press homestay			
End call	Short press homestay			
Refuse call	2 sec press homestay			
Voice control	Long press homestay			Mobile compatible
Music play	Short press homestay			
Music pause	Short press home key			
Music track	Double-click R earbuds to next song, double-click L earbuds for previous song			
Volume control	Three-click R to plus volume, Three-click L to reduce volume		Max volume prompt voice	

Troubleshooting

If you are unable to connect your headset with mobile phone, please try following steps:
Ensure your headset is turned on and fully charged.
Ensure the headset has paired with your mobile phone.
Ensure your mobile phone's Bluetooth is activated.
Ensure the headset is moving without any barrier.
If all above steps can't solve the problems, please charge the headset, or restart your mobile phone.
If the volume is low or can't be adjusted, it is because some parts of Android mobile phones can't control the volume of Bluetooth device.
Please do as following: Turn up/Turn down, the of volume of mobile phone and earphone are required to operate +/- independently.

Maintenance and Repair

Turning off your headset before placing it in your pocket or bag, if the MBF is accidentally activated, your mobile phone may place an unintended call.
Do not expose the headset to liquid, moisture or humidity as it is not waterproof.
Do not use abrasive cleaning solvents to clean the headset.
Do not expose the headset to extreme temperature conditions, the best store temperature range is from -10 to +50C, otherwise the life of the headset will be influenced.
Do not dispose of the headset in a fire as it may result in an explosion.
Do not bring your headset with a sharp objects as this will cause scratched and damage.
Do not plug any objects into the headset, which cause the internal components.
Do not attempt to disassemble the headset.
If you don't use the headset for a long time, please place it a dry place.
Charge the headset on time if not use it over 1 month, which make sure the stability of battery and performance.
Stay away the big change of temperature and dusty place.
Please don't use the adaptor over 5V 1A output when charging for headset.
Don't use the fast charger in case of the damage for headset battery.

SRB

Uputstvo za upotrebu

SONG 38.010



Pročitajte uputstvo pre upotrebe proizvoda

Specifikacije:

Ime za uparivanje: SONG
Bluetooth verzija: V5.3
Bluetooth protokol: A2DP, AVRCP, IHeadset, Handsfree
Frekventni opseg: 2400.0-2483.5 MHz
Radni opseg: 10 metara
Vreme punjenja: oko 2 sata

Upotreba:

Status	Operacija	LED svetlo	Glasovna obavestjenja	Primedba
Pukanje	Držite dugme 2 sekunde	Zakrno svetlo trepti	Glasovna notifikacija	
Galereja	Držite dugme 4 sekunde	Belo svetlo trepti	Glasovna notifikacija	
Uparivanje	Isključite slušalice iz kućice, Uključite Bluetooth opciju na vašem mobilnom telefonu i potvrdite povezivanje. Nakon SONG povežite ih.	Na glavnoj kućici = crveni svetlo nezavršeno treptanje.	Glasovna notifikacija	
Uporeno			Glasovna notifikacija	
Diskuzi poziv			Nezavršeno broja telefona	
Odgovor na poziv	Kratko pritisnite dugme			
Završetak razgovora	Kratko pritisnite dugme			
Odbijanje poziva	Držite dugme 2 sekunde			
Glasovna kontrola	Dugo držite dugme			Kompatibilan sa mobilnim uređajima
Musika - play	Kratko pritisnite dugme			
Musika - pause	Kratko pritisnite dugme			
Peeme	Naredna pesma - dugi klik na dugme na desnoj slušalici			
Vod	Prethodna pesma - dugi klik na dugme na levoj slušalici		Glasovna notifikacija za maksimalno pojačanje	
Popačavanje	3x dugme na desnoj slušalici			
Utišavanje	3x dugme na levoj slušalici			

Rešavanje problema:

Ako ne možete da povežete slušalice sa mobilnim telefonom pokušajte sledeće korake:

Uverite se da su slušalice upaljene i potpuno napunjene.

Uverite se da su slušalice uparene sa vašim mobilnim telefonom.

Uverite se da je Bluetooth na vašem mobilnom telefonu aktiviran.

Ako svi gore navedeni koraci ne mogu da reše probleme, napunite slušalice ili ponovo pokrenite mobilni telefon.

Ako je jačina zvuka mala ili se ne može podesiti, to je zato što Android mobilni telefon ne kontroliše jačinu zvuka uparenog uređaja.

Uradite sledeće: Pojačajte/Utišajte zvuk mobilnog telefona i slušalica, neophodno je da pojačavanje/utišavanje radi nezavisno.

Održavanje i popravka:

Isključite slušalice pre nego što ih stavite u džep ili torbu, ako se MBF slučajno aktivira, vaš mobilni telefon može uputiti nenamerni poziv.

Ne izlažite slušalice tečnostima i vlazi jer nije vodootporna.

Nemojte koristiti abrazivni rastvarač za čišćenje da biste očistili slušalice.

Ne izlažite slušalice ekstremnim temperaturama, najbolji temperaturni opseg skladištenja je od -10 do +60C, u suprotnom može doći do oštećenja slušalica.

Ne bacajte slušalice u vatru jer može dovesti do eksplozije.

Ne nosite slušalice sa oštrim predmetima jer će to izazvati ogrebotine i oštećenja.

Ne uključujte nikakve uređaje u slušalice.

Ne pokušavajte da rastavite slušalice.

Ako ne koristite slušalice duže vreme, odložite ih na suvo mesto.

Napunite slušalice na vreme ako ih ne koristite više od 1 meseca, time obezbeđujete stabilnost baterije i performanse.

Klonite se velikih temperaturnih promena i prašnjavih mesta.

Nemojte koristiti adapter sa izlaznom snagom većom od 5V 1A za punjenje slušalica. Nemojte koristiti brzi punjač u slučaju da su baterije slušalica oštećene.