

# USER MANUAL

Model:

## ODIN 10 PLUS 38,213,10

This is a useful emergency phone charger. You can use it to charge your digital devices anytime and anywhere.

### LED indicator:

- Switch part: Press button 1 time to turn on the light; After 40 seconds the light will turn off automatically.
- Power quantity indicator light: the digital percentage indicates the current power quantity.
- When power bank charging, Digital shows 100% and keep bright when power bank charged full.
- When power bank discharging ,Digital shows 0% and keep bright when power bank runs out.

### Specifications:

Capacity: 10000 mAh 3.7V 37Wh

- 1.Type-C-1 Input DC5V/2A
- 2.Type-C-2 Output DC5V/2A
- 3.USB Output DC5V/2A
4. USB cable receptacle Input DC5V/2A
5. Cable With Type-C/Lightning Output: DC 5V/2A

Battery: Li-Polymer battery

Material: ABS+PC



### Charge the power bank

- The two methods can charge the power bank at the same time, and the maximum input power is DC5V/2A.
- You can choose the corresponding cable to charge the mobile phone devices with different port.

### Attention!

- This product is not waterproof. Please do not wet it or use it during heavy rain.
- If the product accidentally falls into the water, please use a clean cloth to absorb the water on the product's surface, and do not switch on the device immediately.
- Please do not throw the power bank into fire to avoid explosion.
- Do not use or store the power bank in a hot (over 50 degree Celsius), wet or corrosive environment.
- Please keep out of reach of children. Do not use leave product unattended whilst in use.
- Do not open the device - shock hazard.
- Check whether the power bank is suitable for your mobile phone or electronic equipment prior to use
- If the power bank has not been used for a long time, the power of the built-in battery can be depleted. To solve this problem, charge the charger for 2- 3 hours. When it has some power, the charger will function again.
- In order to avoid damaging the battery, please use it at least once in every 6 months.
- Do not use the mobile phone whilst the battery is being charged with the power bank and do not charge the power bank overnight.
- When connecting the power bank to the device, please use the charging cables and connectors provided from the authorized maker. The use of charging cables or connectors from unauthorized maker may cause severe or fatal injuries and property loss and damage to the product and the device,
- Power Bank is compatible with Apple® Product USB cable/adaptor (Not Included)
- Do not leave the power bank operating in airtight space under sunshine, may cause the maximum operating temperature to be exceeded.
- Keep the power bank idle when recharging, do not keep charging other device and recharging power bank at the same time.

# UPUTSTVO ZA UPOTREBU

Model:

## ODIN 10 PLUS 38,213,10

Ovo je koristan punjač telefona za hitne slučajeve. Možete ga koristiti za punjenje digitalnih uređaja bilo kada i bilo gde.

### LED indikator:

- Preklopni deo: Pritisnite dugme 1 put da uključite svetlo, nakon 40 sekundi svetlo će se automatski isključiti.
- Indikator količine snage digitalni procenat pokazuje trenutnu količinu snage.
- Kada se power bank puni, digital pokazuje 100% i ostaje svetao kada je power bank napunjen do kraja.
- Kada se power bank isprazni digital pokazuje 0% i ostaje svetao kada se power bank isprazni.

### Specifikacije:

Kapacitet: 10000 mAh 3,7V 37Wh

1. Tip-C-1 Ulaz DC5V/2A
2. Tip-C-2 Izlaz DC5V/2A
3. USB Izlaz DC5V/2A
4. UUSB utičnica za kabl Ulaz DC5V/2A
5. Kabl sa Tip-C/Lightning Izlaz: DC 5V/2A

Baterija: Litijum-polimerska baterija

Materijal: ABS+PC



### Napunite power bank

- Ova dva metoda mogu istovremeno puniti pomoćnu bateriju, a maksimalna ulazna snaga je DC5V/2A.
- Možete odabrati odgovarajući kabl za punjenje mobilnih telefona sa različitim portovima,

### Pažnja!

- Ovaj proizvod nije vodootporan. Nemojte ga kvasiti ili koristiti tokom jake kiše.
- Ako proizvod slučajno padne u vodu, koristite čistu krpu da upije vodu sa površine proizvoda i nemojte odmah uključivati uređaj.
- Nemojte bacati power bank u vatru da biste izbegli eksploziju.
- Nemojte koristiti niti čuvati power bank u vrućem (preko 50 stepeni Celzijusa), mokrom ili korozivnom okruženju.
- Čuvajte van domašaja dece. Ne ostavljajte proizvod bez nadzora dok je u upotrebi.
- Ne otvarajte uređaj - opasnost od strujnog udara.
- Pre upotrebe proverite da li je power bank prikladan za vaš mobilni telefon ili elektronsku opremu
- Ako se power bank nije koristio duže vreme, napajanje ugrađene baterije može se isprazniti.  
Da biste rešili ovaj problem, puniti punjač 2-3 sata. Kada ima malo snage, punjač će ponovo funkcionisati.
- Da biste izbegli oštećenje baterije, koristite je najmanje jednom u 6 meseci.
- Nemojte koristiti mobilni telefon dok se baterija puni pomoću power bank-a i ne puniti power bank preko noći.
- Kada povezujete power bank sa uređajem, koristite kablove za punjenje i konektore koje ste dobili od ovlašćenog proizvođača.  
Upotreba kablova za punjenje ili konektora od neovlašćenog proizvođača može izazvati teške ili smrtonosne povrede i gubitak imovine i oštećenje proizvoda i uređaja.
- Power Bank je kompatibilan sa USB kablom/adaptrom Apple® proizvoda (nije uključen) temperatura koju treba prekoračiti,
- Ne ostavljajte power bank da radi u hermetički zatvorenom prostoru pod suncem, to može prouzrokovati maksimalan rad.
- Ostavite power bank neaktivan tokom punjenja, nemojte nastaviti da puniti drugi uređaj i istovremeno puniti power bank.