



User manual

LOCATEPRO | 38.182

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.


Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

1. Getting Started

To prevent accidental shutdowns that could result in the device being unable to locate, we have re-upgraded the startup and shutdown methods.

1.1.Power On/Off

1.1.1 Power On:Hold the circular dot on the device's power button for 3 seconds, and when you hear a ring-ring chime, it indicates that the device has been powered on. (Refer to the diagram)

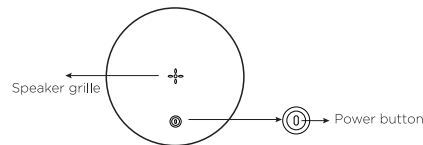

1.1.2 Power off:
Press the button 5 times in succession and you will hear a beep. The device is powered off.

Remark: setting a shutdown timer are designed to prevent accidental shutdowns, ensuring the device can continue to locate effectively.

1.2.Check For Updates

To use the Apple® Find My® app to locate item Locator, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find My app on Apple Watch requires the latest version of watchOS®.

2. Add Your Locator

2.1 Start the App

- 2.1.1 Open Find My app on your supported iPhone® or iPad®
- 2.1.2 Allow notifications from the app.

2.2 Connect your Locator

- 2.2.1 Power on your Locator, select the "Items" tab then tap the "Add Item" tab,tap "Other Supported Items".
- 2.2.2 Make sure your Item Locator is close to your phone. Wait... until you see the pop-up "LOCATEPRO" then tap "Connect".
- 2.2.3Choose a recognizable name and emoji for your item Locator and tap "Continue".

2.2.4 Find My will ask for confirmation to add your Locator for your Apple ID - tap "Continue".

2.2.5 Tap "Finish" and your Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your keys,

3. Function introduction

3.1 Locate Your Item

When your item is nearby ,tap "Play Sound" to make your Locator beep, then you can find it. When it is out of rang, you can find Locator's Last Known Location.

3.2 Notifications

You will receive a notification when you leave your Locator behind when it's no longer in range of your device.
Note: "Notify When Found" can only be activated when your Locator is out of range.

3.3 Share items

The people you've shared it with will be able to locate it, and they won't receive unidentified-tracking notifications.
To use Share Items, make sure you and your friends have installed the iOS 17, iPadOS 17, or macOS 14 Sonoma public betas or newer.

3.4 Lost mode

When your item is lost, enable lost mode, you will receive a notification when location becomes available. You can leave a phone number or email address for the finder of your item to contact you. Note: When "Lost Mode" is enabled, your Locator is locked and no one else can pair with it. And DO NOT REMOVE ITEM in the APP. Your Item Locator will be locked and cannot be used by any person.

3.4 Remove item

Make sure your item is nearby, you can remove item in the app, it should make a ring-ring chime indicating it is removed successfully, then the item can be used by other people.
Note: When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP, otherwise your Item Locator will be locked and no one else can pair with it.

3.5 Factory Reset Your Locator

When your item is out of the range of your phone, and your Locator is removed from Find My app, the device can't be used by other people. you need reset your locator, then it can be used by other people.
How to restore factory settings: Press the function button two times, you can hear one beep. Then Press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime.

3.6 Unwanted Tracking Detection

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- (1) If now the device is reset, The device can be repaired to a new Apple ID account as a new device. If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1) If you have a iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
 - 2) If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.
- These features were created specifically to discourage people from trying to track you without your knowledge.

4. Specifications



Battery: CR2025 3V (Replaceable)
Working voltage: 2.8V-3.3V
Capacity: 170mAh
Wireless range: 10-30 meters
Buzzer: Max 100 DB
Product size: Ø 32 x 7.9 mm

5. Button function

- 5.1 Power on (Find my function is on).
Press the function button 3 seconds to turn it on, it should a ring-ring chime indicating it is powered on.
If the product is not linked with your apple ID, it will be closed within 10 minutes automatically. You need to trigger the find my function again to continue pairing.
- 5.2 Power off (Find my function is off).
Press the button 5 times in succession and you will hear a beep. The device is powered off.
- 5.3 Enable learn more information query.
Press the function button two times rapidly and you will hear a confirmation sound.This operation will be displayed on the find my app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.
- 5.4 Restore factory settings.
Double-click and hear the prompt tone (make sure you hear the ring tone), press again and hold until you hear the ring tone, the device has been reset.

6. Battery and Lanyard replacement

- 6.1 Insert the shell opening with a shell opening tool.
- 6.2 Rotate the shell opening tool 90 degrees to open the shell.
- 6.3 Use your fingernails at the small gap on the side of your Item Locator to carefully open the case.
- 6.4 Replace the battery with a new CR2025 battery 3V. (Positive pole with the text upward).

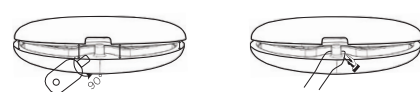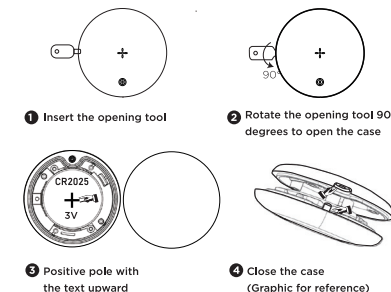

- ① Open the shell as diagrammatic sketch.(No need to fully open the entire shell)
- ② Put the lanyard into column, then close the cover.

FAQ


1. Why find my device's location not updating.
There are two principles for product positioning reporting. If there are many Apple devices nearby, each new user in the vicinity of this device will report their location, typically within 2-5 minutes. If the device has not moved, the built-in sensors will detect this, and the device will enter a sleep mode, with the reported location ranging from 30 minutes to several hours. Don't worry, the location you see might be from 30 minutes or several hours ago, but it's very likely that the item hasn't moved, and the location you see is the last known location.
2. When pairing a device with Find My app, the phone will link to the Apple server, Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WiFi and mobile. The first pairing may take a long time, please wait patiently. 2. Reset your item. 3. Repair with Find my APP.

Privacy and Security

Your Locator sends out a secure Bluetooth signal that can be detected by nearby devices in the Find My network. These devices send the location of your Locator to iCloud – then you can go to the Find My app and see it on a map. The whole process is anonymous and encrypted to protect your privacy.

WARNING

1. Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- 2.Even used batteries may cause severe injury or death.
- 3,Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate.
- Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. The compatible battery type is CR2025.
7. The nominal battery voltage: DC 3V
8. Ensure the batteries are installed correctly according to polarity(+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries,and keep them away from children.

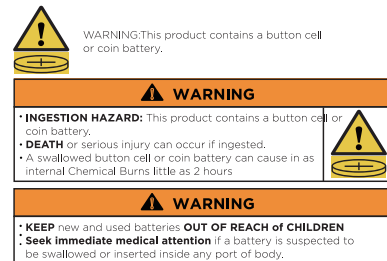

Battery type: CR2025. Battery voltage: 3V.
Keep in original package until ready to use;
Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.





Uputstvo

LOCATEPRO | 38.182

Apple® Find My® mreža pruža jednostavan i bezbedan način da pronađete kompatibilne lične predmete pomoću aplikacije Find My na vašem iPhone®-u, iPad®-u, Mac®-u ili pomoću aplikacije Find Items na Apple Watch®-u.

Za korišćenje aplikacije Apple Find My radi pronalaženja ovog predmeta preporučuje se najnovija verzija iOS, iPadOS ili macOS operativnog sistema. Aplikacija Find Items na Apple Watch-u zahteva najnoviju verziju watchOS-a.

Oznaka „Works with Apple” znači da je proizvod posebno dizajniran da radi sa tehnologijom naznačenom u oznaci i da je proizvođač potvrdio da proizvod ispunjava tehničke specifikacije i zahteve Apple Find My mreže. Apple nije odgovoran za rad ovog uređaja, njegovu upotrebu niti usklađenost sa bezbednosnim i regulatornim standardima.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS i watchOS su zaštićeni znaci kompanije Apple Inc. iOS je žig ili registrovani žig kompanije Cisco u SAD i drugim zemljama, i koristi se pod licencom.

5. Funkcije dugmeta

5.1 Uključivanje uređaja (Find My funkcija je uključena)

Pritisnite funkcijsko dugme i držite ga 3 sekunde da biste uključili uređaj. Čujete zvuk „zvon-zvon”, što označava da je uređaj uključen. Ako proizvod nije povezan sa vašim Apple ID-jem, automatski će se isključiti nakon 10 minuta. U tom slučaju, potrebno je ponovo aktivirati Find My funkciju da biste nastavili upravljanje.

5.2 Isključivanje uređaja
Pritisnite dugme 5 puta zaredom i čujete zvučni signal. Uređaj je isključen.

5.3 Omogućavanje prikaza dodatnih informacija o uređaju
Pritisnite funkcijsko dugme dva puta brzo, čujete zvuk potvrde. Ova radnja će biti prikazana u Find My aplikaciji kako bi osoba koja pronađe uređaj mogla da dobije informacije o uređaju – kao što su kontakt podaci vlasnika (ako je uređaj postavljen u režim „Izgubljeno”) i serijski broj uređaja.


5.4 Vraćanje na fabrička podešavanja
Dvoikliknite i čujete ton upozorenja (obavezno sačekajte da čujete zvučni signal), zatim ponovo pritisnite i držite dok ne čujete signal — uređaj je resetovan.

1. Početak

Da bismo sprečili slučajna isključivanja koja bi mogla dovesti do toga da uređaj ne može da se locira, unapredili smo metode pokretanja i gašenja.

1.1 Uključivanje/Isključivanje uređaja

1.1.1 Uključivanje: Pritisnite i držite dugme za napajanje 3 sekunde. Kada čujete ton zvona, uređaj je uključen.

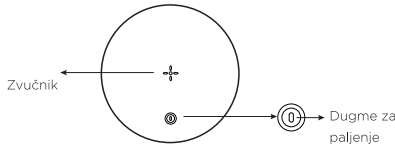

1.1.2 Isključivanje uređaja: Pritisnite dugme 5 puta zaredom i čujete zvučni signal. Uređaj je isključen. Napomena: Podešavanje tajmera za gašenje osmišljeno je da spreči slučajna isključivanja, kako bi uređaj mogao efikasno da nastavi sa lociranjem.

1.2 Provera ažuriranja

Da biste koristili aplikaciju Apple Find My, potrebno je imati najnoviju verziju iOS, iPadOS ili macOS, kao i watchOS na Apple Watch-u.

2. Dodavanje lokatora 2.1 Pokrenite aplikaciju

2.1.1 Otvorite Find My aplikaciju na podržanom iPhone-u ili iPad-u. 2.1.2 Dozvolite notifikacije iz aplikacije.

2.2 Povežite lokator

2.2.1 Uključite lokator, u aplikaciji odaberite karticu „Items”, zatim „Add Item” > „Other Supported Items”. 2.2.2 Približite lokator telefonu. Kada se pojavi iskačući prozor „LOCATEPRO”, dodirnite „Connect”. 2.2.3 Izaberite naziv i emoji za lokator, pa dodirnite „Continue”.

2.2.4 Aplikacija „Find My” će zatražiti potvrdu da dodate vaš Locator na vaš Apple ID – dodirnite „Nastavi”. 2.2.5 Dodirnite „Završi” i vaš Locator će biti podešen i spreman da se poveže sa bilo kojim predmetom koji želite da locirate, na primer, vašim ključevima.

3. Funkcije 3.1 Locirajte predmet

Dodirnite „Play Sound” kako bi lokator počeo da zvoni – lakše ćete ga pronaći. Ako nije u dometu, pronađite ga pomoću opcije „Last Known Location”.

3.2 Obaveštenja

Dobićete obaveštenje kada zaboravite predmet i udaljite se od njega. Opcija „Notify When Found” radi samo kada je lokator van dometa.

3.3 Deljenje uređaja

Možete podeliti lokator sa drugim ljudima. Oni neće dobiti nepotrebne obaveštenja o nepoznatim uređajima. Potrebne su najnovije verzije iOS 17, iPadOS 17 ili macOS 14 Sonoma.

Privatnost i bezbednost

Vaš Locator šalje siguran Bluetooth signal koji mogu detektovati uređaji u blizini unutar Find My mreže. Ti uređaji zatim šalju lokaciju vašeg Locatora na iCloud, gde je možete videti na mapi putem aplikacije Find My. Ceo proces je anoniman i enkriptovan kako bi vaša privatnost bila zaštićena.

UPOZORENJE

Odmah uklonite i reciklirajte ili odložite korišćene baterije u skladu sa lokalnim propisima, i držite ih van domašaja dece. NE bacajte baterije u kućni otpad niti ih spaljujete. Čak i korišćene baterije mogu izazvati ozbiljne povrede ili smrt. Za informacije o tretmanu pozovite lokalni centar za kontrolu trovanja. Ne punjive baterije se ne smeju puniti. Nemojte prisilno prazniti, puniti, rastavljati, izlagati temperaturi iznad 50°C (122°F) niti spaljivati uređaje. To može dovesti do poverda usled curenja, eksplozije ili hemijskih opekotina. Kompatibilna baterija je tipa CR2025. Nazivni napon baterije: DC 3V.

Uverite se da su baterije pravilno postavljene prema polaritetu (+ i -). Nemojte mešati stare i nove baterije, različite marke ili tipove baterija (alkalne, ugljenično-cink, punjive itd.). Ako uređaj nije korišćen duže vreme, uklonite baterije i odmah ih reciklirajte ili odložite prema lokalnim propisima. Uvek pravilno zatvorite pretnac za baterije. Ako se ne može sigurno zatvoriti, prestanite koristiti proizvod, uklonite baterije i držite ih van domašaja dece.

3.4 Izgubljen predmet

Kada izgubite svoj predmet, omogućite režim „Izgubljeno” (Lost Mode); dobićete obaveštenje kada lokacija postane dostupna. Možete ostaviti broj telefona ili email adresu kako bi osoba koja pronađe predmet mogla da vas kontaktira. Napomena: Kada je „Lost Mode” uključen, vaš Locator je zaključen i niko drugi ne može da ga poveže sa svojim uređajem. NE UKLANJAJTE PREDMET iz aplikacije. Locator će ostati zaključen i niko ga neće moći koristiti.

3.4 Izgubljen predmet

Uverite se da je vaš predmet u blizini, zatim ga možete ukloniti u aplikaciji. Trebalo bi da se oglasi zvuk „zvon-zvon”, što označava da je uspešno uklonjen – nakon toga predmet može koristiti druga osoba. Napomena: Kada je režim „Izgubljeno” (Lost Mode) uključen, NEMOJTE UKLANJATI PREDMET iz aplikacije, jer će u suprotnom Locator biti zaključen i niko drugi neće moći da ga poveže sa svojim uređajem.

3.5 Vraćanje na fabrička podešavanja

Kada je vaš predmet van dometa telefona i Locator je uklonjen iz aplikacije Find My, uređaj ne može koristiti niko drugi. Da bi ga druga osoba mogla koristiti, potrebno je da resetujete Locator. Kako da vratite Locator na fabrička podešavanja: Pritisnite funkcijsko dugme dva puta – čujete jedan zvučni signal. Zatim brzo pritisnite dugme četiri puta, a peti put ga pritisnite i držite dok ne čujete zvuk „zvon-zvon”, što označava da je resetovanje uspešno izvršeno.

3.6 Detekcija neželjenog praćenja

Ako se dodate iz Find My mreže, koji je odvojen od svog vlasnika, tokom vremena kreće zajedno s vama, bićete obavešteni na jedan od dva načina:

Ako imate iPhone ili iPad, aplikacija Find My će poslati obaveštenje na vaš Apple uređaj. Ova funkcija je dostupna na iOS ili iPadOS verziji 14.5 ili noviji.

Ako nemate iOS uređaj ili pametni telefon, dodatak iz Find My mreže koji nije uz zvuk vlasnika određeno vreme, emitovaće zvuk kada se pomeri.

Ove funkcije su posebno razvijene kako bi se obeshrabrilo neovlašćeno praćenje i zaštitila vaša privatnost.

4. Specifikacije

Baterija: CR2025 3V (zamenjiva)
Radni napon: 2.8V – 3.3V
Kapacitet: 170 mAh
Bežični domet: 10–30 metara
Zvučni signal (buzzer): Maksimalno 100 dB
Dimenzije proizvoda: Ø 32 x 7.9 mm

u skladu sa uputstvima, može izazvati štetne smetnje u radio-komunikacijama. Međutim, ne postoji garancija da smetnje neće nastati u određenoj instalaciji. Ako ova oprema izaziva štetne smetnje u prijemu radio ili televizijskog signala, što se može proveriti isključivanjem i ponovnim uključivanjem opreme, korisnik se savetuje da pokuša da otkloni smetnje primenom jednog ili više sledećih mera:

Promenite orijentaciju ili položaj antene prijemnika. Povećajte razmak između opreme i prijemnika. Povećajte opremu na utičnicu koja je na drugom električnom krugu od onog na kojem je prijemnik. Obratite se prodavcu ili iskusnom tehničaru za radio/TV uređaje za pomoć. Ovaj uređaj je u skladu sa delom 15 FCC pravila. Rad je uslovljen sledećim uslovima:

(1) Ovaj uređaj ne sme izazivati štetne smetnje, i
(2) Ovaj uređaj mora prihvatiti sve smetnje koje prima, uključujući one koje mogu izazvati neželjeni rad. Sve izmene ili modifikacije koje nisu izričito odobrene od strane odgovorne za usklađenost mogu dovesti do gubitka prava korisnika da koristi ovu opremu. Ova oprema je u skladu sa FCC limitima za izloženost zračenju predviđenim za nekontrolisano okruženje. Uređaj je evaluiran i zadovoljava opšte zahteve za RF izloženost. Uređaj može biti korišćen u uslovima prenosne izloženosti bez ograničenja.

