 
 


USER MANUAL

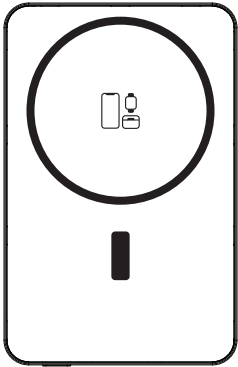

JOIN PD | 38.236

Product diagram

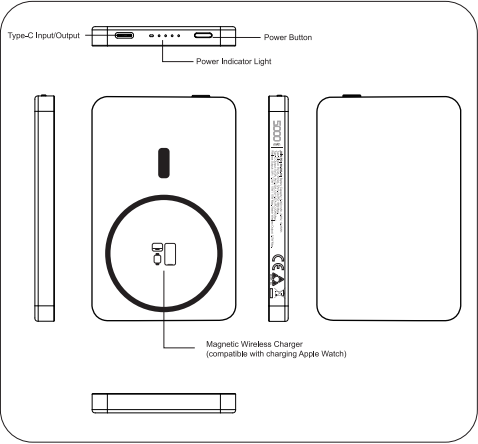

Product Parameters

Item No.:	Join PD 38,236
Battery Capacity:	5000 mAh 3,85V 19,25Wh
Type-C Input:	DC 5V~3A,9V~2A,12V~1.5A 18W Max
Type-C Output:	DC 5V~3A,9V~2.22A,12V~1.67A 20W Max
Wireless Output:	5W / 7.5W / 10W / 15W Max
Watch Wireless Output:	5V~2.5W (Max)
Size:	66 x 103 x 8,8 mm

Charging the power bank

- Before first use **please fully** charge the powerbank.
- Connect the included USB-C cable into the USB-C port on the power bank.
- Connect the other end of the cable to a USB power source such as a wall or car charger.
- The LEDs **will light up while** it is being recharged.
- When **all 4** LEDs are lit the power bank is **fully** charged.

Note: The 5th LED serves as an indicator for the fast charging mode.

Charging your devices

Please use the below charging methods to charge your devices.

1. Through USB-C Port

- Connect a USB cable between the power bank and your device, it **will automatically** start charging.
- The LEDs **will stay on while** your phone is charging, and the 5th LED light **will illuminate green** when fast charging is detected.

2. Through Wireless Charger

- Please **place** your devices **correctly** onto the **wireless** pad, the charging process **will commence automatically**.
- The LEDs **will stay on while** your phone is charging, and the 5th LED light **will illuminate blue** when wireless charging is detected.

Checking the battery level of the powerbank

- Press the power button, the LEDs **will turn on** to indicate the **charge level**.
- The LEDs **will automatically turn off after 30 seconds** when there is no device being charged. **Alternatively**, a simple **double-press** the power button **will manually** turn off the LEDs.

 
What's included

- 1 X Powerbank
- 1 X Charging cable
- 1 X User manual

Warning


- The power bank is NOT a toy and should be kept away from children.
- **Please** do NOT use the power bank in direct sunlight or extreme heat for extended periods of time.
- **Please** do NOT submerge the power bank in water.
- **Please** do NOT leave the power bank near the fire.
- **Please** do NOT subject the power bank to harsh chemicals.
- **Please** do NOT use the power bank if it has been damaged and/or modified.
- **Please** do NOT insert any foreign objects into the openings or port of the power bank.
- **Please** do NOT attempt to disassemble, repair, or open the power bank in any way.

UPUTSTVO ZA UPOTREBU

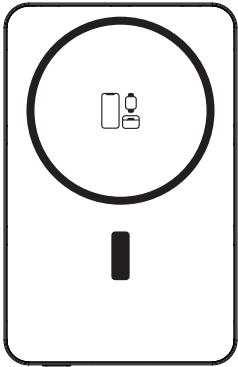

JOIN PD | 38.236

 Dijagram proizvoda

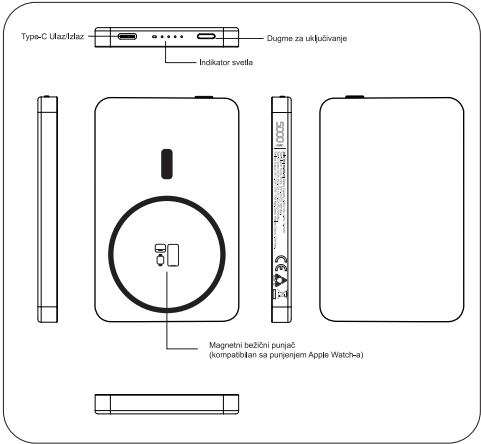

Parametri proizvoda

Naziv modela:	Join PD 38.236
Kapacitet baterije:	5000 mAh 3,85V 19,25Wh
Type-C ulaz:	DC 5V~3A,9V~2A,12V~1,5A 18W Maks
Type-C izlaz:	DC 5V~3A,9V~2,22A,12V~1,67A 20W Maks
Bežični izlaz:	5W / 7,5W / 10W / 15W Maks
Bežični izlaz za sat:	5V~2,5W (Maks)
Dimenzije:	66 x 103 x 8,8 mm

Punjenje eksterne baterije

- Pre prve upotrebe, potpuno napunite eksternu bateriju.
- Povežite priloženi USB-C kabl u USB-C port na eksternoj bateriji.
- Povežite drugi kraj kabla na USB izvor napajanja, kao što je kućni ili automobilski punjač.
- LED indikatori će svetleti dok se baterija puni.
- Kada svetle sva 4 LED indikatora, eksterna baterija je potpuno napunjena.

Napomena: Peta LED lampica služi kao indikator za režim brzog punjenja.

Punjenje vaših uređaja

Molimo koristite sledeće metode za punjenje vaših uređaja:

1. Putem USB-C porta

- Povežite USB kabl između eksterne baterije i vašeg uređaja; punjenje će početi automatski.
- LED lampice će ostati upaljene dok se telefon puni, a 5. LED lampica će svetleti zeleno kada se detektuje brzo punjenje.

2. Putem bežičnog punjača

- Molimo vas da pravilno postavite uređaj na podlogu za bežično punjenje; proces punjenja će početi automatski.
- LED lampice će ostati upaljene dok se telefon puni, a peta LED lampica će svetleti plavo kada se detektuje bežično punjenje.

Provera nivoa baterije

- Pritisnite dugme za napajanje (power button); LED lampice će se uključiti da pokažu nivo napunjenosti.
- LED lampice će se automatski isključiti nakon 30 sekundi ako se nijedan uređaj ne puni, Alternativno, jednostavnim dvostrukim pritiskom na dugme za napajanje možete ručno isključiti LED lampice.

Šta je uključeno u pakovanje:

- 1 X Eksterna baterija (Powerbank)
- 1 X Kabl za punjenje
- 1 X Korisničko uputstvo

Upozorenje

- Eksterna baterija NIJE igračka i treba je držati van domašaja dece.
- Molimo vas da NE koristite bateriju na direktnoj sunčevoj svetlosti ili ekstremnoj toploti tokom dužeg vremenskog perioda.
- Molimo vas da NE potapate eksternu bateriju u vodu.
- Molimo vas da NE ostavljate eksternu bateriju blizu vatre.
- Molimo vas da NE izlažete bateriju agresivnim hemikalijama.
- Molimo vas da NE koristite eksternu bateriju ako je oštećena ili modifikovana.
- Molimo vas da NE ubacujete nikakve strane predmete u otvore ili portove eksterne baterije.
- Molimo vas da NE pokušavate da rastavite, popravite ili otvorite eksternu bateriju na bilo koji način.