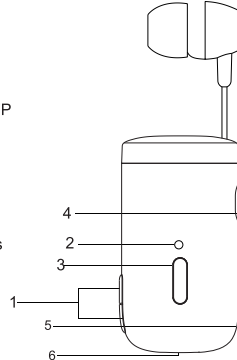 
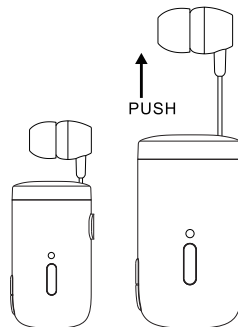 
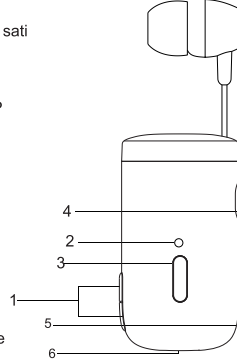 


 
ENG

USER MANUAL BIRD 38.076	Thank you for choosing BIRD Retractable Headset! You can use this product with all ios and Android compatible bluetooth devices to stream music and enjoy handsfree calling. In order to get the best results when using these earbuds, please read this manual carefully. Pack contents: -1 x headset -1 x USB Type-C charging cable -1 x User manual	About Your Headset Music Time: 18 hrs Standby Time: 120 hrs Charging Time: 1.5 hrs Bluetooth Version: 5.3 Profile: AVRCP, A2DP, HSF, HFP Operation Distance: 10 m Weight: 30 g 	Step into pairing mode: 1. Keep pressing the multi-function button for 6 seconds to let Bluetooth headset enter into pairing mode with blue and red lights flash alternately, and turn to the bluetooth device in mobile phone, you can search headset model number "BIRD" and pair with mobile phone. 2. If phone lost the bluetooth connection or you want to connect other phone, press the multi-function button for 6 seconds into pairing mode with blue and red lights flash alternately, remind to turn off other bluetooth device so that avoid interference. Tip: wearing headset on left and right ear alternately can reduce fatigue of ear Connect with mobile phone: After the successful pairing, we can personalized choose custommobile audio and the audio media to use the bluetooth headset connection. Mobile phone can intelligently connect the headphones, which the display for the blue LED light flashing	(Some phones need to confirm connection) Now you can freely experience all the functions by buttons. Learn how to reset: When headset power off, long press the multi-function button until headset power on and power off again with LED indicator flash red twice.
--	--	--	--	--

Retractable Bluetooth Headset  Model: BIRD	Use of type-C charging port • Using of AC charger: just use original charger in gift box to make sure safety) Please do not use headset when it is charging. Use of volume button • Volume : up/down (press once, the volume will be up or down) Switch songs: last/next song (long press volume +/-) Use of MFB button • Power on and activate paring mode (press and hold until blue and red lights flash alternately) • Re-connect lost bluetooth connection (long press button for 2 seconds till earphone power on) • Answer or end a call (press button once) • Reject a call (long press button for 2 seconds) • Redial last number (press button twice) • Activate voice assistant (long press button for 2 seconds) • Power off (long press button for 4 seconds)	LED Indicator: Power on (flash blue light) Power off (flash red light) Charging (red light lit) Charging completed (blue light lit) Low battery (red light flashes every 5 seconds) Calling (blue light flashes) Paring mode (red and blue lights flash alternately) Being ready for using Bluetooth headset 1. Reading manual carefully so that learn how to use function buttons. 2. Ensure the bluetooth headset battery reserve, the headset should be charged at least one hour before the first time use. 3. Stay within the 10m effective range. If beyond, the audio quality would decline or the device would lose the connection.	Dealing with two incoming calls: If you are talking, there is another call: 1. Click the MFB once to keep the current call and answer the incoming calls; 2. After finished the second call, click the MFB once to end the second call and switch to the first call. Note: To use the above functions, your mobile phone must support Bluetooth Hand-Free Mode 1.5, and the call waiting (network service) function of the mobile phone must be activated.  Note: Keep the device when pairing within a distance of 0.3 m	Safety and care 1. Keep the earphones away from extreme heat and humidity, high heat wildecrease the lifespan of the earbuds and battery. 2. The earphones should be charged at least once every 6 months. 3. Clean with a soft cloth, damp with diluted soap water solution if necessary, never use chemical cleaners. 4. Do not drop the earphones on hard surfaces. 5. Do not take the earphones apart. 6. When not in use,power the earphones off and store in a cool, dry place.
--	--	---	--	--

SRB

UPUTSTVO ZA UPOTREBU BIRD 38.076	Hvala vam što ste odabrali BIRD slušalice! Ovaj proizvod možete koristiti sa svim iOS i Android kompatibilnim Bluetooth uređajima za slušanje muzike i uživanje u pozivima bez korišćenja ruku. Da biste postigli najbolje rezultate prilikom korišćenja ovih slušalica, molimo vas da pažljivo pročitate ovaj priručnik. Sadržaj pakovanja: -1 x slušalice -1 x USB Type-C kabl -1 x Uputstvo za upotrebu	O vašim slušalicama Vreme reprodukcije muzike: 18 sati Vreme pripravnosti: 120 sati Vreme punjenja: 1,5 sati Bluetooth verzija: 5.3 Profil: AVRCP, A2DP, HSF, HFP Raspon rada: 10 m Težina: 30 g 	Uđite u režim uparivanja: 1. Držite pritisnuto višenamensko dugme 6 sekundi da biste stavili Bluetooth slušalice u režim uparivanja, pri čemu plava i crvena svetla trepere naizmenično. Zatim na svom mobilnom telefonu potražite model slušalica "BIRD" i uparite ga sa telefonom. 2. Ako telefon izgubi Bluetooth vezu ili želite da povežete drugi telefon, pritisnite višenamensko dugme 6 sekundi da biste ušli u režim uparivanja sa naizmeničnim treptanjem plave i crvene svetlosti. Uverite se da su drugi Bluetooth uređaji isključeni kako biste izbegli smetnje. Saveta: Naizmenično nošenje slušalica na levom i desnom uhu može smanjiti umor. Povezivanje sa mobilnim telefonom: Nakon uspešnog uparivanja, možete personalizovati izbor audio medija za korišćenje Bluetooth slušalica. Mobilni telefon može inteligentno povezati slušalice, pri čemu se prikazuje treptanje plave LED svetlosti.	(Neki telefoni zahtevaju potvrdu veze) Sada možete slobodno koristiti sve funkcije pomoću dugmadi. Kako resetovati: Kada su slušalice isključene, dugotrajno pritisnite višenamensko dugme dok se slušalice ne uključe, a zatim ponovo dugotrajno pritisnite da biste ih isključili. LED indikator će treptati crveno dva puta.
---	--	--	---	---

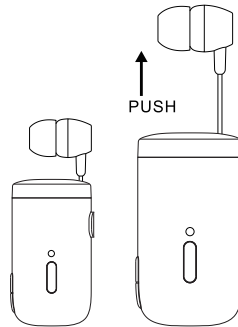Bluetooth slušalice sa uvlačivim kablom  Model: BIRD	Korišćenje Type-C priključka za punjenje: • Koristite AC punjač: koristite samo originalni punjač iz pakovanja radi sigurnosti. Molimo vas da ne koristite slušalice dok se pune. Korišćenje dugmadi za jačinu zvuka: • Jačina zvuka: pojačavanje/smanjenje (pritisnite jednom, zvuk će se pojačati ili smanjiti). • Prebacivanje pesama: prethodna/naredna pesma (dugo pritisnite dugmad za jačinu +/-). Korišćenje višenamenskog dugmeta (MFB): • Uključivanje i aktiviranje režima uparivanja (pritisnite i držite dok plava i crvena svetla ne trepere naizmenično). • Ponovno povezivanje izgubljene Bluetooth veze (dugo pritisnite dugme 2 sekunde dok se slušalice ne uključe). • Prijem ili prekid poziva (pritisnite dugme jednom) • Odbijanje poziva (dugo pritisnite dugme 2 sekunde) • Ponovno biranje poslednjeg broja (pritisnite dugme dva puta). • Aktivacija glasovnog asistenta (dugo pritisnite dugme 2 sekunde) • Isključivanje (dugo pritisnite dugme 4 sekunde)	LED Indikator: Uključeno (plava svetlost trepće) Isključeno (crvena svetlost trepće) Punjenje (crvena svetlost svetli) Punjenje završeno (plava svetlost svetli) Niska baterija (crvena svetlost trepće svake 5 sekundi) Poziv (plava svetlost trepće) Režim uparivanja (crvena i plava svetlost trepću naizmenično) Priprema za korišćenje Bluetooth slušalica: 1. Pažljivo pročitate priručnik kako biste naučili kako koristiti funkcionalna dugmad. 2. Osigurajte da je baterija Bluetooth slušalica napunjena, slušalice treba puniti najmanje jedan sat pre prvog korišćenja. 3. Ostanite unutar efikasnog dometa od 10 m. Ako pređete ovu udaljenost, kvalitet zvuka može opasti ili će uređaj izgubiti vezu.	Upravljanje sa dva dolazna poziva: Ako ste na pozivu i primite još jedan poziv: 1. Pritisnite višenamensko dugme (MFB) jednom da zadržite trenutni poziv i prihvatite dolazni poziv. 2. Nakon završetka drugog poziva, pritisnite MFB jednom da prekinete drugi poziv i vratite se na prvi poziv. Napomena: Da biste koristili ove funkcije, vaš mobilni telefon mora podržavati Bluetooth Hands-Free Mode 1.5, a funkcija čekanja poziva (usluga mreže) mora biti aktivirana.  Napomena: Držite uređaj prilikom uparivanja na udaljenosti od 0,3 m	Sigurnost i nega: 1. Čuvajte slušalice daleko od ekstremne toplote i vlage; visoka temperatura može smanjiti vek trajanja slušalica i baterije. 2. Slušalice treba puniti barem jednom svaka 3 meseca. 3. Čistite ih mekom krpom, po potrebi vlažnom razređenim sapunom, nikada ne koristite hemijske sredstva za čišćenje. 4. Ne ispuštajte slušalice na tvrde površine. 5. Ne rastavljajte slušalice. 6. Kada se ne koriste, isključite slušalice i čuvajte ih na hladnom, suvom mestu.
--	---	--	--	--