


USER MANUAL

CANTO 38.094

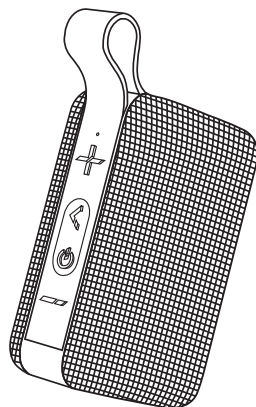

Please read this manual carefully before using, and keep it for future reference.

OPERATING INSTRUCTIONS:

1. POWER BUTTON

Power ON/OFF - Press for 1.5 seconds to turn it ON or OFF.
Force Restart- Long press for 3 seconds to force it to restart.
Mode Switch - Short press BT - AUX - USB.
Enter/Exit TWS mode - Ensure the two speakers is not connected, double press one of two speaker to enter the TWS mode, double press again to exit the TWS mode.

2. MUSIC & VOLUME


Next song - Short press to move to the next song.
Volume Up - Long press 1.5 seconds to increase the volume.

3. MUSIC & VOLUME

Previous song - Short press to move to the previous song.
Volume Down - Long press 1.5 seconds to decrease the volume.

4. PAUSE & PHONE CALL

Play/Pause - Short press to pause or play a song.
Answer/End Phone Call - Short press to answer. During call, short press to end the call.
Reject a call - Incoming call, long press 1.5 seconds to reject.
Voice assistant - Under BT mode, long press for 1.5 seconds.
Redial last number - Under BT mode, press 2 times.
Clear Bluetooth pairing information - Under BT mode, please.




disconnect speaker first, then press the button 5 times.
Disconnect Bluetooth - Under BT mode, press 4 times.

5. USB PORT

6. TYPE-C PORT

7. AUX PORT

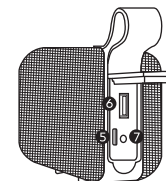

HOW TO CHARGE

1. Locate the Type-C charging cable:

Find the Type-C charging cable that came with your speaker.

2. Connect Type-C cable to the speaker:

Insert the small end of the Type-C charging cable into the charging port located on the side of the speaker.

3. Connect the cable to a power source:

If using a computer, insert the larger end of the charging cable into a USB port on your computer.

4. Verify the connection:

Ensure that the connections are secure and the charging indicator on the speaker is illuminated, indicating that it is charging.


PRODUCT SPECIFICATIONS

Input: DC 5V 1A Output Power: 1x6W
Battery Capacity: 1200mAh
Bluetooth Version: 5.4
Transmission Distance: 10 meters
70% Volume Play Time: Up to 22 hours
Protection Grade: IPX5 Waterproof
Charging Interface: Type-C

CONTENTS:

1x Waterproof wireless speaker 1x AUX Audio cable
1x USB A-C charging cable 1x Instruction manual

UPUTSTVO ZA UPOTREBU CANTO 38.094

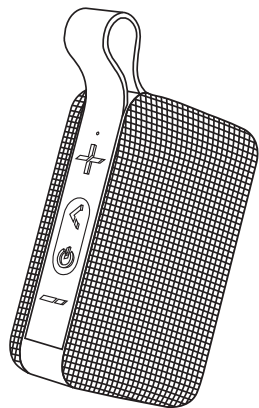

Molimo vas da pažljivo pročitate ovaj priručnik pre upotrebe i da ga čuvate za buduću referencu.

UPUTSTVA ZA UPOTREBU:


1. TASTER ZA UKLJUČIVANJE I ISKLJUČIVANJE

Uključivanje/Isključivanje - Pritisnite 1,5 sekundi da biste uključili ili isključili uređaj.

Prisilno restartovanje - Dugim pritiskom od 3 sekunde prisilno restartujete uređaj.

Prebacivanje režima - Kratko pritisnite za prelazak između BT - AUX - USB režima.

Ulazak/Izlazak iz TWS režima - Osigurajte da dva zvučnika nisu povezana, dvaput pritisnite jedan od dva zvučnika da biste ušli u TWS režim, ponovo pritisnite dva puta da biste izašli iz TWS režima.



2. MUZIKA I ZVUK

Sledeća pesma - Kratko pritisnite za prelazak na sledeću pesmu.

Pojačavanje zvuka - Dugim pritiskom od 1,5 sekundi povećajte jačinu zvuka.

3. MUZIKA I ZVUK

Prethodna pesma - Kratko pritisnite za prelazak na prethodnu pesmu.

Smanjivanje zvuka - Dugim pritiskom od 1,5 sekundi smanjite jačinu zvuka.

4. PAUZA I TELEFONSKI POZIVI

Play/Pauza - Kratko pritisnite da pauzirate ili pustite pesmu.

Odgovaranje/Završavanje poziva - Kratko pritisnite da biste odgovorili. Tokom poziva, kratko pritisnite da biste završili poziv.

Odbijanje poziva - Kada je poziv dolazni, dugim pritiskom od 1,5 sekundi odbijate poziv. Glasovni asistent - U BT režimu, dugim pritiskom od 1,5 sekundi.

Ponovno biranje poslednjeg broja - U BT režimu, pritisnite dva puta.

Brisanje Bluetooth uparivanja - U BT režimu, pritisnite za brisanje uparivanja.


Prvo isključite zvučnik, a zatim pritisnite taster 5 puta.

Prekid Bluetooth veze - U BT režimu, pritisnite 4 puta.

5. USB PORT

6. TYPE-C PORT

7. AUX PORT

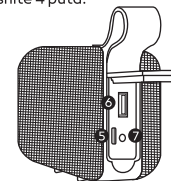

KAKO PUNITI:

1. Pronađite Type-C kabl za punjenje:

Pronađite Type-C kabl za punjenje koji je došao sa vašim zvučnikom.

2. Povežite Type-C kabl sa zvučnikom:

Umetnite manji kraj Type-C kabla u port za punjenje koji se nalazi sa strane zvučnika.

3. Povežite kabl sa izvorom napajanja:

Ako koristite računar, umetnite veći kraj kabla u USB port na računaru.

4. Proverite vezu:

Proverite da li su veze sigurno povezane i da li svetli indikator punjenja na zvučniku, što označava da se zvučnik puni.

SPECIFIKACIJE PROIZVODA

Ulaz: DC 5V 1A

Izlazna snaga: 1x6W

Kapacitet baterije: 1200mAh

Bluetooth verzija: 5.4

Razdaljina prenosa: 10 metara

Vreme reprodukcije na 70% glasnoće: Do 22 sata

Stepen zaštite: IPX5 vodootpornost

Interface za punjenje: Type-C

CONTENTS:

1x Vodootporni bežični zvučnik	1x AUX audio kabl
1x USB A-C kabl za punjenje	1x Uputstvo za upotrebu