


DIGIT - Manual Instruction

Function:

- 1. 12/24 -hour format
- 2. Alarm with snooze function and 9 alarm songs to choose
- 3. Calendar display: Hour, minute, month, date and day
- 4. Temperature display
- 5. Birthday reminder
- 6. Countdown timer

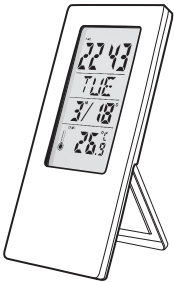

Key Function:

M	AL	S	▲	▼
---	----	---	---	---


Settings:

- Press "M" to switch between different models, in sequence:
12/24 hr → Alarm → Birthday reminder → Timer
- Press "S" key to change between °C / °F
- Press "▲" to start "SNOOZE" function.
- Press "▼" cycle through and display 9 music options.
- Time setting: Setting sequence: Hour → Minute → Year → Month → Date.
Each setting press "S" to confirm and then proceed to the next step.
- Alarm setting: Press "M" or "AL" to enter alarm mode. When displaying "-:--", it means alarm is OFF. When displaying "12:00", it means the alarm is ON. Press "S" to set, and use "▲▼" to adjust value.
- Birthday reminder: Press "S" to set, in sequence: Hour→Minute→Year→Month→Day.
Use "▲▼" to adjust the related value. When displaying "-:--", it means the function is off.

DIGIT - Uputstvo za upotrebu

Funkcije:

- 1. 12/24-časovni format
- 2. Alarm sa funkcijom odlaganja i 9 pesama za izbor alarma
- 3. Prikaz kalendara: Sat, minut, mesec, datum i dan
- 4. Prikaz temperature
- 5. Podsetnik za rođendane
- 6. Funkcija tajmera

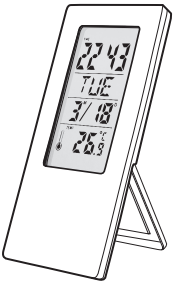

Tasteri:

M	AL	S	▲	▼
---	----	---	---	---

Podešavanje:

- Pritisnite "M" za prelazak između različitih režima, redosledom:
12/24 hr → Alarm → Podsetnik za rođendane → Tajmer
- Pritisnite taster "S" da biste promenili prikaz iz °C u °F
- Pritisnite "▲" da biste pokrenuli funkciju odlaganja.
- Pritisnite "▼" za ciklično prikazivanje i biranje između 9 muzičkih pesama
- Postavljanje vremena: Sat → Minut → Godina → Mesec → Datum
- Svako podešavanje potvrdite pritiskom na "S" i zatim pređite na sledeći korak.
- Postavljanje alarma: Pritisnite "M" ili "AL" da biste ušli u režim alarma.
Kada se prikaže "-:--", to znači da je alarm ISKLJUČEN. Kada se prikaže "12:00", to znači da je alarm UKLJUČEN. Pritisnite "S" za postavljanje, a zatim koristite "▲▼" za podešavanje vrednosti.
- Podsetnik za rođendane: Pritisnite "S" za postavljanje, redosledom:
Sat → Minut → Godina → Mesec → Dan. Koristite "▲▼" za podešavanje vrednosti.
Kada se prikaže "-:--", to znači da je funkcija isključena.