



USER MANUAL

JUKEBOX 38.184.10

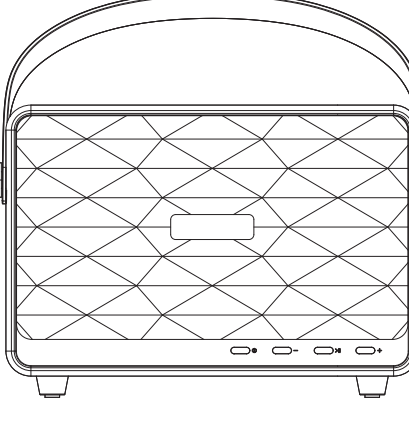

PORTABLE WIRELESS SPEAKER

Package content

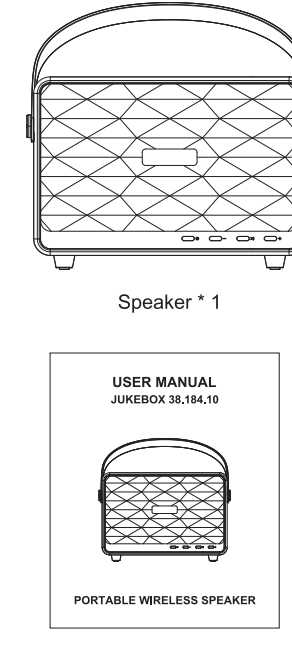

Speaker * 1


User manual * 1

Type-C Charging cable * 1


3.5 mm Audio Cable * 1

Product structure:

- Power button
- Volume down/ Previous song
- Play/Pause
- Volume up/ Next song
- Bluetooth Indicator light
- Microphone hole
- Charging indicator light
- Type-C Charging
- Aux in port
- USB port
- TF card port

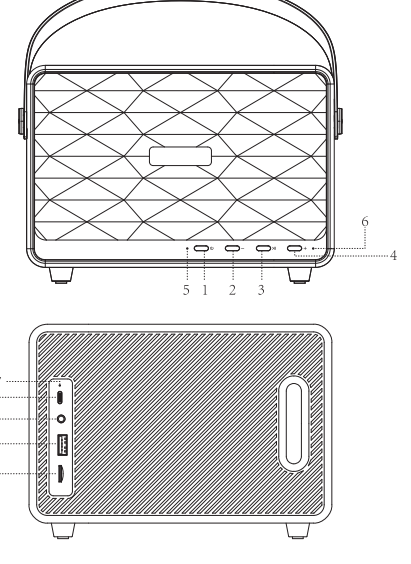

Power On/Connection

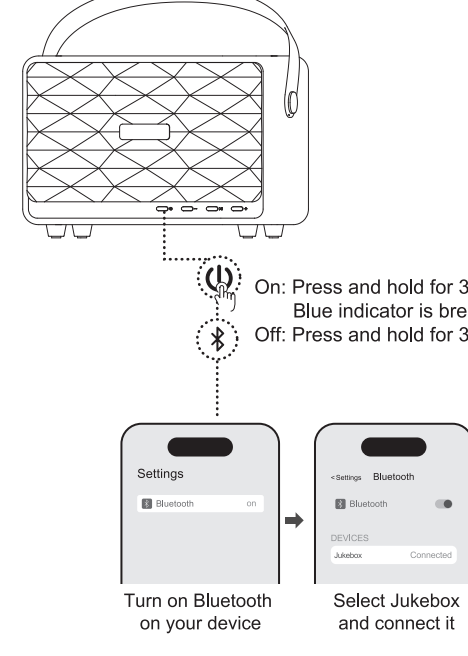


On: Press and hold for 3S
Blue indicator is breathing

Off: Press and hold for 3S

Turn on Bluetooth on your device

Select Jukebox and connect it

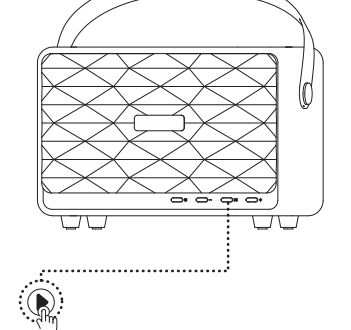

Play/Pause button

Press and hold for 5S to disconnect.

Note
The speaker will be automatically connected to the last paired device as soon as you turn it on.

TWS Dual devices Connection

- Turn on two speakers and not connect to your device.
- Press power button twice of any one speaker and there are 2 voice prompts. After 2nd prompt, both speakers are paired each other.
- Turn on Bluetooth of your device and select "JUKEBOX" to connect.

Now your device is connected to two speakers.

* Press power button twice can disconnect two speakers connection.


Function	Icon	Action
Power on/off	⏻	Press and hold for 3S
Mode switch	⏻	Press once
TWS pairing/disconnect	⏻	Press twice
Volume down	⏮	Press once
Previous song	⏮	Press and hold for 2S
Play/Pause	⏪	Press once
Bluetooth disconnection	⏪	Press and hold for 5S

Clear Bluetooth pairing	⏪	Press and hold for 8S
Redial	⏪	Press twice
Answer/End the call	⏪	Press once
Reject the call	⏪	Press and hold for 2S
Volume up	⏭	Press once
Next song	⏭	Press and hold for 2S

ENG


UPUTSTVO ZA UPOTREBU

JUKEBOX 38.184.10

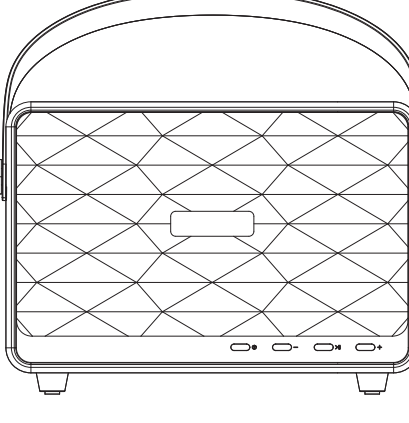

BEŽIČNI ZVUČNIK

Sadržaj pakovanja



Zvučnik * 1


Uputstvo za upotrebu * 1

Type-C kabl za punjenje * 1


3.5 mm Audio Kabl * 1

Struktura proizvoda:

- Dugme za napajanje
- Smanjenje jačine zvuka / Prethodna pesma
- Reprodukcija/Pauza
- Povećanje jačine zvuka / Sledeća pesma
- Indikator Bluetooth veze
- Otvor za mikrofon
- Indikator punjenja
- Type-C priključak za punjenje
- Aux ulaz
- USB port
- TF kartica port

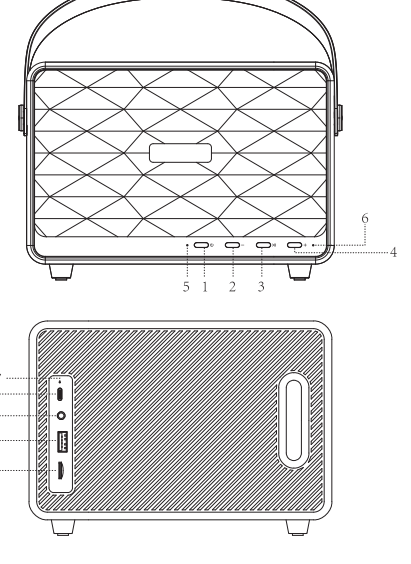

Uključivanje/Povezivanje

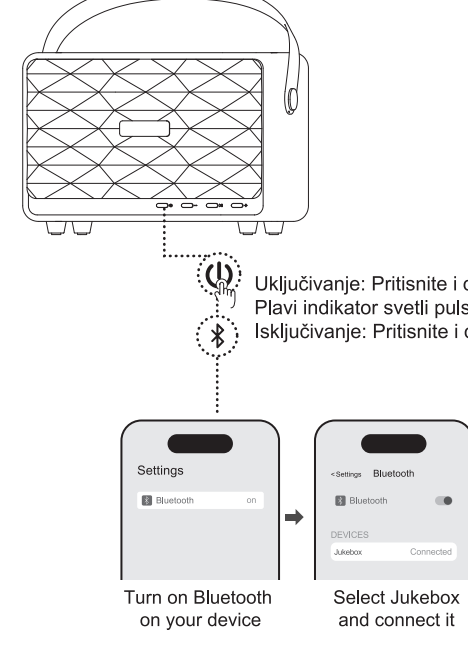


Uključivanje: Pritisnite i držite 3 sekunde
Plavi indikator svetli pulsirajuće

Isključivanje: Pritisnite i držite 3 sekunde

Turn on Bluetooth on your device

Select Jukebox and connect it

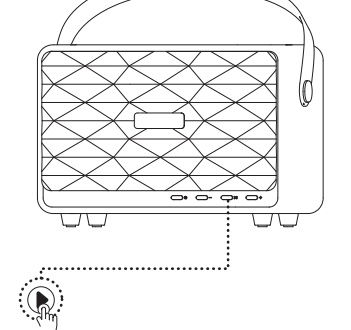

Dugme za reprodukciju/pauzu

Pritisnite i držite 5 sekundi za prekid veze.

Napomena
Zvučnik će se automatski povezati sa poslednjim uparenim uređajem čim ga uključite.

TWS povezivanje dva uređaja

- Uključite dva zvučnika, ali ih ne povezujte sa svojim uređajem.
- Dvostruko pritisnite dugme za napajanje na bilo kojem od zvučnika, i čujete dva glasovna signala. Nakon drugog signala, zvučnici će se međusobno povezati.
- Uključite Bluetooth na svom uređaju i izaberite „JUKEBOX“ za povezivanje.

Sada je vaš uređaj povezan sa dva zvučnika.

* Press power button twice can disconnect two speakers connection.

Function	Icon	Action
Uključivanje/isključivanje	⏻	Pritisnite i držite 3 sekunde
Prebacivanje režima	⏻	Pritisnite jednom
TWS uparivanje / prekid veze	⏻	Pritisnite dva puta
Smanjenje jačine zvuka	⏮	Pritisnite jednom
Prethodna pesma	⏮	Pritisnite i držite 2 sekunde
Reprodukcija/Pauza	⏪	Pritisnite jednom
Prekid Bluetooth veze	⏪	Pritisnite i držite 5 sekundi

Brisanje Bluetooth uparivanja	⏪	Pritisnite i držite 8 sekundi
Ponovno biranje	⏪	Pritisnite dva puta
Odgovor / Završetak poziva	⏪	Pritisnite jednom
Odbij poziv	⏪	Pritisnite i držite 2 sekunde
Povećanje jačine zvuka	⏭	Pritisnite jednom
Sledeća pesma	⏭	Pritisnite i držite 2 sekunde


SRB

Prebacivanje režima

Ubaci USB fleš disk, audio kabl ili TF karticu u zvučnik, zatim možeš pritisnuti dugme za napajanje da bi naizmenično prebacivao različite režime.


Režim TF kartice

Ubaci karticu u zvučnik i muzika će se automatski puštati.

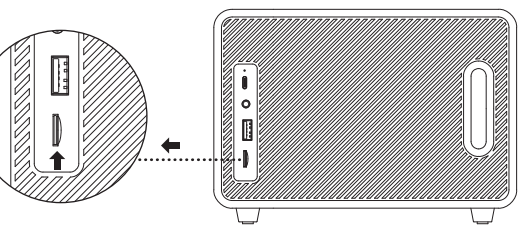

Režim USB-a


Ubaci USB fleš disk u zvučnik i muzika će se automatski puštati.

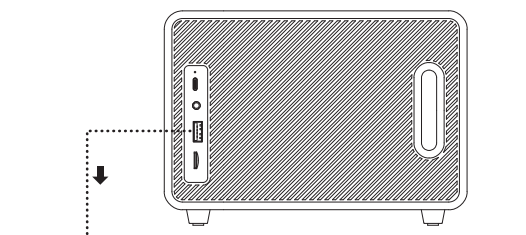

Aux ulaz režim


Povežite zvučnik sa muzičkim uređajem/telefonom putem 3.5 mm audio kabla (dodatik u paketu) i muzika će se automatski puštati.

* Pritiskanje dugmadi na zvučniku za promenu pesama nije moguće kada je u Aux ulaz režimu.

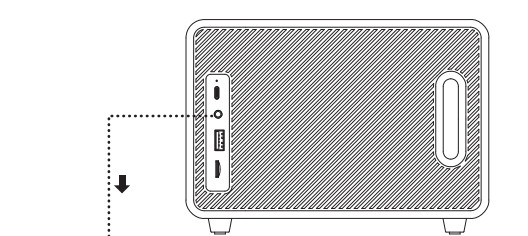

Punjenje

Punite zvučnik Type-C kablom za punjenje, po mogućstvu preko računara ili laptopa, umesto USB punjača.

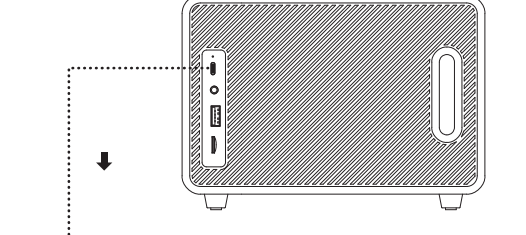

Indikator na zvučniku

- Punjenje: crveni indikator svetli.
- Potpuno napunjen: crveni indikator se gasi.

Saveti za bezbednost

- Molimo vas da koristite proizvod u skladu sa uputstvom
- Punite proizvod sa ulaznom snagom manjom od DC 5V/2A kako biste zaštili bateriju
- Ne potapajte proizvod u tečnost niti prosipajte bilo kakvu tečnost na njega
- Čuvajte i koristite proizvod u normalnim temperaturim uslovima.
- Držite proizvod dalje od izvora toplote, kao što su radijatori, grejalice, šporeti ili drugi uređaji koji emituju toplotu, jer proizvod nije otporan na visoke temperature
- Ne zapuškavajte portove na proizvodu, kao što su port za punjenje, LED port i TF kartica port.
- Da biste zaštili sluh i produžili vek trajanja proizvoda, ne preporučuje se dugo korišćenje na maksimalnom nivou jačine zvuka.

Baterije:

Upozorenje: Baterije (baterijski paket ili ugrađene baterije) ne smeju biti izložene prekomernoj toploti, kao što su direktna sunčeva svetlost, vatra ili jak izvor svetlosti.

- Zamena baterije neprikladnog tipa može poništiti zaštitne mehanizme.
- Odlaganje baterije u vatra ili vreću pečinu, kao i mehaničko gnječenje ili sečenje baterije može dovesti do eksplozije.
- Ostavljanje baterije u okruženju sa veoma visokim temperaturama može izazvati eksploziju ili curenje zapaljive tečnosti ili gasa.
- Izlaganje baterije izuzetno niskom vazдушnom pritisku može izazvati eksploziju ili curenje zapaljive tečnosti ili gasa.