


USER MANUAL

PODCAST 38.116.10

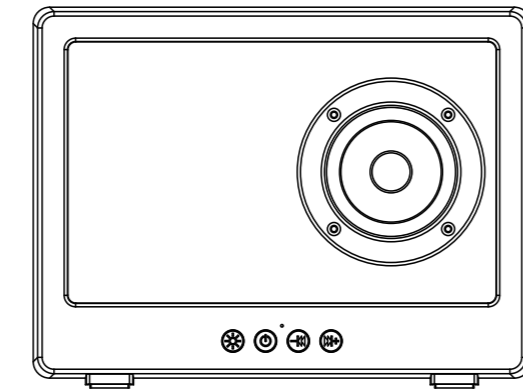


It is recommended to read this user manual carefully and keep it for future reference.

Contents:

- 1(One) Speaker 228*174.5*81mm
- 1(One) USBA to Type C PVC Charging Cable 80cm
- 1(One) Instruction Manual

Product Specification:

- Speaker Output: 5W
- Size: Speaker 228*174.5*81mm
- Input: 5V 1A
- Accessory: USB-A to USB-C Charging Cable (80cm)
- Material: ABS + Acrylic

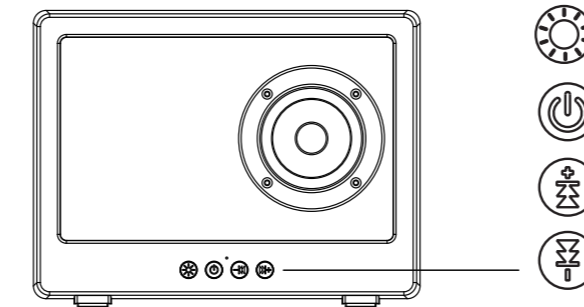

How To Use:

How to charging: Connect the type-C charging cable to the power adaptor. Please use power adaptor in 5V or above to boost the speaker. Power on/off: Press and hold "⏻" to turn on / off the unit.

Connect to Bluetooth:

- 1.Press "⏻" to connect Bluetooth mode.Press "⊙" to control different colors and fix specific color.
2. Search for Bluetooth audio name "PODCAST" on your device when the LED indicator light flashes in blue.
3. You will hear a prompt sound when it is successfully paired.
4. The speaker will automatically turn off without connection after 5 minutes. To reconnect, you can turn on the speaker and it will automatically connect back to your device.

Bluetooth Music Playback:

- Press "⏻" once to play / pause the music.
- Press "⏮" once to play the previous song. Press and hold "⏮" to reduce the volume.
- Press "⏭" once to play the next song. Press and hold "⏭" to increase the volume.

⚠ WARNING:

- Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.
- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.

- Do not pull the speaker charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
- Retain these instructions as they contain important information.
- Do not short circuit the input terminals of the speaker.
- Do not drop, place heavy weight or allow heavy impact to the speaker.
- PCB of battery should not be crushed and twisted.
- Battery body should not be bended.
- Do not disassemble and Do not dispose of in fire.


RF warning statement:

- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.

Tips: Please do not turn the volume knob to the maximum level to prevent hearing damage and to prolong the service life of the system.

WARNING: "Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

UPUTSTVO PODCAST 38.116.10

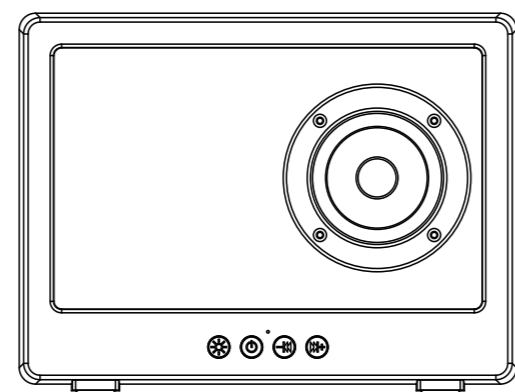


Preporučuje se da pažljivo pročitate ovaj korisnički priručnik i sačuvate ga za buduću upotrebu.

Sadržaj:

1 (Jedan) Zvučnik 228174.581mm
1 (Jedan) USB-A na Type C PVC Kabl za punjenje 80cm
1 (Jedan) Uputstvo za upotrebu

Specifikacija proizvoda:

Izlaz zvučnika: 5W
Dimenzije: Zvučnik 228174.581mm
Ulaz: 5V 1A
Pribor: USB-A na USB-C kabl za punjenje (80cm)
Materijal: ABS + Akrijik

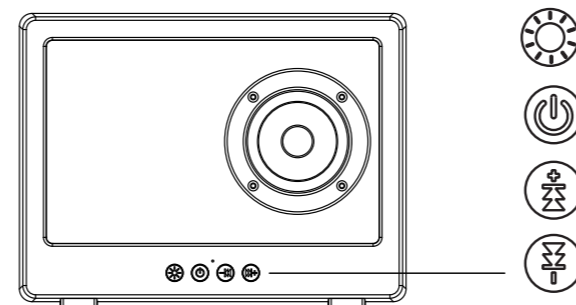

How To Use:

Kako puniti: Povežite Type-C kabl za punjenje sa adapterom za napajanje. Molimo koristite adapter za napajanje od 5V ili više kako biste pojačali zvučnik.

Uključivanje/isključivanje: Držite pritisnut taster "☉" da biste uključili/isključili uređaj.

Povezivanje sa Bluetooth-om:

Pritisnite taster "☉" da biste prešli u Bluetooth režim.

Pritisnite taster "⊕" da biste kontrolisali različite boje i postavili specifičnu boju.

Na svom uređaju potražite Bluetooth audio naziv "PODCAST" kada LED indikator svetli plavo.

Čućete zvučni signal kada bude uspešno upareno.

Zvučnik će se automatski isključiti ako nije povezan nakon 5 minuta. Da biste ponovo povezali, jednostavno uključite zvučnik i on će se automatski povezati sa vašim uređajem.

Bluetooth reprodukcija muzike:

Pritisnite taster "☉" jednom da biste pustili/pauzirali muziku.

Pritisnite taster "⊕" jednom da biste pustili prethodnu pesmu.

Držite pritisnut taster "⊖" da biste smanjili jačinu zvuka.

Pritisnite taster "⊕" jednom da biste pustili sledeću pesmu.

Držite pritisnut taster "⊕" da biste povećali jačinu zvuka.

⚠ UPOZORENJE

- Puniti i koristite uređaj isključivo prema uputstvu iz ovog priručnika, jer nepravilna upotreba može dovesti do oštećenja proizvoda ili povreda.
- Da biste izbegli rizik od strujnog udara ili povreda, nemojte rastavljati uređaj niti ubacivati bilo kakve predmete u zvučnik.
- Da biste izbegli elektronske smetnje i/ili konflikte sa kompatibilnošću, isključite uređaj u svim objektima gde je to naglašeno obaveštenjem.

- Ne vucite kabl za punjenje zvučnika – može doći do oštećenja kabla.
- Držite van domašaja dece. Ovo nije igračka.
- Izbegavajte izlaganje vlazi, tečnostima, toploti, plamenu i uređajima pod visokim naponom.
- Sačuvajte ova uputstva jer sadrže važne informacije.
- Ne pravite kratke spojeve na ulaznim terminalima zvučnika.
- Ne ispuštajte, ne stavljajte teške predmete niti dozvolite snažne udarce na zvučnik.
- PCB baterije ne sme se gnječiti niti uvijati.
- Kućište baterije ne sme se savijati.
- Ne rastavljajte i ne bacajte u vatru.

RF izjava o upozorenju:

- Uređaj je ocenjen kao bezbedan u skladu sa opštim RF standardima izloženosti.
- Uređaj se može koristiti u uslovima prenosive izloženosti bez ograničenja.

Saveti: Molimo vas da ne podešavate jačinu zvuka na maksimalni nivo kako biste sprečili oštećenje sluha i produžili vek trajanja sistema.

UPOZORENJE: „Promene ili modifikacije na ovom uređaju koje nisu izričito odobrene od strane nadležnog tela mogu poništiti pravo korisnika da koristi opremu.“