


## USER MANUAL

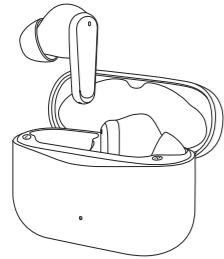

VOICE 2  
38.096

## PRODUCT SPECIFICATION

**Product model:** VOICE 2  
**Bluetooth solutions:** JL6983  
**Bluetooth version:** 5.4  
**Bluetooth working frequency:** 2.402GHz-2.480GHz  
**Frequency response:** 20Hz-20KHz  
**Speaker size:** 10mm  
**Sensitivity (speaker unit):** 102±3dB at 1KHz  
**Speaker impedance (speaker unit):** 16Ω±5% at 1mW / 1000Hz  
**Mic sensitivity:** -42±3dB  
**Effective distance:** 10m (in an ideal environment without any large obstacles)  
**Earphones battery capacity:** 30mAh  
**Charging case battery capacity:** 200mAh  
**Playtime:** Up to 6hours  
**Charging time:** 2-3hours

## PACKAGE CONTENTS

2 x Eartips  
 1 x Type-C cable  
 1 x User manual

## PARING

## 1: Auto Pairing

Taking the earphones out of the charging case, and then the earphones will automatically turn on, sync together and enter pairing mode.

## 2: Syncing your earphones

When earphones do not sync together or enter disconnected state during use:

- Turn off both earphones and turn back on.
- If that does not work, placing both earphones back into case, closing the charging case and then open the charging case again.
- While earphones is out of the charging case. Press and hold both earphones for 3 seconds. This will force the earphones to turn off and on again and sync with each other.

## 3: Open up Bluetooth setting on your smart device and scan for VOICE 2.

## OPERATION

## 1: Power on/off

- Take the earphones out of the charging case, automatically turn on.
- Put the earphones back to the charging case, automatically turn off.
- Long press 3 seconds to turn on.
- Long press 5 seconds to turn off.

## 2: Play/Pause music

When listening to music:

Tap left/right earphones once to play or pause the music.

## 3: Previous /Next Song

When listening to music.

Quick double tap left earphones to go to previous song.  
 Quick double tap right earphones to go to next song.

## 4: Volume +/-

Quick tap left earphones 3 times to increase the volume.

Quick tap right earphones 3 times to decrease the volume.

## 5: Answer/Hang up

When there is an incoming call:

Tap left or right earphones once to answer the call. Tap left or right earphones again to end the call.

## 6: Reject

When there is an incoming call:

Long press left or right earphones for 2 seconds to reject the call.

## 7: Voice assistant

Long press left or right earphones for 2 seconds.

## CHARGING FUNCTION

Fully charge the case and earphones before using for the first time.

## 1: Charging the charging case

When the charging case is charging, the red indicator flashes. When the charging case is fully charged, the red light stays on.

## 2: Earphone charging

When battery is low, each 5s flash once for left and right side red light at the same time, you will listen to a warning sign or tone. It will turn off when the earphones completely out of battery.

- Place the earphones into the charging case.
- red light on the earphones turn on when charging has begun. The light will turn off when charging is complete.


## WARNING

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.

## To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of battery pack in fire. Do not allow metal objects to touch the battery on the device.
- Do not expose battery pack to excessive heat. Do not use a high current charger, or the charging line will burn out.
- Please Charging with a DC 5V adapter (not included in the package).

## UPUTSTVO ZA UPOTREBU

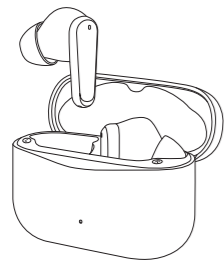

VOICE 2  
38.096

## SPECIFIKACIJA PROIZVODA

**Model proizvoda:** VOICE 2  
**Bluetooth čip:** JL6983  
**Bluetooth verzija :** 5.4  
**Bluetooth frekvencija rada:** 2.402GHz-2.480GHz  
**Frekventni opseg:** 20Hz-20KHz  
**Veličina zvučnika:** 10mm  
**Osetljivost (jedinica zvučnika):** 102±3dB na 1KHz  
**Impedansa zvučnika (jedinica zvučnika):** 16Ω±5% na 1mW / 1000Hz  
**Osetljivost mikrofona:** -42±3dB  
**Efektivna udaljenost:** 10m (u idealnim uslovima bez velikih prepreka)  
**Kapacitet baterije slušalice:** 30mAh  
**Kapacitet baterije kućišta za punjenje:** 200mAh  
**Vreme reprodukcije:** Do 6 sati  
**Vreme punjenja:** 2-3 sata

## SADRŽAJ PAKETA

2 x Silikonski nastavci  
 1 x Type-C kabl  
 1 x Uputstvo za korisnike

## UPARIVANJE

## 1: Automatsko uparivanje

Izvadite slušalice iz kućišta za punjenje. Slušalice će se automatski uključiti, sinhronizovati i ući u režim uparivanja.

## 2: Sinhronizacija slušalice

Ako slušalice ne sinhronizuju ili se tokom korišćenja razdvoje:

- Isključite obe slušalice i ponovo ih uključite.
- Ako ne uspe, vratite obe slušalice u kućište, zatvorite ga i ponovo otvorite.
- Kada su slušalice van kućišta, pritisnite i držite obe slušalice 3 sekunde da ih primorate da se isključe i ponovo uključe te sinhronizuju.

## 3: Uključite Bluetooth na vašem pametnom uređaju i pronadite VOICE 2.

## FUNKCIJE

## 1: Uključivanje/Isključivanje

• Izvadite slušalice iz kućišta za punjenje da biste ih automatski uključili.

• Vratite slušalice u kućište za automatsko isključivanje.

- Dugo pritisnite 3 sekunde da biste uključili.
- Dugo pritisnite 5 sekundi da biste isključili.

## 2: Reprodukcija/Pauza muzike

Tokom slušanja muzike:

Dodirnite jednom levu/desnu slušalicu za reprodukciju ili pauzu.

## 3: Prethodna/Sledeća pesma

Tokom slušanja muzike:

Dvaput brzo dodirnite levu slušalicu za prethodnu pesmu.  
 Dvaput brzo dodirnite desnu slušalicu za sledeću pesmu.

## 4: Smanjenje/Povećanje jačine zvuka

Dodirnite levu slušalicu tri puta za povećanje jačine zvuka.

Dodirnite desnu slušalicu tri puta za smanjenje jačine zvuka.

## 5: Odgovaranje/Završavanje poziva

Kada postoji dolazni poziv:

Dodirnite levu ili desnu slušalicu jednom za odgovor na poziv.

Ponovno dodirnite za završavanje poziva.

## 6: Odbijanje poziva

Kada postoji dolazni poziv:

Pritisnite i držite levu ili desnu slušalicu 2 sekunde za odbijanje poziva.

## 7: Glasovni asistent

Pritisnite i držite levu ili desnu slušalicu 2 sekunde.

## FUNKCIJA PUNJENJA

Potpuno napunite kućište i slušalice pre prve upotrebe.

## 1: Punjenje kućišta za punjenje

Kada se kućište puni, crveni indikator treperi. Kada je punjenje završeno, crveno svetlo ostaje uključeno.

## 2: Punjenje slušalice

Kada je baterija pri kraju, crveno svetlo treperi svakih 5 sekundi. Čućete zvučni signal upozorenja.

Svetlo se isključuje kada je baterija potpuno prazna.

- Stavite slušalice u kućište za punjenje.
- Crveno svetlo na slušalicama se uključuje tokom punjenja i isključuje kada je punjenje završeno.

## UPOZORENJE

Pažljivo pročitajte sledeće upozorenje pre nego što počnete da koristite slušalice. Sačuvajte ovaj priručnik uz ambalažu proizvoda. Priručnik sa bezbednosnim uputstvima smanjuje rizik od požara ili povrede ako se pravilno poštuju.

## Da biste smanjili rizik od povrede:

- Držite baterije van domašaja dece.
- Ne zagrevajte, ne otvarajte i ne bacajte baterije u vatru.
- Ne dozvolite da metalni predmeti dodiruju bateriju na uređaju.
- Ne izlažite bateriju prekomernoj toploti.
- Ne koristite punjač visokog napona jer može izazvati oštećenje.
- Punite uređaj sa DC 5V adapterom (nije uključen u paket).