

User manual

W CARD | 38.180.90



The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.


Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.



1. Getting Started

1.1.Power On/Off

1.1.1 Power On:Hold the circular dot on the device's power button for 3 seconds, and when you hear a ring-ring chime, it indicates that the device has been powered on. (Refer to the diagram)

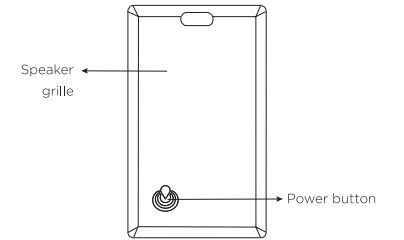

1.1.2 Power Off: Quickly double-click the device button twice, you will hear a confirmation sound, Then quickly click it three times, and on the third click, hold it until you hear two "beeps", indicating that the device has been shut down.
Remark: Setting a shutdown timer are designed to prevent accidental shutdowns, ensuring the device can continue to locate effectively.

1.2.Check For Updates

To use the Apple Find My app to locate item Locator, the latest version of iOS, iPadOS, or macOS is recommended. The Find My app on Apple Watch requires the latest version of watchOS.

2. Add Your Locator

2.1 Start the App

2.1.1 Open Find My app on your supported iPhone or iPad.
2.1.2 Allow notifications from the app.

2.2 Connect your Locator

2.2.1 Power on your Locator, select the "Items" tab then tap the "Add Item" tab,tap "Other Supported Items".
2.2.2 Make sure your Item Locator is close to your phone. Wait... until you see the pop-up "W CARD" then tap "Connect".
2.2.3 Choose a recognizable name and emoji for your item Locator and tap "Continue".
2.2.4 Find My will ask for confirmation to add your Locator for your Apple ID - tap "Continue".
2.2.5 Tap "Finish" and your Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your keys.

3. Function introduction

3.1 Locate Your Item

When your item is nearby ,tap "Play Sound" to make your Locator beep, then you can find it. When it is out of rang, you can find Locator's Last Known Location.

3.2 Notifications

You will receive a notification when you leave your Locator behind when it's no longer in range of your device.
Note: "Notify When Found" can only be activated when your Locator is out of range.

3.3 Share items

The people you've shared it with will be able to locate it, and they won't receive unidentified-tracking notifications.
To use Share Items, make sure you and your friends have installed the iOS 17, iPadOS 17, or macOS 14 Sonoma public betas or newer.

3.4 Lost mode

When your item is lost, enable lost mode, you will receive a notification when location becomes available. You can leave a phone number or email address for the finder of your item to contact you.

Note: When "Lost Mode" is enabled, your Locator is locked and no one else can pair with it. And DO NOT REMOVE ITEM in the APP. Your Item Locator will be locked and cannot be used by any person.

3.4 Remove item

Make sure your item is nearby, you can remove item in the app, it should make a ring-ring chime indicating it is removed successfully, then the item can be used by other people .
Note: When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP, otherwise your Item Locator will be locked and no one else can pair with it.

3.5 Factory Reset Your Locator

When your item is out of the range of your phone, and your Locator is removed from Find My app, the device can't be used by other people. you need reset your locator, then it can be used by other people.
How to restore factory settings: Press the function button two times, you can hear one beep. Then Press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime, now the device is reset. The device can be repaired to a new Apple ID account as a new device.

3.6 Unwanted Tracking Detection

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1) If you have a iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. (2) If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.
These features were created specifically to discourage people from trying to track you without your knowledge.

4. Specifications

Battery: CR2016 3V (Replaceable)

Working voltage: 3V

Quantity of battery: 3 pieces

Wireless range: 10-30 meters

Buzzer: Max 100 DB

5. Button function

5.1 Power on (Find my function is on).

Press the function button 3 seconds to turn it on, it should a ring-ring chime indicating it is powered on.
If the product is not linked with your apple ID, it will be closed within 10 minutes automatically. You need to trigger the find my function again to continue pairing.

5.2 Power off:

Quickly double-click the device button twice, you will hear a confirmation sound. Then quickly click it three times, and on the third click, hold it until you hear two "beeps", indicating that the device has been shut down.

5.3 Enable learn more information query.

Press the function button two times rapidly and you will hear a confirmation sound,This operation will be displayed on the find my app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.

5.4 Restore factory settings


Press the function button two times, you can hear one beep, then Press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime, now the device is reset.

A reset operation is required to make the device enter the pairing state

6. Battery replacement

6.1 Use a screwdriver to unscrew screw.

6.2 Open the case and replace the battery with a new CR2016 battery 3V. (Positive electrode upward), then close the cover and tighten the screw.

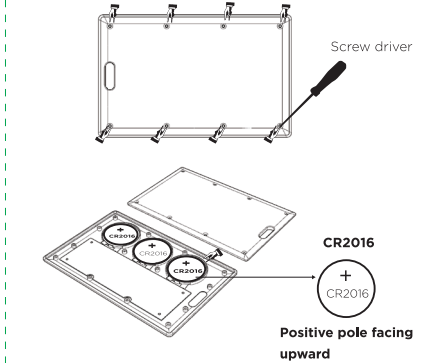

Privacy and Security

Your Locator sends out a secure Bluetooth signal that can be detected by nearby devices in the Find My network. These devices send the location of your Locator to iCloud — then you can go to the Find My app and see it on a map. The whole process is anonymous and encrypted to protect your privacy.

FAQ


1. Why find my device's location not updating.

There are two principles for product positioning reporting. If there are many Apple devices nearby, each new user in the vicinity of this device will report their location, typically within 2-5 minutes. If the device has not moved, the built-in sensors will detect this, and the device will enter a sleep mode, with the reported location ranging from 30 minutes to several hours. Don't worry, the location you see might be from 30 minutes or several hours ago, but it's very likely that the item hasn't moved, and the location you see is the last known location.

2. When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WiFi and mobile. The first pairing may takes a long time, please wait patiently. 2. Reset your item. 3. Repair with Find my APP.

WARNING

1. Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate.
Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. The compatible battery type is CR2032.
7. The nominal battery voltage: DC 3V
8. Ensure the batteries are installed correctly according to polarity(+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

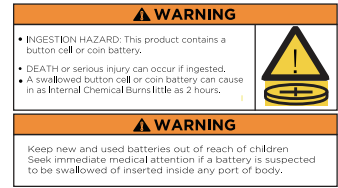

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Uputstvo

W CARD | 38.180.90



Apple® Find My® mreža pruža jednostavan i bezbedan način da pronađete kompatibilne lične predmete pomoću aplikacije Find My na vašem iPhone®-u, iPad®-u, Mac®-u ili pomoću aplikacije Find Items na Apple Watch®-u.

Za korišćenje aplikacije Apple Find My radi pronalaženja ovog predmeta preporučuje se najnovija verzija iOS, iPadOS ili macOS operativnog sistema. Aplikacija Find Items na Apple Watch-u zahteva najnoviju verziju watchOS-a.

Oznaka „Works with Apple“ znači da je proizvod posebno dizajniran da radi sa tehnologijom naznačenom u oznaci i da je proizvođač potvrdio da proizvod ispunjava tehničke specifikacije i zahteve Apple Find My mreže. Apple nije odgovoran za rad ovog uređaja, njegovu upotrebu niti usklađenost sa bezbednosnim i regulatornim standardima.


Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS i watchOS su zaštićeni znaci kompanije Apple Inc. IOS je žig ili registrovani žig kompanije Cisco u SAD i drugim zemljama, i koristi se pod licencom.



1. Početak korišćenja

1.1. Uključivanje/Isključivanje uređaja

Držite kružni taster za napajanje na uređaju pritisnut 3 sekunde. Kada čujete zvuk “zvon-zvon”, to znači da je uređaj uključen. (Pogledajte dijagram)

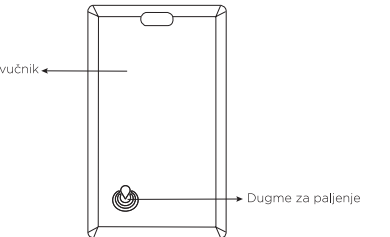

1.1.2 Isključivanje uređaja: Brzo dvaput dvokliknite dugme na uređaju – čujete potvrđujući zvuk. Zatim ga brzo pritisnite tri puta, i prilikom trećeg pritiska ga zadržite dok ne čujete dva “bipa”, što označava da je uređaj isključen.

Napomena: Tajmer za isključivanje je podešen kako bi se sprečilo slučajno gašenje uređaja, čime se osigurava da uređaj može efikasno nastaviti sa lociranjem.

1.2. Provera ažuriranja

Za korišćenje aplikacije Apple Find My za lociranje uređaja, preporučuje se najnovija verzija iOS-a, iPadOS-a ili macOS-a. Aplikacija Find My na Apple Watch-u zahteva najnoviju verziju watchOS-a.

2. Dodavanje uređaja za lociranje

2.1 Pokretanje aplikacije

2.1.1 Otvorite aplikaciju Find My na podržanom iPhone-u ili iPad-u. 2.1.2 Dozvolite obaveštenja iz aplikacije.

2.2 Povezivanje Locator-a

2.2.1 Uključite vaš Locator, izaberite karticu “Items” (Stavke), zatim dodirnite “Add Item” (Dodaj stavku), pa izaberite “Other Supported Items” (Drugi podržani uređaji). 2.2.2 Uverite se da je Locator blizu vašeg telefona. Sačekajte... dok se ne pojavi iskačući prozor sa natpisom “W CARD”, zatim dodirnite “Connect” (Poveži). 2.2.3 Izaberite prepoznatljivo ime i emotikon za vaš Locator i dodirnite “Continue” (Nastavi). 2.2.4 Aplikacija Find My će zatražiti potvrdu da dodate Locator na svoj Apple ID – dodirnite “Continue”. 2.2.5 Dodirnite “Finish” (Završi) i vaš Locator će biti podešen i spreman da ga povežete sa bilo kojim predmetom koji želite da locirate, npr. ključevima.

3. Uvod u funkcije

3.1 Lociranje predmeta

Kada je vaš predmet u blizini, dodirnite “Play Sound” (Pusti zvuk) da bi Locator proizveo zvučni signal, pa ćete ga lakše pronaći. Ako je van dometa, možete videti njegovu poslednju poznatu lokaciju.

3.2 Obaveštenja

Dobićete obaveštenje kada ostavite Locator iza sebe i on više nije u dometu vašeg uređaja. Napomena: Opcija “Notify When Found” (Obavesti kada se pronađe) može se aktivirati samo kada je Locator van dometa.

3.3 Deljenje stavki

Osobe sa kojima ste podelili Locator moći će da ga lociraju, i neće dobiti obaveštenja o nepoznatom praćenju. Da biste koristili opciju Share Items (Podeli stavke), vi i vaši prijatelji morate imati instalirane iOS 17, iPadOS 17 ili macOS 14 Sonoma (javne beta verzije ili novije).

3.4 Režim izgubljenog predmeta

Kada izgubite predmet, aktivirajte Lost Mode (Režim izgubljenog predmeta). Dobićete obaveštenje kada lokacija uređaja postane dostupna. Možete ostaviti broj telefona ili email adresu kako bi osoba koja pronađe predmet mogla da vas kontaktira. Napomena: Kada je Lost Mode aktiviran, vaš Locator je zaključan i niko drugi ne može da ga poveže sa svojim uređajem, NE UKLANJAJTE STAVKU iz aplikacije – Locator će ostati zaključan i neće moći da se koristi.

3.4 Uklanjanje stavke

Uverite se da je predmet u blizini. U aplikaciji možete ukloniti stavku, a uređaj će proizvesti zvuk “zvon-zvon” kao potvrdu da je uspešno uklonjen – nakon toga može ga koristiti druga osoba. Napomena: Ako je aktiviran Lost Mode, NEMOJTE UKLANJATI STAVKU iz aplikacije, jer će Locator ostati zaključan i niko drugi neće moći da ga koristi.

3.5 Vraćanje Locator-a na fabrička podešavanja

Kada je vaš Locator van dometa telefona i uklonjen iz aplikacije Find My, on ne može da se koristi dok se ne resetuje. Da bi ga druga osoba mogla koristiti, potrebno je resetovati Locator na fabrička podešavanja: Pritisnite dugme za funkciju dva puta – čujete jedan zvučni signal. Zatim brzo pritisnite dugme četiri puta, i peti put ga pritisnite i držite dok ne čujete zvuk “zvon-zvon” – sada je uređaj resetovan. Uređaj se sada može ponovo upariti sa novim Apple ID nalogom kao nov uređaj.

3.6 Otkrivanje neželjenog praćenja

Ako se neki dodatak iz Apple Find My mreže, koji je odvojen od svog vlasnika, kreće zajedno s vama tokom vremena, dobićete obaveštenje na jedan od sledećih načina: Ako imate iPhone ili iPad, aplikacija Find My će vam poslati obaveštenje. (Dostupno na iOS/iPadOS 14,5 i novijim verzijama). Ako nemate iOS uređaj, dodatak iz Find My mreže koji nije u blizini vlasnika tokom dužeg vremena emituje zvuk kada se pomera. Ove funkcije su osmišljene sa ciljem da spreče neovlašćeno praćenje bez vašeg znanja.

4. Specifikacije

Baterija: CR2016 3V (zamenjiva) Radni napon: 3V Količina baterija: 3 komada Bežični domet: 10–30 metara Zvučni signal: Maksimalno 100 dB

5. Funkcija dugmeta

5.1 Uključivanje uređaja (funkcija Find My je uključena) Pritisnite dugme za funkciju 3 sekunde da uključite uređaj. Trebalo bi da se čuje zvuk “zvon-zvon”, što označava da je uređaj uključen. Ako proizvod nije povezan sa vašim Apple ID-jem, automatski će se isključiti nakon 10 minuta. U tom slučaju, morate ponovo aktivirati Find My funkciju da biste nastavili sa uparivanjem.


5.2 Isključivanje uređaja Brzo dvaput dvokliknite dugme na uređaju – čujete potvrđujući zvuk. Zatim ga brzo pritisnite tri puta, i prilikom trećeg pritiska ga zadržite dok ne čujete dva “bipa”, što označava da je uređaj isključen.

5.3 Aktiviranje prikaza dodatnih informacija (Learn More) Pritisnite dugme za funkciju dva puta brzo – čujete zvuk potvrde. Ova operacija će biti prikazana u aplikaciji Find My, kako bi osoba koja pronađe uređaj mogla da vidi informacije o vlasniku (ako je uređaj označen kao izgubljen), kao i serijski broj uređaja.

5.4 Vraćanje na fabrička podešavanja Pritisnite dugme za funkciju dva puta – čujete jedan zvučni signal. Zatim brzo pritisnite dugme četiri puta, pa peti put pritisnite i držite dok ne čujete zvuk “zvon-zvon”. Uređaj je sada resetovan. Reset je potreban da bi uređaj ponovo ušao u režim uparivanja.

6. Zamena baterije

6.1 Pomoću odvijača odvrnite šraf. 6.2 Otvorite kućište i zamenite staru bateriju novom CR2016 3V baterijom. (Pozitivni pol treba da bude okrenut nagore), zatim zatvorite poklopac i zategnite šraf.

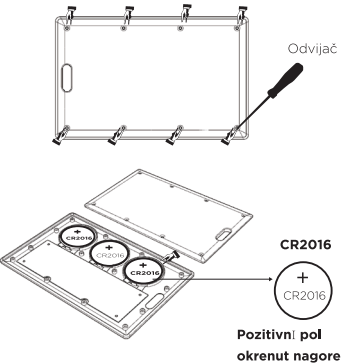

Privatnost i bezbednost


Vaš Locator emituje siguran Bluetooth signal koji mogu detektovati obližnji uređaji u okviru Apple Find My mreže. Ti uređaji zatim šalju lokaciju vašeg Locator-a na iCloud – vi potom možete otvoriti aplikaciju Find My i videti lokaciju na mapi. Ceo proces je anoniman i šifrovan kako bi vaša privatnost bila zaštićena.

Često postavljana pitanja

1. Zašto se lokacija mog uređaja ne ažurira? Postoje dva principa za izveštavanje o lokaciji uređaja: Ako se u blizini nalazi više Apple uređaja, svaki novi korisnik u dometu uređaja će prijaviti njegovu lokaciju, obično u roku od 2 do 5 minuta. Ako se uređaj ne pomera, ugrađeni senzori će to detektovati i uređaj će preći u režim mirovanja, pa će se lokacija ažurirati na svakih 30 minuta do nekoliko sati. Ne brinite ako vidite stariju lokaciju – vrlo je verovatno da se uređaj nije pomerio, a prikazana je njegova poslednja poznata lokacija. 2. Povezivanje uređaja sa Find My aplikacijom ne uspeva. Prilikom uparivanja, telefon komunicira sa Apple serverom. Ako postoji problem sa mrežom, parenje može da ne uspe. Preporučujemo sledeće korake: Promenite mrežu telefona – prebacite se sa Wi-Fi na mobilne podatke ili obrnuto. Prvo uparivanje može da potraje – budite strpljivi. Resetujte vaš Locator. Ponovo pokušajte da ga uparite putem Find My aplikacije.

UPOZORENJE

1. Odmah uklonite i pravilno reciklirajte ili odložite iskorišćene baterije u skladu sa lokalnim propisima. Držati dalje od dece. Ne bacajte baterije u kućno smeće niti ih spaljujte. 2. Čak i iskorišćene baterije mogu izazvati ozbiljne povrede ili smrt. 3. Za informacije o lečenju u slučaju gutanja, pozovite lokalni centar za trovanja. 4. Napunjive baterije koje nisu predviđene za punjenje – ne puniti. 5. Ne izazivajte silazno pražnjenje, ne punite, ne rastavljajte, ne zagrevajte iznad 50°C / 122°F, i ne spaljujte. To može dovesti do povreda usled curenja, eksplozije ili hemijskih opekotina. 6. Kompatibilni tip baterije: CR2032. 7. Nominalni napon baterije: DC 3V. 8. Uverite se da su baterije ispravno postavljene, uz poštovanje polariteta (+ i -). 9. Ne mešajte stare i nove baterije, niti različite marke ili tipove baterija (alkalne, cink-ugljenične, punjive itd.). 10. Ako uređaj neće biti korišćen duže vreme, uklonite baterije i pravilno ih reciklirajte ili odložite. 11. Uvek potpuno zatvorite poklopac baterije. Ako se poklopac ne zatvara pravilno, prestanite sa korišćenjem uređaja, uklonite baterije i držite ih van domašaja dece.

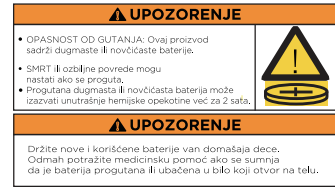

FCC Izjava

Ova oprema je testirana i utvrđeno je da ispunjava ograničenja za digitalne uređaje klase B, u skladu sa delom 15 FCC pravila. Ova ograničenja su osmišljena da obezbede razumnu zaštitu od štetnih smetnji u kućnim instalacijama. Ova oprema generiše, koristi i može emitovati radiofrekventnu energiju, i ako nije instalirana i korišćena u skladu sa uputstvima, može izazvati štetne smetnje u radio-komunikacijama. Međutim, ne postoji garancija da se smetnje neće javiti u nekoj određenoj instalaciji. Ako ova oprema izaziva štetne smetnje u prijemu radijskog ili televizijskog signala (što se može utvrditi isključivanjem i uključivanjem opreme), korisniku se savetuje da pokuša da otkloni smetnje pomoću jedne ili više od sledećih mera: - Promenite pravac ili lokaciju prijemne antene. - Povećajte razdaljinu između opreme i prijemnika. - Povežite opremu u utičnicu koja je na drugom električnom kolu od onog na koje je povezan prijemnik. - Posavetujte se sa prodavcem ili iskusnim tehničarem za radio/TV prijem za dodatnu pomoć. Ovaj uređaj je u skladu sa delom 15 FCC pravila. Rad uređaja podlozan je sledećim uslovima: Ovaj uređaj ne sme izazivati štetne smetnje. Ovaj uređaj mora prihvatiti sve primljene smetnje, uključujući i one koje mogu izazvati nepoželjan rad. **Važno:** Bilo kakve izmene ili modifikacije koje izričito nije odobrila odgovorna strana za usklađenost, mogu poništiti ovlašćenje korisnika da koristi ovu opremu. Ova oprema je u skladu sa FCC ograničenjima izloženosti zračenju za nekontrolisano okruženje. Uređaj je procenjen i ispunjava opšte zahteve za RF izloženost. Uređaj se može koristiti u prenosivim uslovima izloženosti bez ograničenja.