
USER MANUAL | DOMEN | 38.232

FUNCTIONS:

1. FM/AM Band selector
2. On/off & volume control
3. Tuning dial
4. Band selector
5. Speaker
6. Flashlight
7. Flashlight button
8. Type-C input port
9. USB-A output port
10. Solar panel
11. Crank handle
12. Tuning indicator (Green light)
13. Charging indicator (Red light)
14. Antenna

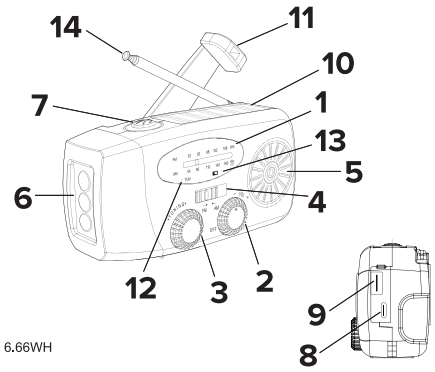

SPECIFICATIONS

- BATTERY: 3.7V, 1800MAH (LI-ION), 6.66WH
- TYPE-C INPUT: 5V-1A, 5W
- USB-A OUTPUT: 5V-1A, 5W
- CHARGING TIME (USB): ~2.5 HOURS
- FREQUENCY RANGE: AM 540–1600 KHZ, FM 87–108 MHZ
- LED FLASHLIGHT OUTPUT: 1W / 120 LUMENS

IMPORTANT INFORMATION

Please read the following instructions carefully and follow them to ensure that the product serves you safely.

INSTRUCTIONS

USING THE RADIO

- Turn the Volume Knob to power on and adjust volume.
- Select AM/FM using the Band Selector.
- Extend the Antenna for better signal reception.
- Rotate the Tuning Knob to find a station.
- The Green Indicator lights up when a station is properly tuned.

USING THE FLASHLIGHT

- Press the Flashlight Button to toggle the LED flashlight on or off.

USING THE POWERBANK

- Plug your cable in the USB-A output and connect with your device.

Note that the powerbank is only for emergency, not for daily usage.

CHARGING METHODS

A. SOLAR CHARGING

- Place the solar panel in direct sunlight.
- The Red Charging Indicator lights up when charging.
- Primarily used to maintain battery; not ideal for full charging.
- Avoid charging in hot environments (e.g., inside a car).

B. USB CHARGING

- Use the supplied USB-C cable.
- Connect the USB-C Input to a power source.
- Charging takes ~2.5 hours.
- Indicator flashes red while charging and remains solid red - when fully charged.

C. HAND CRANK CHARGING

- Unfold and rotate the Crank Handle.
- Crank in either direction at 130–150 RPM.
- Initial activation: crank for 3–5 minutes.

Full charge:

- ~10 hours of cranking.
- Cranking for 1 minute yields:
- ~3 minutes of radio use
- ~30 minutes of flashlight use

FULLY CHARGED:

- ~15 hours of radio use (medium volume)
- ~8–9 hours of flashlight use

SAFETY PRECAUTIONS


- Do not drop the radio – may cause injury or damage.
- Water-resistant, not waterproof – avoid exposure to moisture.
- Keep the unit dry and away from corrosive substances.
- Crank the handle regularly (3–5 minutes) to maintain battery health.
- Do not disassemble the radio.
- When charging use the USB-C cable that came with the product.
- Do not dispose of the battery in household waste. Please follow local regulations for battery recycling.

This product is equipped with a removable battery to support responsible disposal. To remove the battery, first ensure the device is switched off and disconnected from any power source. Then, using a standard screwdriver, unscrew the two screws located on the button side of the radio. Once the screws are removed, the battery can be safely taken out. Please ensure the used battery is disposed of in accordance with local electronic waste regulations.

UPUTSTVO ZA UPOTREBU | DOMEN | 38.232

FUNKCIJE:

1. Birač FM/AM talasnih dužina (opsega)
2. On/off (Uključivanje/isključivanje) i kontrola jačine zvuka
3. Skala za biranje stanica (Tuning dial)
4. Birač opsega
5. Zvučnik
6. Baterijska lampa
7. Dugme za baterijsku lampu
8. Type-C ulazni port
9. USB-A izlazni port
10. Solarni panel
11. Ručica za ručno punjenje (kurbla)
12. Indikator podešenosti stanice (Zeleno svetlo)
13. Indikator punjenja (Crveno svetlo)
14. Antena

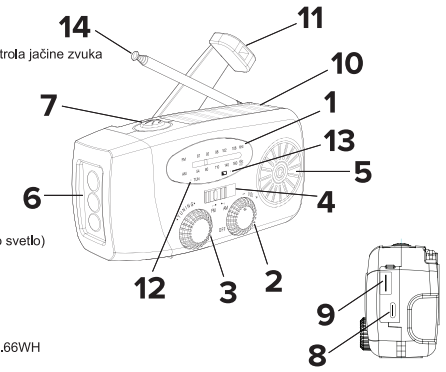

SPECIFIKACIJE

- BATERIJA: 3.7V, 1800MAH (LI-ION), 6.66WH
- TYPE-C ULAZ: 5V-1A, 5W
- USB-A IZLAZ: 5V-1A, 5W
- VREME PUNJENJA (USB): ~2.5 SATA
- FREKVENTNI OPSEG: AM 540–1600 KHZ, FM 87–108 MHZ
- JAČINA LED LAMPE: 1W / 120 LUMENA

VAŽNE INFORMACIJE

Molimo vas da pažljivo pročitate sledeća uputstva i da ih se pridržavate kako biste osigurali da vas proizvod bezbedno služi.

UPUTSTVO ZA UPOTREBU

KORIŠĆENJE RADIJA

- Okrenite dugme za jačinu zvuka (Volume) da biste uključili uređaj i podesili jačinu.
- Izaberite AM/FM pomoću birača opsega (Band Selector).
- Izvucite antenu radi boljeg prijema signala.
- Okrećite dugme za biranje stanica (Tuning) da biste pronašli stanicu.
- Zeleni indikator svetli kada je stanica pravilno podešena.

KORIŠĆENJE BATERIJSKE LAMPE

- Pritisnite dugme za baterijsku lampu da biste uključili ili isključili LED lampu.

KORIŠĆENJE POWERBANK-A

- Priključite svoj kabl u USB-A izlaz i povežite ga sa svojim uređajem.

Imajte na umu da je powerbank namenjen samo za hitne slučajeve, a ne za svakodnevnu upotrebu.

METODE PUNJENJA

A. SOLARNO PUNJENJE

- Postavite solarni panel direktno na sunčevu svetlost.
- Crveni indikator punjenja svetli tokom punjenja.
- Prvenstveno se koristi za održavanje baterije; nije idealno za potpuno punjenje.
- Izbegavajte punjenje u vrelim okruženjima (npr. unutar automobila).

B. USB PUNJENJE

- Koristite isporučeni USB-C kabl.
- Povežite USB-C ulaz na izvor napajanja.
- Punjenje traje oko 2.5 sata.
- Indikator treperi crveno tokom punjenja i ostaje neprekidno crven kada je potpuno napunjen.

C. PUNJENJE PREKO RUČICE (KURBLE)

- Rasklopite i rotirajte ručicu.
- Okrećite ručicu u bilo kom smeru brzinom od 130–150 obrtaja u minuti (RPM).
- Početna aktivacija: okrećite ručicu 3–5 minuta.

Potpuno punjenje:

- ~10 sati okretanja ručice.
- Okretanje ručice u trajanju od 1 minuta obezbeđuje:
- ~3 minuta korišćenja radija
- ~30 minuta korišćenja baterijske lampe

POTPUNO NAPUNJEN:

- ~15 sati korišćenja radija (na srednjoj jačini zvuka)
- ~8–9 sati korišćenja baterijske lampe

MERE BEZBEDNOSTI

- Ne ispuštajte radio – to može izazvati povrede ili oštećenja.
- Otporan na prskanje, ali nije vodootporan – izbegavajte izlaganje vlazi.
- Držite uređaj suvim i dalje od korozivnih supstanci.
- Redovno okrećite ručicu (3–5 minuta) kako biste održali zdravlje baterije.
- Ne rasklapajte radio.
- Za punjenje koristite USB-C kabl koji je stigao uz proizvod.
- Ne odlažite bateriju u kućni otpad. Molimo vas da se pridržavate lokalnih propisa za reciklažu baterija.

Ovaj proizvod je opremljen zamenljivom baterijom kako bi se podržalo odgovorno odlaganje.
Da biste uklonili bateriju, prvo proverite da li je uređaj isključen i odvojen od bilo kog izvora napajanja.
Zatim, pomoću standardnog odvijača (šrafcigera), odvijte dva šrafa koja se nalaze na donjoj strani radija.
Kada se šrafovi uklone, baterija se može bezbedno izvaditi. Molimo vas da obezbedite da se iskorišćena baterija odloži u skladu sa lokalnim propisima o elektronskom otpadu.