
ENG

USER MANUAL


CLAPTON 38.231.10

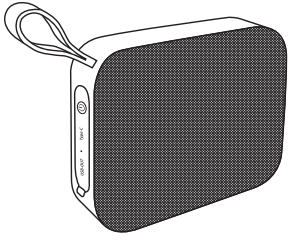

It is recommended to read this user manual carefully and keep it for future reference.

Specification:

Wireless version: V5.3
Charging Voltage: 5V
Battery Capacity: 4.000mAh
Working time: 15-20 hrs
Operation Distance: < 10 Meters
Frequency: 80Hz–20KHz
Impedance: 3 ohms
Related Power: 5W
SNR: 95db
USB-A output: 5V/1A

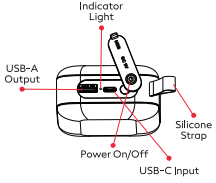

Operation:

Long press the power button to power on speaker, from the bluetooth menu of your device, search for new devices and selected "CLAPTON" to pair, once they are paired successfully, you will hear a notification sound.
Press the power button to play or pause the music.
Long press the power button to power off the speaker.

Charging:

Use the cable provided for charging. Connect the USB cable to a computer / AC adapter. Connect the USB-C end of this cable into the USB-C port of your device.

During charging, the red indicator light will stay on. When the speaker is fully charged, the indicator light will turn off.

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices.
The sound is low or distorted.	3. Check the Bluetooth device volume and then adjust it to an appropriate level. 4. Recharge the battery.
Occasionally the music stops.	5. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other


Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.

SRB

KORISNIČKO UPUTSTVO


CLAPTON 38.231.10

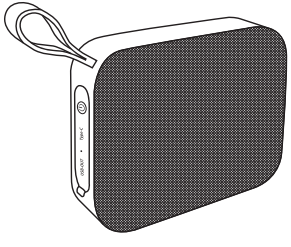

Preporučuje se da pažljivo pročitate ovo uputstvo za upotrebu i sačuvate ga za buduće potrebe.

Specifikacija:

Bežična verzija: V5.3
Napon punjenja: 5V
Kapacitet baterije: 4.000mAh
Radno vreme: 15-20 sati
Radna udaljenost: < 10 metara
Frekvencija: 80Hz–20kHz
Impedansa: 3 oma
Snaga: 5W
SNR: 95db
USB-A izlaz: 5V/1A

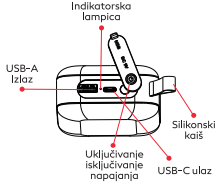

Operacija:

Dugo pritisnite dugme za napajanje da biste uključili zvučnik. Iz Bluetooth menija vašeg uređaja, potražite nove uređaje i izaberite „CLAPTON" za uparivanje. Kada se uspešno upare, čućete zvuk obaveštenja. Pritisnite dugme za napajanje da biste reprodukovali ili pauzirali muziku. Dugo pritisnite dugme za napajanje da biste isključili zvučnik.

Punjenje:

Koristite kabl koji je priložen za punjenje. Povežite USB kabl sa računarom / AC adapterom. Povežite USB-C kraj ovog kabla sa USB-C portom na vašem uređaju.

Tokom punjenja, crvena indikatorska lampica će ostati upaljena. Kada je zvučnik potpuno napunjen, indikatorska lampica će se isključiti.

Rešavanje problema:

Greška	Rešenje
Nije moguće uparivanje sa drugim uređajima.	1. Proverite da li je zvučnik još uvek u procesu pretrage ili ga isključite, pa ponovo uključite. 2. U blizini se nalazi previše Bluetooth uređaja koji uzrokuju poteškoće u povezivanju. Isključite ostale Bluetooth uređaje.
Zvuk je tih ili izobličen.	3. Proverite jačinu zvuka Bluetooth uređaja, a zatim je podesite na odgovarajući nivo. 4. Napunite bateriju.
Povremeno muzika prestaje.	5. Proverite da li je prekoračen efektivni domet prenosa zvučnika ili da li postoji prepreka između zvučnika i drugih Bluetooth uređaja.

Upozorenja:

1. Ne izlažite ovaj proizvod kiši ili vlazi.
2. Sprečite pad ovog proizvoda jer bi to moglo prouzrokovati ozbiljnu štetu.
3. Ne rastavljajte, ne popravljajte ili modifikujte ovaj proizvod sami, kontaktirajte ovlašćenog stručnjaka.
4. Da biste izbegli bilo kakav rizik, ne odlažite ovaj proizvod na nepravilan način jer ima ugrađenu litijumsku bateriju.
5. Očistite zvučnik suvom krpom.
6. Ne stavljajte ovaj proizvod u blizini izvora toplote ili ga ne izlažite direktnoj sunčevoj svetlosti.
7. Ne ubacujte metalne predmete u ovaj uređaj jer postoji rizik od kratkog spoja.
8. Držati van domašaja dece.