


USER
MANUAL

PUNK
38.089.90

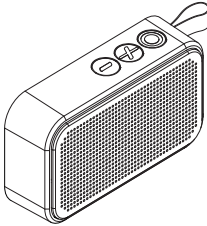

TWS

3 W

5.3

500 mAh

Handsfree

Press: Volume -
Press&Hold: Previous song

Press: Volume +
Press&Hold: Next song

Press&Hold: Power ON / OFF
Press: Play / Pause

Mikrofon

Indicator light

Charging port (TYPE-C)

Power ON / OFF
Press & Hold 'O' key: Power ON / OFF.

Wireless Mode
In BT mode, Open the phone BT function, select the product's pairing name PUNK the speaker is connected after the success of sound.

Phone Call / Handsfree
When the speaker is in the BT connection status, if the mobile phone has an incoming call, the speaker will make a ringtone. Press the 'O' key to answer the call and press it again to hang up. Press & Hold the 'O' key to reject the call.

TWS Wireless Couplet Mode
Open two speakers at the same time into BT mode, without BT connection, short press any one of the 'O' keys to enter the couplet / disconnect couplet. After the couplet, use the phone to search and connect, you can play.
(When TWS couplet mode, the two speakers automatically change to be left and right stereo).

About Charging
Plug the USB-C cable into the speakers and connect the DC 5V charger or computer USB port to charge the speakers.

Indicator Light
Red Light
In charge, and red light goes out after full charge.
Blue Light
Fast flashing: BT pairing; Slow flashing: Playing;
Steady Light: Playing paused.


Warnings:

- Do not expose this product to rain or damp conditions.
- Prevent this item from falling as it could cause serious damage.
- Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
- In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
- Clean the speaker with a dry cloth.
- Do not place this item near sources of heat or expose to direct sunlight.
- Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
- Keep out of reach of children.

RS

UPUTSTVO
ZA UPOTREBU

PUNK
38.089.90

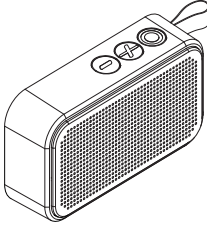

TWS

3 W

5.3

500 mAh

Handsfree

Pritisni: Smanji jačinu zvuka
Pritisni i zadrži: Prethodna pesma

Pritisni: Povećaj jačinu zvuka
Pritisni i zadrži: Sledeća pesma

Pritisni i zadrži: Uključi / Isključi
Pritisni: Reprodukcia / Pauza

Mikrofon

Svetlosni indikator

Port za punjenje (TYPE-C)

Uključivanje / Isključivanje
Pritisnite i zadržite taster 'O': Uključivanje / Isključivanje.

Bežični režim
U BT režimu, otvorite BT funkciju na telefonu, izaberite ime za uparivanje proizvoda PUNK. Kada se zvučnik uspešno poveže, čućete zvuk.

Telefon / Handsfree
Kada je zvučnik u BT vezi, ako telefon prima poziv, zvučnik će zvučati. Pritisnite taster 'O' da biste odgovorili na poziv i ponovo pritisnite da biste prekinuli poziv. Pritisnite i zadržite taster 'O' da biste odbili poziv.

TWS Bežični Parski Režim
Uključite oba zvučnika istovremeno i stavite ih u BT režim, bez BT veze. Kratko pritisnite bilo koji od tastera 'O' da biste ušli u parski / prekinuli par. Nakon uparivanja, koristite telefon da biste pretražili i povezali se, zatim možete puštati muziku.
(Prilikom korišćenja TWS para, dva zvučnika automatski postaju levi i desni stereo.)

O punjenju
Uključite USB-C kabl u zvučnike i povežite ga sa DC 5V punjačem ili USB portom računara da biste napunili zvučnike.

Indikatorska svetlost
Crveno svetlo
U toku punjenja, a crveno svetlo se gasi nakon što se napuni.
Plavo svetlo
Brzo treperi: BT uparivanje; Sporo treperi: Reprodukcia;
Stalno svetli: Pauza u reprodukciji.

Upozorenja:

- Ne izlažite ovaj proizvod kiši ili vlažnim uslovima.
- Sprečite padanje ovog proizvoda jer može doći do ozbiljnih oštećenja.
- Nemojte rastavljati, popravljati ili modifikovati ovaj proizvod sami, obratite se ovlašćenom stručnjaku.
- Kako biste izbegli bilo kakav rizik, nemojte nepropisno odlagati ovaj proizvod jer sadrži ugrađenu litijumsku bateriju.
- Čistite zvučnik suvom krpom.
- Nemojte stavljati ovaj proizvod blizu izvora toplote niti ga izlagati direktnoj sunčevoj svetlosti.
- Nemojte ubacivati metalne predmete u ovaj uređaj jer postoji rizik od kratkog spoja.
- Držite van dohvata dece.