ENG


USER MANUAL

NEXUS 20PD 100W 38.235

It is recommended to read this user manual carefully and keep it for future reference.

PRODUCT OVERVIEW

1. Power Button
2. Type-C1 Input 65W / Output 100W
3. Type-C2 Input 60W / Output 100W
4. USB-A Output 22.5W
5. Digital Display

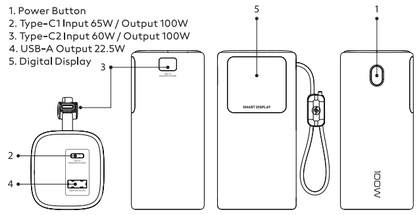


SPECIFICATION

Capacity: 20.000 mAh/74Wh
Input Type-C1: 5V – 3A, 9V – 3A, 12V – 3A, 15V – 3A, 20V – 3.25A (65W Max)
Input Type-C2: 5V – 3A, 9V – 3A, 12V – 3A, 15V – 3A, 20V – 3A (60W Max)
Output Type-C1/C2: 5V – 3A, 9V – 3A, 12V –3A, 15V – 3A, 20V – 5A (100W Max)
Output USB-A: 5V – 3A, 9V – 2A, 10V – 2.25A, 12V – 1.5A (22.5W Max)
Output Type-C1+C2+A: 5V– 3A (15W Max)
Dimensions: 106.7 x 52.9 x 49mm
Net weight: 391±10g


INCLUDED ACCESORIES
1 x Power Bank
1 x User Manual

DIGITAL DISPLAY

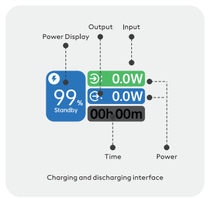


Charging and discharging interface




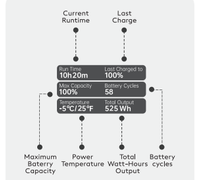

Parameter Interface

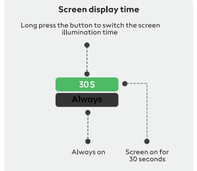

Interface for screen illumination time

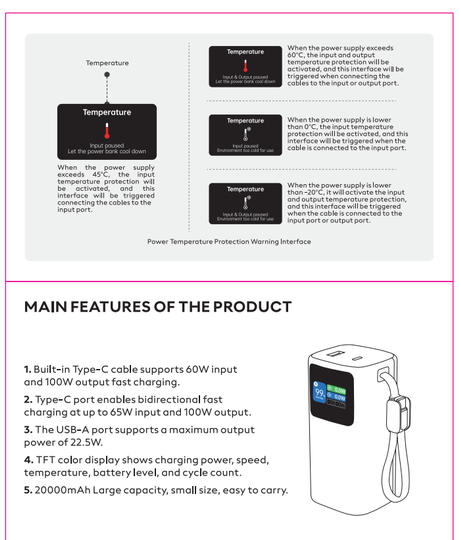

Power Temperature Protection Warning Interface

MAIN FEATURES OF THE PRODUCT

1. Built-in Type-C cable supports 60W input and 100W output fast charging.

2. Type-C port enables bidirectional fast charging at up to 65W input and 100W output.

3. The USB-A port supports a maximum output power of 22.5W.

4. TFT color display shows charging power, speed, temperature, battery level, and cycle count.

5. 20000mAh Large capacity, small size, easy to carry.

CHARGING INSTRUCTIONS

To Recharge:

Connect one end of the product's built-in Type-C2 interface to the power adapter (such as a USB wall adapter, laptop or personal computer) to charge the portable power device.
Connect one end of the USB-C charging cable to the Type-C1 port of the portable power device, and the other end to the power adapter (such as a USB wall adapter, laptop or personal computer) to charge the portable power device.

Charging Your Devices:

Type-C1/C2 Output Charging:
- Plug the Type-C2 into the power adapter to charge the Power Bank device.
- Ensure a secure connection before use.
- Disconnect after your device is fully charged.

USB-A Output Charging:
- Use the USB-A port on the Power Bank to connect to your device.
- Securely connect the charging cable and commence charging.

NO RESPONSE WITH THE DEVICE BEING CHARGED

- Too low power with this product, please recharge for this product.
- The voltage of being charged device is not compatible with this product. Please check the voltage of your device.
- This product is wrong connected with the device being charged.
- Charging cable and connectors are damaged. Please change them.
- This product is breakdown with internal circuit. Please contact after-sale service of the local agent.
- Using charging line to connect the output port to input port by mistake will cause short-circuit protection. You should disconnect it. The product is connected to the AC charger or computer USB to be charged, to solve short circuit protection.

UTILIZE THE POWER BANK RESPONSIBLY

- Disconnect the Power Bank when it's not in active use.
- Avoid using the Power Bank during activities that demand your undivided attention.
- Protect the Power Bank from water, fire, extreme heat, or humid environments.
- Refrain from taking apart the Power Bank.
- Store the Power Bank out of children's reach.
- Use the Power Bank within the temperature range of 0°~ 45°C.
- Avoid covering the Power Bank, such as placing it under pillows or blankets.
- Do not charge or use the Power Bank inside its carrying bag.

MAINTENANCE AND CLEANING GUIDE

- Preparation: Tum off and unplug your Power Bank before any cleaning activity.
- Cleaning Process: Gently clean the Power Bank with a soft, barely moist cloth.
- Avoid using harsh chemicals or abrasive materials to clean the Power Bank to prevent surface damage.
- Keep the Power Bank away from prolonged direct sunlight or high heat exposure.
- Never store the Power Bank in environments with temperatures exceeding 140°F (60°C).
- For extended non-use, charge the battery to 50% and store in a cool, dry place.

ENVIRONMENTALLY FRIENDLY DISPOSAL

- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- Never dispose of used electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics, If there are no local regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

SRB


UPUTSTVO

NEXUS 20PD 100W 38.235

Preporučuje se da pažljivo pročitate ovaj korisnički priručnik i sačuvate ga za buduću upotrebu.

DIJAGRAM PROIZVODA

1. Dugme za uključivanje
2. Type-C1 ulaz 65W / izlaz 100W
3. Type-C2 ulaz 60W / izlaz 100W
4. USB-A izlaz 22,5W
5. Digitalni displej

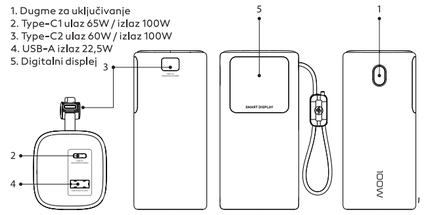


SPECIFIKACIJE

Kapacitet: 20.000 mAh/74Wh
Ulaz Type-C1: 5V – 3A, 9V – 3A, 12V – 3A, 15V – 3A, 20V – 3.25A (65W Max)
Ulaz Type-C2: 5V – 3A, 9V – 3A, 12V – 3A, 15V – 3A, 20V – 3A (60W Max)
Izlaz Type-C1/C2: 5V – 3A, 9V – 3A, 12V –3A, 15V – 3A, 20V – 5A (100W Max)
Izlaz USB-A: 5V – 3A, 9V – 2A, 10V – 2.25A, 12V – 1.5A (22.5W Max)
Izlaz Type-C1+C2+A: 5V– 3A (15W Max)
Dimenzije: 106.7 x 52.9 x 49mm
Neto težina: 391±10g

UKLJUČENI PRIBOR
1 x Power Bank
1 x Uputstvo

DIGITALNI EKRAN

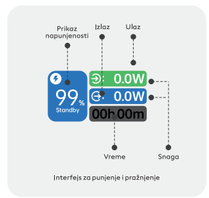

Interfejs za punjenje i pražnjenje






Interfejs parametara



Interfejs za podešavanje vremena osvetljenja ekrana

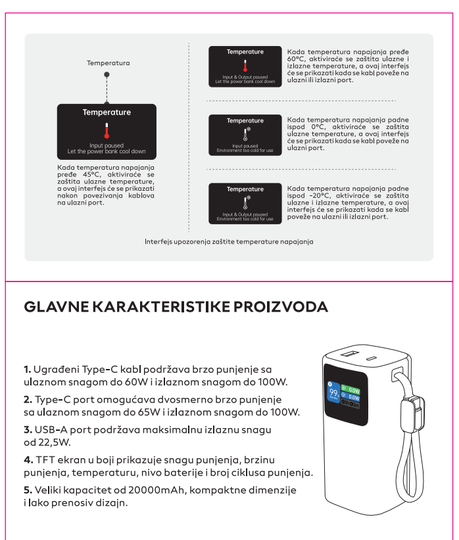

Interfejs upozorenja zaštite temperature napajanja

GLAVNE KARAKTERISTIKE PROIZVODA

1. Ugrađeni Type-C kabl podržava brzo punjenje sa ulaznom snagom do 60W i izlaznom snagom do 100W.

2. Type-C port omogućava dvosmerno brzo punjenje sa ulaznom snagom do 65W i izlaznom snagom do 100W.

3. USB-A port podržava maksimalnu izlaznu snagu od 22,5W.

4. TFT ekran u boji prikazuje snagu punjenja, brzinu punjenja, temperaturu, nivo baterije i broj ciklusa punjenja.

5. Veliki kapacitet od 20000mAh, kompaktne dimenzije i lako prenosiv dizajn.

UPUTSTVO ZA PUNJENJE

Za ponovno punjenje:

Ubacite USB-C kraj priloženog kabla za punjenje u port za punjenje power bank uređaja.
Povežite drugi kraj sa izvorom napajanja, kao što su USB zidni adapter, laptop ili računar.

Punjenje vaših uređaja:

Punjenje preko USB-C izlaza:
Povežite USB-C konektor sa jednim od USB-C izlaza na Power Bank uređaju.
Povežite drugi kraj kabla za punjenje sa portom za punjenje vašeg uređaja.
Pre upotrebe proverite da li je veza sigurno uspostavljena.
Isključite uređaj nakon što se potpuno napuni.

Punjenje preko USB-A izlaza:
Koristite USB-A port na Power Bank uređaju za povezivanje sa vašim uređajem.
Sigurno povežite kabl za punjenje i započnite punjenje.

NEMA ODGOVORA PRI PUNJENJU UREĐAJA

- Preniska snaga ovog proizvoda, molimo napunite ovaj proizvod.
- Napon uređaja koji se puni nije kompatibilan sa ovim proizvodom. Molimo proverite napon vašeg uređaja.
- Ovaj proizvod je pogrešno povezan sa uređajem koji se puni.
- Kabl za punjenje i konektori su oštećeni. Molimo zamenite ih.
- Došlo je do kvara unutrašnjeg kola proizvoda. Molimo kontaktirajte postprodajnu službu lokalnog distributera.
- Ako se greškom koristi kabl za punjenje tako da se izlazni port poveže sa ulaznim portom, aktiviraće se zaštita od kratkog spoja. U tom slučaju treba ga isključiti. Zatim povežite proizvod na AC punjač ili USB port računara radi punjenja kako bi se resetovala zaštita od kratkog spoja.

KORISTITE POWER BANK ODGOVORNO

- Isključite power bank kada se ne koristi.
- Izbegavajte korišćenje tokom aktivnosti koje zahtevaju punu pažnju.
- Zaštitite power bank od vode, vatre, ekstremne toplote i vlage.
- Ne rastavljajte power bank.
- Držite ga van domašaja dece.
- Koristite ga na temperaturi od 0°~ 45°C.
- Ne prekrivajte power bank (npr. jastucima ili ćebetom).
- Ne punite i ne koristite ga dok je u zaštitnoj futroli.

UPUTSTVO ZA ODRŽAVANJE I ČIŠĆENJE

- Priprema: Isključite i odspojite power bank pre čišćenja.
- Čišćenje: Pažljivo ga obrišite mekom, blago vlažnom krpom.
- Ne koristite jake hemikalije niti abrazivne materijale kako biste izbegli oštećenje površine.
- Držite ga dalje od dužeg izlaganja direktnoj sunčevoj svetlosti i visokoj temperaturi.
- Nikada ne čuvajte power bank na temperaturi iznad 60°C.
- Ako se duže ne koristi, napunite ga na oko 50% i čuvajte na hladnom i suvom mestu.

EKOLOŠKI PRIHVATLJIVO ODLAGANJE

- Ne odlažite električne uređaje kao nesortirani komunalni otpad, već koristite posebne sisteme za prikupljanje. Informišite se kod lokalnih nadležnih organa o dostupnim sistemima sakupljanja.
Ako se električni uređaji odlažu na deponije, opasne supstance mogu dospeti u podzemne vode i lanac ishrane, što može štetiti zdravlju.
- Nikada ne odlažite korišćenu elektroniku zajedno sa običnim čvrstim otpadom, jer sadrži toksične supstance.
- Uvek odlažite korišćenu elektroniku u skladu sa važećim lokalnim propisima. Ako ne postoje lokalni propisi, odložite uređaj u odgovarajući kontejner za elektronski otpad.